

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TizzyToy](#) /

› [TizzyToy MT13A Drone User Manual](#)

## TizzyToy MT13A

# TizzyToy MT13A Drone User Manual

Model: MT13A

## 1. INTRODUCTION

The TizzyToy MT13A Drone is a lightweight, foldable quadcopter designed for ease of use, making it suitable for beginners, adults, and kids. Weighing less than 249g, it does not require FAA registration. Equipped with dual 1080P FHD cameras, it captures clear aerial photos and videos, streaming live to your smartphone via WiFi FPV. Key features include Headless Mode for intuitive control, Altitude Hold for stable flight, and a combined flight time of up to 26 minutes with two included batteries. Its compact design ensures portability for various outdoor activities.

## 2. WHAT'S IN THE Box

Your TizzyToy MT13A Drone package includes the following components:

- Drone
- Remote Control
- Phone Holder
- Carrying Case
- Battery (x2)
- Spare Propeller (x4)
- Type C Cable (x2)
- Screws & Screwdriver
- User Manual



Figure 1: All components included in the TizzyToy MT13A Drone package.

### 3. SETUP

#### 3.1 Battery Installation & Charging

The drone operates with a modular battery that slides directly into the drone's body. The remote control requires 1 AAAA battery (included). Two rechargeable drone batteries are provided, offering extended flight time.

1. Insert the fully charged drone battery into the designated slot on the drone until it clicks securely.
2. Insert 1 AAAA battery into the remote control's battery compartment.
3. To charge the drone batteries, connect the provided USB-C cable to the battery and a compatible USB power adapter. The smart auto power-off feature protects the battery from overcharging.



Figure 2: Drone battery insertion for extended flight.

Figure 3: Drone batteries charging via USB-C cables.

#### 3.2 Propeller Guard Installation

Attach the propeller guards to the drone's arms to protect the propellers during flight, especially for beginners.



Figure 4: Propeller guards attached to the drone for added protection.

### 3.3 App Connection

Download the 'MT Drone' app on your smartphone. Power on the drone and remote control, then connect your smartphone to the drone's WiFi network. The app interface will display the live camera feed and flight controls.

Your browser does not support the video tag.

Video 1: Demonstrates the drone's app interface and live camera feed during flight.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off & Calibration

1. Place the drone on a horizontal surface. Turn on the drone power switch, and the lights will flash. The drone is now in standby mode.
2. Turn on the power switch of the remote control and wait for automatic frequency synchronization. After the remote control emits a beep sound, it indicates successful frequency synchronization. At this time, the aircraft lights will remain on.
3. To calibrate, move the left and right control sticks of the remote control simultaneously to the lower left and lower right corners. The drone lights will flash and then remain solid, indicating horizontal calibration is completed.
4. To power off, push the left control stick of the remote controller to the lowest position for 2-3 seconds, and then the drone will shut down.

### 4.2 Takeoff & Landing

The TizzyToy MT13A features one-key takeoff and landing for simplified operation.

- **One-Key Takeoff:** Press the one-key takeoff button on the remote control or in the app to automatically launch the drone into a stable hover.
- **One-Key Landing:** Press the one-key landing button on the remote control or in the app to automatically descend and land the drone gently.



Figure 5: Easy one-button takeoff and landing for beginners.

#### 4.3 Flight Modes & Features

- **Headless Mode:** This mode aligns the drone's controls with your orientation, making it easier to fly without worrying about the drone's front or back direction.



Figure 6: Headless Mode simplifies flight control.

- **Altitude Hold:** The drone maintains a stable altitude, allowing for steady hovering and easier control, especially for capturing photos and videos.
- **3-Speed Modes:** Adjust the flight speed (Low, Medium, High) to match your skill level or desired flight experience.

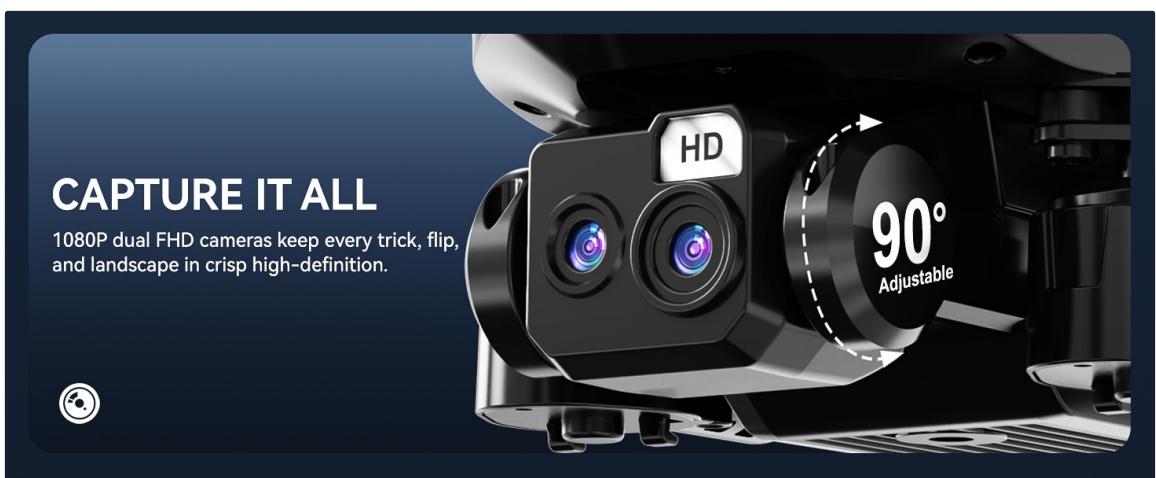


Figure 7: Adjustable 3-speed modes for various skill levels.

- **360° Flip:** Perform exciting aerial stunts with a simple button press.



Figure 8: Perform 360° flips for thrilling aerial tricks.

#### 4.4 Camera Operation

The drone is equipped with dual 1080P FHD cameras with 90° adjustable shock-absorbing lenses for capturing high-quality photos and videos. The WiFi FPV feature allows real-time viewing on your smartphone.



Figure 9: Dual 1080P FHD cameras with 90° adjustable lens.

### 5. MAINTENANCE

- Propeller Replacement:** Use the provided screwdriver and spare propellers to replace any damaged blades. Ensure correct orientation of new propellers.
- Battery Care:** The drone features smart auto power-off after full charge to protect battery life and prevent overcharging. Always ensure batteries are fully charged before each flight.
- Cleaning:** Regularly clean the drone body and propellers to ensure optimal performance.

### 6. TROUBLESHOOTING

- Drone not responding:** Ensure the drone and remote control are powered on and properly synchronized. Check battery levels.
- Unstable flight:** Perform horizontal calibration as described in the setup section. Check for damaged propellers and replace if necessary.
- No live camera feed:** Ensure your smartphone is correctly connected to the drone's WiFi network. Check app settings.

- **Short flight time:** Ensure batteries are fully charged. Replace old batteries if performance degrades significantly.

## 7. SPECIFICATIONS

Feature	Detail
Brand	TizzyToy
Model Name	MT13A
Special Feature	Dual 1080P FHD Cameras, WiFi FPV, Extended Flight Time, Auto Power-Off, Foldable Design
Video Capture Resolution	1080p
Effective Still Resolution	2 MP
Connectivity Technology	Wi-Fi
Included Components	Battery, Carrying Case, Phone Holder, Remote Control
Control Type	Remote Control
Item Weight	1.01 pounds
Product Dimensions	1 x 1 x 1 inches
Batteries	1 AAAA batteries required (included)

## 8. WARRANTY & SUPPORT

For warranty information, technical support, or any inquiries regarding your TizzyToy MT13A Drone, please contact the manufacturer directly. Refer to the packaging or the official TizzyToy website for contact details.

Documents - TizzyToy – MT13A

no relevant documents