

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Candy](#) /
- › [Candy Fresco 300 CNCQ2T618CX Combi Refrigerator Instruction Manual](#)

Candy CNCQ2T618CX

Candy Fresco 300 CNCQ2T618CX Combi Refrigerator Instruction Manual

Model: CNCQ2T618CX

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Candy Fresco 300 CNCQ2T618CX Combi Refrigerator. Please read these instructions carefully before installation and use, and keep them for future reference.

Alimentos frescos, por más tiempo



Figure 1: The Candy Fresco 300 CNCQ2T618CX Combi Refrigerator.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This appliance is intended for household use only.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or performing maintenance.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your refrigerator.

Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

Placement

This is a freestanding appliance. Choose a location with adequate ventilation and away from direct sunlight or heat sources. Ensure there is sufficient space around the refrigerator for proper air circulation and door opening.

- **Dimensions:** Height: 185 cm, Width: 59.5 cm, Depth: 66.7 cm.
- Allow for a 90-degree door opening to fully access compartments.



Figure 2: Refrigerator Dimensions. Consult the technical drawing for more information.



Figure 3: 90-degree door opening for perfect kitchen integration.

Door Reversibility

The doors of this refrigerator are reversible, allowing you to change the opening direction to suit your kitchen layout. Refer to the detailed instructions in the separate installation guide for door reversal procedures. This process typically requires specific tools and careful handling.

Electrical Connection

Before plugging in the appliance, ensure the voltage and frequency indicated on the rating plate match your household power supply. Connect the refrigerator to a properly grounded electrical outlet. Do not use extension cords or multiple socket adapters.

Initial Cleaning

Before first use, clean the interior and all internal accessories with lukewarm water and a mild detergent. Dry thoroughly. This removes any dust or residues from manufacturing.

First Use

After cleaning, plug in the appliance and allow it to operate for at least 4 hours before placing any food inside. This allows the internal temperature to stabilize.

OPERATING INSTRUCTIONS

Your Candy Fresco 300 CNCQ2T618CX refrigerator is designed for optimal food preservation.

Temperature Control

The refrigerator features electronic temperature control. The control panel is located inside the refrigerator compartment. To adjust the temperature, locate the temperature icon button and press it to cycle through the available settings. The display will show the current temperature setting. Allow several hours for the temperature to stabilize after making adjustments.



Figure 4: Electronic temperature control panel.

Total No Frost Circle+ Technology

This system ensures homogeneous cold air distribution throughout both the refrigerator and freezer compartments. This prevents frost buildup, eliminating the need for manual defrosting and keeping food fresh for longer periods.



Figure 5: Total No Frost Circle+ airflow system.

Fresh 0°C Area

A dedicated drawer is provided for optimal storage of sensitive foods like meat and fish. This compartment maintains a temperature close to 0°C, extending their shelf life and preventing cross-contamination with other foods.

Storage Capacity and Organization

The refrigerator offers a total capacity of 355 liters (235L refrigerator, 120L freezer). It includes:

- 3 + 1 glass shelves with silver profiles in the refrigerator.
- 2 + 2 door balconies for bottles and smaller items.
- 1 Fresh 0°C Area drawer.
- 3 freezer drawers.







Figure 6: Interior organization and capacity.



Figure 7: Extra storage space in a standard size.

LED Lighting

The interior of the refrigerator is illuminated with energy-efficient LED lighting, providing clear visibility of your stored items.

Door Open Alarm

If the refrigerator door is left open for more than one minute, an audible alarm will sound to alert you, helping to maintain

internal temperatures and save energy.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

Cleaning the Interior

Unplug the appliance before cleaning. Clean the interior regularly with a solution of lukewarm water and a neutral detergent. Avoid abrasive cleaners or solvents. Rinse thoroughly and dry all surfaces. Remove shelves and drawers for easier cleaning.

Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent. For stainless steel finishes, use a specialized stainless steel cleaner. Do not use abrasive pads or cleaners that could scratch the surface.

Door Gaskets

Regularly check the door gaskets for cleanliness and integrity. Clean them with water and a mild detergent. Ensure they are free from food particles and remain flexible to maintain a tight seal. A damaged or dirty gasket can lead to frost buildup and reduced efficiency.

Defrosting

Thanks to the Total No Frost Circle+ technology, manual defrosting of both the refrigerator and freezer compartments is generally not required. If ice or frost does accumulate, it indicates a potential issue (e.g., door not sealing properly, frequent door opening) that should be addressed.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator is not cooling or cooling insufficiently.	Appliance unplugged or power outage. Temperature setting is too high. Door is not closed properly or opened too frequently. Excessive food load. Poor ventilation around the appliance.	Check power supply. Adjust temperature to a lower setting. Ensure door is fully closed and check door gaskets. Reduce food load if possible. Ensure adequate space for air circulation.
Frost or ice buildup in the freezer/refrigerator.	Door gasket is damaged or dirty. Door is not closed properly. High humidity in the room.	Clean or replace door gasket if necessary. Ensure door is fully closed. Avoid opening the door unnecessarily.

Problem	Possible Cause	Solution
Unusual noises.	Appliance not level. Objects touching the back or sides of the appliance. Normal operating sounds (e.g., refrigerant flow, compressor).	Adjust leveling feet. Move appliance away from walls or cabinets. These sounds are normal.
Door open alarm sounds frequently.	Door not fully closed. Obstruction preventing door from closing.	Ensure door is completely shut. Remove any items blocking the door.

TECHNICAL SPECIFICATIONS

Detailed specifications for the Candy Fresco 300 CNCQ2T618CX Combi Refrigerator:

Model Number	CNCQ2T618CX
Brand	Candy
Total Capacity	355 Liters
Refrigerator Capacity	235 Liters
Freezer Capacity	120 Liters
Dimensions (H x W x D)	185 cm x 59.5 cm x 66.7 cm
Weight	68 kg
Defrost System	Total No Frost Circle+
Energy Efficiency Class	C
Annual Energy Consumption	172 kWh/annum
Noise Level	35 dB
Voltage	230 Volts
Number of Doors	2
Special Features	Fresh 0°C Area, Electronic Temperature Control, LED Lighting, Reversible Doors
Color	Inox
Country of Origin	China



Candy

CNCQ2T618CX



172 kWh/annum



120 L



235 L



ABCD

2019/2016

Figure 8: Energy Efficiency Label.

For more detailed product information, refer to the EPREL database: <https://eprel.ec.europa.eu/qr/2294521>

WHAT'S IN THE BOX

Upon unpacking, you should find the following items:

- Candy Fresco 300 Combi Refrigerator
- 3 + 1 Glass shelves with silver profiles
- 2 + 2 Door balconies
- 1 Fresh 0°C Area drawer
- 3 Freezer drawers
- Instruction Manual (this document)

WARRANTY AND CUSTOMER SUPPORT

Your Candy Fresco 300 CNCQ2T618CX refrigerator comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical assistance, spare parts, or any questions regarding your appliance, please contact Candy customer service. Have your model number (CNCQ2T618CX) and serial number ready when you call.

Customer Service: Refer to the contact information provided in your warranty documentation or visit the official Candy website for your region.