

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Candy](#) /

› [Candy Fresco 300 CNCQ2T618CW Refrigerator Instruction Manual](#)

Candy CNCQ2T618CW

Candy Fresco 300 CNCQ2T618CW Refrigerator Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Candy Fresco 300 CNCQ2T618CW Combi Refrigerator. Please read these instructions carefully before installation, operation, or maintenance. Keep this manual for future reference.



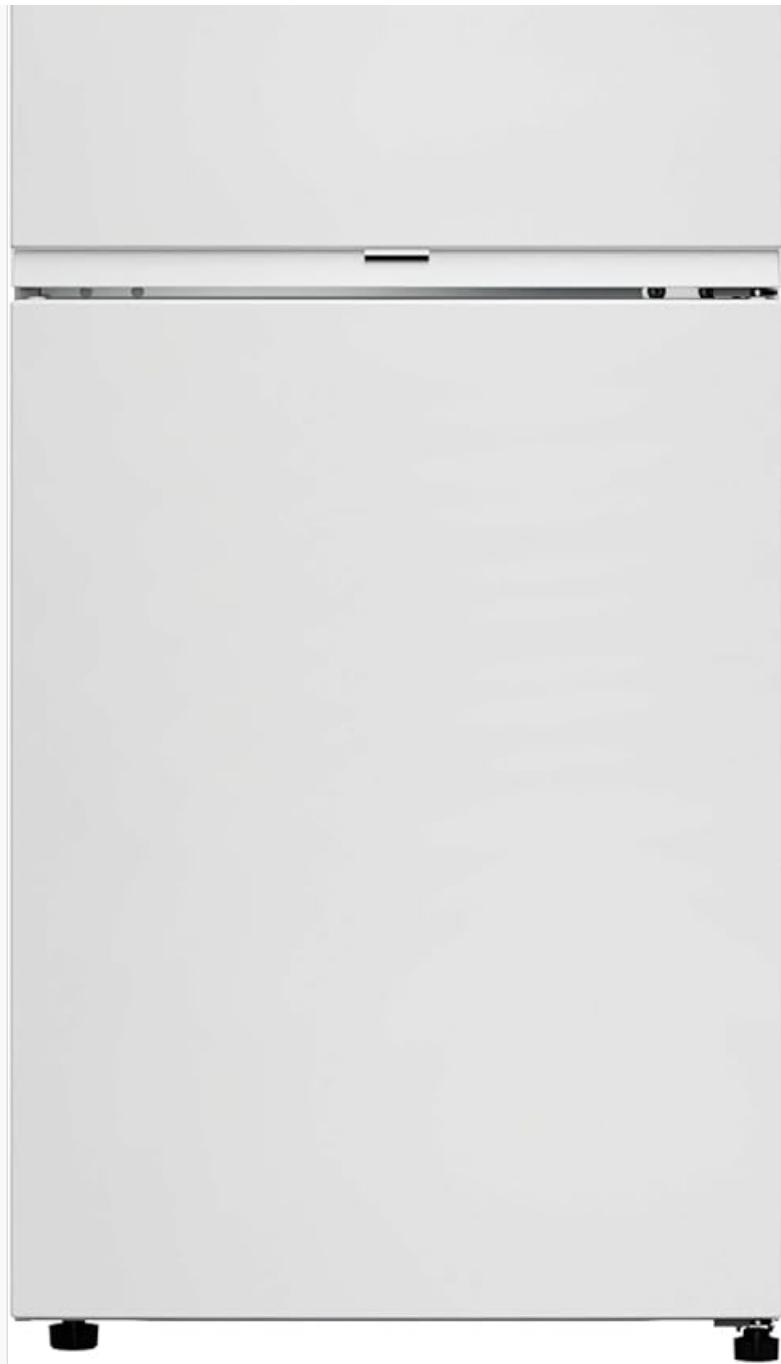


Image 1.1: Front view of the Candy Fresco 300 CNCQ2T618CW refrigerator.

Key Features:

- **Total Capacity:** 355 Liters, providing ample storage.
- **Total No Frost Circle+ Technology:** Ensures homogeneous cold air distribution, preventing frost buildup.
- **Fresh 0°C Area:** A dedicated compartment for optimal preservation of meat and fish.
- **Electronic Temperature Control:** For precise temperature management.
- **Reversible Doors:** Allows for flexible installation to suit your kitchen layout.
- **LED Interior Lighting:** Provides clear visibility of contents.

2. SETUP AND INSTALLATION

2.1 Unpacking

- Carefully remove all packaging materials, including foam and adhesive tape.

- Inspect the appliance for any damage. If damage is found, do not proceed with installation and contact your retailer.
- Keep packaging materials out of reach of children.

2.2 Placement

- Place the refrigerator on a firm, level surface. Adjust the leveling feet to ensure stability.
- Ensure adequate ventilation around the appliance. Maintain a minimum distance of 10 cm from walls and other furniture to allow for proper heat dissipation.
- Avoid placing the refrigerator near heat sources (e.g., ovens, radiators) or in direct sunlight.
- The dimensions of the product are approximately 185 cm (height) x 59.5 cm (width) x 66.7 cm (depth).



Consulta el dibujo técnico para más información

Image 2.1: Refrigerator dimensions (Height: 185 cm, Width: 59.5 cm, Depth: 66.7 cm).

2.3 Electrical Connection

- Ensure the voltage and frequency of your power supply match the ratings on the appliance's rating plate (230

Volts).

- Connect the appliance to a properly grounded electrical outlet. Do not use extension cords or multiple adapters.
- Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow refrigerating fluids to settle.

2.4 Door Reversal

The doors of your Candy Fresco 300 refrigerator are reversible, allowing them to open from either the left or right side. Refer to the detailed instructions in the full user manual for the door reversal procedure. This feature ensures the appliance can fit perfectly into various kitchen layouts.



Image 2.2: The refrigerator is designed for a 90-degree door opening, facilitating placement in tight spaces.

3. OPERATING INSTRUCTIONS

3.1 Control Panel

Your refrigerator is equipped with an electronic control panel, typically located inside the refrigerator compartment,

allowing you to adjust temperature settings and activate special functions.

3.2 Temperature Settings

- To adjust the temperature, press the temperature control button on the panel. Each press cycles through available temperature settings.
- A colder setting is recommended for faster cooling or when the ambient temperature is high.
- The recommended temperature for the refrigerator compartment is typically +4°C, and for the freezer compartment, -18°C.

3.3 Fresh 0°C Area

The Fresh 0°C Area is a specialized drawer designed to maintain a temperature close to 0°C. This environment is ideal for storing fresh meat, fish, and delicate produce, extending their shelf life and preventing cross-contamination with other foods.

3.4 Total No Frost Circle+ Technology

The Total No Frost Circle+ system ensures that cold air is distributed evenly throughout both the refrigerator and freezer compartments. This technology prevents ice and frost buildup, eliminating the need for manual defrosting and maintaining optimal conditions for food preservation.





Image 3.1: Interior layout of the refrigerator, showcasing shelves, the Fresh 0°C Area, and freezer drawers.



**Reduce el desperdicio de alimentos
gracias a un flujo de aire lateral suave
y uniforme por todo el frigorífico.**

*Aviso legal: Las imágenes tienen únicamente fines ilustrativos y deben considerarse como una representación genérica del producto. El producto final puede diferir en algunos detalles.

Image 3.2: Visual representation of the Circle Fresh technology, illustrating uniform air distribution for extended food freshness.

4. MAINTENANCE

4.1 Cleaning

- **Interior Cleaning:** Unplug the appliance before cleaning. Use a soft cloth and a mild, non-abrasive detergent with lukewarm water. Avoid harsh chemicals or abrasive cleaners. Dry thoroughly.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild detergent.
- **Door Seals:** Regularly clean the door seals to ensure a tight seal and efficient operation.

4.2 Defrosting

Thanks to the Total No Frost Circle+ technology, your Candy Fresco 300 refrigerator does not require manual defrosting. Any frost that forms is automatically removed by the system.

4.3 Power Outages

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily. The appliance is designed to keep food frozen for a certain period without power.

5. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	Power cord unplugged; power outage; temperature setting too high.	Check power connection; verify power supply; adjust temperature setting.
Excessive noise	Appliance not level; objects vibrating against the unit; normal operating sounds.	Adjust leveling feet; ensure nothing is touching the refrigerator; some sounds (e.g., refrigerant flow) are normal.
Water on floor or inside	Drain hole blocked; door not closed properly.	Clear the drain hole; ensure doors are fully closed and seals are clean.
Doors not closing properly	Food packages obstructing closure; door seals dirty or damaged; appliance not level.	Rearrange contents; clean or inspect door seals; adjust leveling feet.

6. SPECIFICATIONS

Detailed technical specifications for the Candy Fresco 300 CNCQ2T618CW refrigerator:

Feature	Detail
Brand	Candy
Model Number	CNCQ2T618CW
Manufacturer's Product Number	34006029
Total Capacity	355 Liters
Refrigerator Capacity	235 Liters
Freezer Capacity	120 Liters
Dimensions (H x W x D)	185 cm x 59.5 cm x 66.7 cm
Weight	68 kg
Energy Efficiency Class	C
Annual Energy Consumption	172 kWh/annum
Noise Level	35 dB


Feature	Detail
Defrost System	No Frost
Number of Doors	2
Voltage	230 Volts
Country of Origin	China



ENERG⁺

**Candy**

CNCQ2T618CW

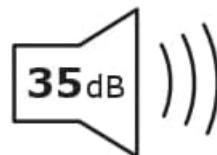**C****172 kWh/annum****120 L****235 L****A B C D**

2019/2016

Image 6.1: EU Energy Label for the Candy Fresco 300 CNCQ2T618CW. For more details, scan the QR code or visit eprel.ec.europa.eu/qr/2294520.

7. WARRANTY AND SUPPORT

Your Candy Fresco 300 CNCQ2T618CW refrigerator is covered by a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the duration and coverage

details.

For technical assistance, spare parts, or any inquiries regarding your appliance, please contact Candy's specialized customer service. You can find contact information and additional resources on the official Candy website:

- **Official Website:** [Visit the Candy Store on Amazon](#) (for general product information and support links).
- **Customer Service:** Refer to the contact details provided in your product documentation or on the official Candy website for your region.

© 2025 Candy. All rights reserved. Information in this manual is subject to change without notice.