

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mr. Christmas](#) /

› [Mr. Christmas 10 ft. Outdoor Animated Rope Ladder Climbing Santa Instruction Manual Model 13322](#)

Mr. Christmas 13322

Mr. Christmas 10 ft. Outdoor Animated Rope Ladder Climbing Santa Instruction Manual

Model: 13322

INTRODUCTION

Thank you for choosing the Mr. Christmas 10 ft. Outdoor Animated Rope Ladder Climbing Santa. This product is designed to add festive animation and illumination to your holiday decor. Please read this manual thoroughly before setup and operation to ensure safe and proper use.

IMPORTANT SAFETY INFORMATION

- **Read all instructions:** Before assembly and use, carefully read and understand all instructions.
- **Outdoor Use:** This product is designed for outdoor use. Ensure all electrical connections are protected from weather.
- **Power Source:** Use only the adapter provided with the product. Do not connect to a different power source.
- **Placement:** Ensure the ladder is securely mounted and Santa has clear path for climbing. Avoid placing near heat sources or flammable materials.
- **Supervision:** Keep children and pets away from the animated display during operation.
- **Unplug when not in use:** Always unplug the unit from the power outlet before cleaning, servicing, or when leaving unattended for extended periods.

PACKAGE CONTENTS

Verify that all components are present:

- Animated Santa figure
- 10 ft. Rope Ladder with integrated lights
- Power Adapter
- Mounting Hook (pre-attached to ladder top)



Image: All components included in the package, showing the Santa figure, the coiled rope ladder, the power adapter, and a green bag.

SETUP INSTRUCTIONS

1. Unpacking and Preparation

1. Carefully remove all contents from the packaging.
2. Inspect all parts for any damage. Do not use if damaged.
3. Uncoil the rope ladder and gently straighten it.

2. Mounting the Ladder

1. Select a suitable outdoor location for installation. Ensure the surface is sturdy enough to support the ladder and Santa figure.
2. Hang the top of the rope ladder using the pre-attached hook. Common mounting points include eaves, porch

railings, or sturdy outdoor fixtures. Ensure the ladder hangs straight and is not obstructed.

3. The ladder should extend fully to its 10-foot length.



Image: The animated Santa display installed on a porch column, demonstrating proper vertical hanging.

3. Attaching the Santa Figure

1. The Santa figure is designed to climb the ladder. Ensure it is positioned correctly on the ladder rungs.
2. Verify that Santa's hands and feet are securely gripping the ladder rungs to allow for smooth climbing motion.

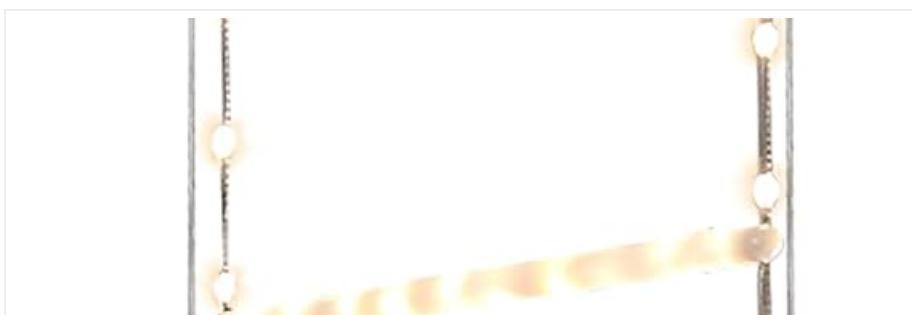




Image: Detailed view of the Santa figure, highlighting its illuminated face and how it grips the ladder.

4. Power Connection

1. Connect the power adapter to the rope ladder's power input.
2. Plug the adapter into a suitable outdoor-rated electrical outlet. Ensure the outlet is protected from moisture.
3. Route the power cord safely to avoid tripping hazards and damage.

OPERATING INSTRUCTIONS

Power On/Off

Once plugged in, the unit will automatically power on. Santa will begin climbing, the lights will illuminate, and music will play.

Animated Climbing Motion

The Santa figure will continuously climb up and down the 10-foot rope ladder, creating a dynamic display.

Illumination

The rope ladder and Santa's face are illuminated with bright lights, enhancing visibility, especially in low-light conditions.

Musical Feature

The unit plays a selection of festive holiday tunes. The volume can be adjusted using the control located on the unit (refer to diagram in troubleshooting if needed).

Automatic Timer

The Mr. Christmas Climbing Santa features a built-in 6-hour on / 18-hour off timer. Once activated, the unit will operate for 6 hours, then turn off for 18 hours, and repeat the cycle daily. To activate the timer, simply plug in the unit at the desired time you wish it to turn on. The timer will then automatically begin its cycle.

Your browser does not support the video tag.

Video: Demonstration of the Mr. Christmas 10-ft. Animated Rope Ladder Climbing Santa in operation, showcasing its climbing motion, lights, and music.

MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Wipe the Santa figure and ladder with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, unplug the unit and carefully remove it from its mounting location. Coil the rope ladder neatly and store the entire unit in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord, adapter, and all components for any signs of wear or damage. Replace damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not power on / Lights do not illuminate.	<ul style="list-style-type: none"> ◦ Power adapter not connected. ◦ Outlet not functioning. ◦ Damaged power cord or adapter. 	<ul style="list-style-type: none"> ◦ Ensure adapter is securely plugged into the unit and the outlet. ◦ Test the outlet with another device. ◦ Inspect cord and adapter for damage. Contact customer support if damaged.
Santa does not climb or movement is erratic.	<ul style="list-style-type: none"> ◦ Obstruction on the ladder. ◦ Santa not properly positioned. ◦ Motor malfunction. 	<ul style="list-style-type: none"> ◦ Clear any debris or obstructions from the ladder path. ◦ Ensure Santa's hands and feet are correctly gripping the rungs. ◦ Unplug and replug the unit. If problem persists, contact customer support.
Music is not playing or volume is too low/high.	<ul style="list-style-type: none"> ◦ Volume control setting. ◦ Speaker malfunction. 	<ul style="list-style-type: none"> ◦ Locate the volume control on the unit and adjust as desired. ◦ If no sound, ensure unit is powered. Contact customer support if problem persists.

SPECIFICATIONS

Feature	Detail
Model Number	13322
Brand	Mr. Christmas
Product Dimensions (L x W x H)	9.1 x 11.81 x 130.5 inches
Item Weight	4.5 pounds
Material	Plastic-ABS
Power Source	Adapter Operated
Timer Function	6 hours ON / 18 hours OFF
UPC	051053133221

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Mr. Christmas customer service. Refer to the product packaging or the official Mr. Christmas website for the most current contact details.

Please retain this manual for future reference.

Related Documents - 13322

	<p><u>Mr. Christmas Climbing Santa Instruction Manual</u> Detailed instructions for setting up, operating, and troubleshooting the Mr. Christmas Climbing Santa animated holiday decoration. Includes safety warnings and warranty information.</p>
	<p><u>Mr. Christmas Alexa LED 300 Icicle Lights - Instruction Manual & Setup Guide</u> Detailed instructions for the Mr. Christmas Alexa LED 300 Icicle Lights (Item # 68328). This guide covers unboxing, setup, connecting to Amazon Alexa, manual control, creating routines, troubleshooting connectivity issues, and important safety precautions for indoor use.</p>
	<p><u>Mr. Christmas Alexa Bistro Light: Smart LED String Lights Instruction Manual & Setup Guide</u> This instruction manual provides comprehensive guidance for the Mr. Christmas Alexa Bistro Light (Model No: E308678). Learn how to set up, connect to Amazon Alexa, control lighting modes via voice or manually, automate with routines, troubleshoot connectivity issues, and adhere to important safety instructions. Suitable for indoor and outdoor use, these smart LED string lights offer customizable colors, festive patterns, and adjustable brightness.</p>
	<p><u>Mr. Christmas 6.5ft RGB Alexa Christmas Tree (Item # 68323) - Instruction Manual</u> Comprehensive instruction manual for the Mr. Christmas 6.5ft RGB Alexa-enabled Christmas Tree (Item # 68323). Learn how to assemble, set up with Alexa, control lighting modes, and troubleshoot common issues.</p>
	<p><u>Mr. Christmas Alexa LED 300 Mini Lights Instruction Manual</u> Comprehensive instruction manual for the Mr. Christmas Alexa LED 300 Mini Lights (Item # 68327). Learn how to set up, connect to Alexa, control modes manually or via voice, automate with routines, troubleshoot connectivity issues, and follow important safety guidelines.</p>
	<p><u>Mr. Christmas RGB Christmas Pathway Tree Instruction Manual</u> Instruction manual for the Mr. Christmas RGB Christmas Pathway Tree (Item # 68326), detailing assembly, setup, Alexa integration, manual controls, and troubleshooting.</p>