

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [UNITSTAGE](#) /

› UNITSTAGE 3-Tier Shoe Storage Cabinet with Door Instruction Manual

UNITSTAGE B0FPVC9F1M

UNITSTAGE 3-Tier Shoe Storage Cabinet with Door

INSTRUCTION MANUAL

Introduction

Thank you for choosing the UNITSTAGE 3-Tier Shoe Storage Cabinet. This manual will guide you through the assembly, operation, and maintenance of your new shoe organizer. Please read these instructions carefully before assembly and use to ensure proper function and longevity of the product.



Image: The UNITSTAGE 3-Tier Shoe Storage Cabinet in a home setting, showcasing its capacity for shoes and boots.

Important Safety Information

Please observe the following safety guidelines:

- Always follow the assembly instructions carefully.
- Wear appropriate safety gear when handling the product.
- Be cautious of pinch points and sharp edges during assembly and use.
- Do not overload the shelves beyond their intended capacity.
- Keep small parts away from children to prevent choking hazards.

Package Contents

Before beginning assembly, ensure all parts are present and undamaged. The package should contain:

- Metal Frame Pipes (various lengths)
- Plastic Connectors
- Non-woven Fabric Shelves (3 pieces)

- Non-woven Fabric Cover with Door
- Leather Handle for Door
- Assembly Instructions



Image: Product dimensions for the 3-tier shoe cabinet.

 
Assembly Instructions

Follow these steps to assemble your shoe cabinet. It is recommended to assemble on a soft, clean surface to prevent scratches. Ensure each plastic diaphragm and connector are tightly connected together for stability.

1. **Prepare the Base:** Connect the shortest metal frame pipes to the plastic connectors to form the base frame.
2. **Build the First Tier:** Insert the longer vertical pipes into the base connectors. Slide the first non-woven fabric shelf onto these pipes, ensuring it sits securely.
3. **Add Subsequent Tiers:** Continue adding vertical pipes and fabric shelves for the remaining tiers. Ensure each layer is level and stable before proceeding.
4. **Attach Top Frame:** Complete the top frame using the remaining metal pipes and plastic connectors.
5. **Install Fabric Cover:** Drape the non-woven fabric cover over the assembled frame. Ensure the sides and back are properly aligned.
6. **Secure Door Handle:** Attach the leather handle to the designated area on the fabric door.



Leather Handle

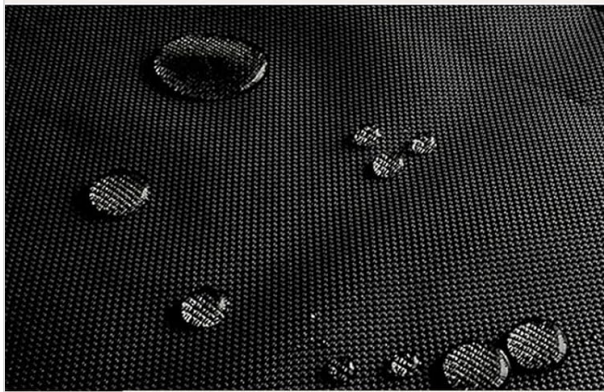

Thick Non Woven Fabric



Sturdy Frame

Image: Detailed view of the leather handle, waterproof non-woven fabric, and sturdy metal frame components.

Operating Instructions

Your UNITSTAGE shoe cabinet is designed for convenient and organized shoe storage.

- **Shoe Placement:** Place shoes on the fabric shelves. The 3-tier design can accommodate various types of footwear, including high-heeled shoes, high-top shoes, sports shoes, and boots.
- **Dust Protection:** The non-woven fabric door effectively prevents dust accumulation on your shoes. Simply close the door after placing or retrieving items.
- **Easy Access Door:** The door can be lifted up to 180 degrees, providing full and easy access to the contents of the cabinet.
- **Removable Shelves:** For storing taller items such as boots or boxes, the fabric shelves can be removed to create larger compartments.



180-Degree Reversible Cover

Easily organize your daily items and keep everything in order

Image: The 180-degree reversible cover allows for easy organization and access.



Removable Shelves

Suitable for tall boots and boxes



Image: Removable shelves provide flexibility for storing tall boots or boxes.

Maintenance

Proper care will extend the life of your shoe cabinet.


- **Cleaning:** To clean the cabinet, simply wipe it with a dry cloth. The non-woven fabric is waterproof, allowing for easy spot cleaning of spills.
- **Dust Removal:** Regularly wipe down the exterior and interior surfaces to prevent dust buildup.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals, as these may damage the fabric or frame.

Ours





Keep Shoe Dustproof

Others

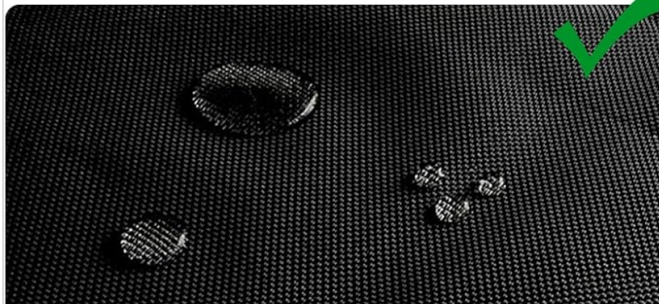

Thickened Waterproof Non-woven Fabric

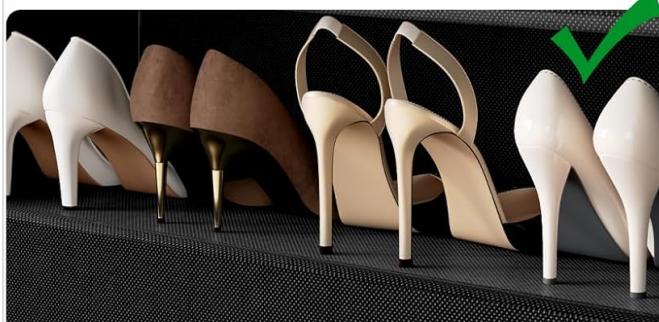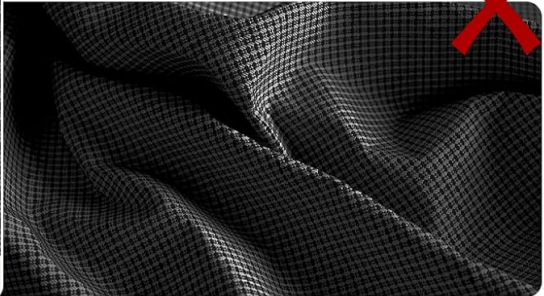

Prevent Shoe from Falling Off



Image: Features like dustproof design and thickened waterproof non-woven fabric contribute to easy maintenance.

Troubleshooting

If you encounter any issues with your shoe cabinet, refer to the following common problems and solutions:

- **Cabinet Instability:** If the cabinet feels wobbly, ensure all plastic connectors are fully inserted onto the metal frame pipes. Disassemble and reassemble any loose sections, pressing firmly until connections are secure.
- **Door Not Closing Properly:** Check that the non-woven fabric cover is correctly aligned with the frame. Ensure no items inside are obstructing the door's movement.
- **Missing Parts:** If you find any parts missing upon opening the package, please contact customer support immediately for assistance. Do not attempt to force assembly with incomplete parts.
- **Creases in Fabric:** New fabric covers may have creases from packaging. These typically relax over time or can be gently steamed out if desired.

Product Specifications

Feature	Detail
---------	--------

Brand	UNITSTAGE
Model Number	B0FPVC9F1M
Size	3-tier
Color	Black
Material	Non-woven fabric, Metal
Number of Shelves	3
Item Dimensions (L x W x H)	27.76 x 11.82 x 12.6 inches
Item Weight	2.62 pounds
Assembly Required	Yes
Product Care Instructions	Wipe with Dry Cloth

Warranty Information and Customer Support

This product is covered by a standard return policy. For specific details regarding warranty coverage, please refer to the terms and conditions provided by the retailer at the time of purchase.

For any questions, assistance with assembly, missing parts, or other support needs, please contact UNITSTAGE customer service through the retailer where the product was purchased. You may also visit the [UNITSTAGE Store](#) for additional product information and contact options.