

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cuisinart](#) /

› [Cuisinart 2-Slice XL Slot Toaster CPT-1200 Instruction Manual](#)

Cuisinart CPT-1200

Cuisinart 2-Slice XL Slot Toaster

MODEL: CPT-1200

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by Cuisinart may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, such as curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged into electrical outlet.
- To avoid possibility of fire, do not leave toaster unattended during use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Parts and Features

- **Extra-Long, Extra-Wide Slots:** Accommodates a variety of breads, including artisanal loaves and bagels.
- **High-Lift QuickView™ Lever:** Raises toasted items for easy removal and checking without interrupting the toasting cycle.
- **Shade Control Dial:** Offers 7 browning settings from light to dark.
- **Function Buttons:** Dedicated buttons for Bagel, Defrost, Single Slice, +30 Seconds, and Cancel.

- **Removable Front Crumb Tray:** Slides out from the front for convenient cleaning.
- **Cord Storage:** Integrated under the toaster base for a tidy countertop.



40% larger XL slots*
Easily fit large slices for even toasting.

*Compared to Cuisinart® toaster model CPT-122

Image: The Cuisinart 2-Slice XL Slot Toaster, showcasing its extra-long slots designed for larger bread slices. The toaster is positioned on a kitchen counter with toasted bread and berries nearby.



Simple custom controls

1-7 shade settings, plus Bagel, Defrost, Single Slice,
+30 Seconds, and Cancel options.

Image: A detailed view of the toaster's control panel, highlighting the shade selection dial (1-7) and function buttons: Bagel, Defrost, Single, +30sec, and Cancel.



High-lift QuickView™ lever

Raises items for easy checking without stopping the toasting process.

Image: A hand demonstrating the High-Lift QuickView™ lever, which raises the toast carriage to allow easy inspection of items without stopping the toasting process.



Front crumb tray

Slide-out design ensures quick access and cleaning.

Image: The front-loading crumb tray of the Cuisinart toaster, shown partially removed, illustrating its accessibility for cleaning.

2-Slice XL Toaster



Image: A diagram illustrating the dimensions of the Cuisinart 2-Slice XL Slot Toaster: 12 inches deep, 8 inches wide, and 7.3 inches high.

Setup

- Unpack:** Carefully remove the toaster from its packaging and remove all packing materials.
- Placement:** Place the toaster on a clean, dry, flat, heat-resistant surface. Ensure there is adequate space around the toaster for ventilation.
- Clean Crumb Tray:** Before first use, ensure the crumb tray is clean and properly inserted.
- Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.
- First Use (Burn-off):** It is recommended to operate the toaster for the first time without bread, on the highest shade setting (7), to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate.

Operating Instructions

Basic Toasting

- Insert Bread:** Place up to two slices of bread, bagels, or other items into the toasting slots.

2. **Select Shade:** Turn the shade control dial to your desired browning setting (1 for lightest, 7 for darkest).
3. **Lower Lever:** Press the carriage lever down until it locks into place. The toasting cycle will begin.
4. **Monitor Toasting:** Use the High-Lift QuickView™ lever to briefly raise the toast for inspection without canceling the cycle.
5. **Completion:** Once the selected shade is achieved, the toast will automatically pop up.
6. **Cancel:** To stop the toasting cycle at any time, press the **CANCEL** button.

Special Functions

- **BAGEL Function:** Press the **BAGEL** button after lowering the carriage lever. This function toasts the cut side of the bagel and warms the outer side. The indicator light will illuminate.
- **DEFROST Function:** Press the **DEFROST** button after lowering the carriage lever. This function thaws and then toasts frozen items. The indicator light will illuminate.
- **SINGLE SLICE Function:** Press the **SINGLE SLICE** button after lowering the carriage lever. This function adjusts the heating to ensure even toasting when only one slice is being toasted. The indicator light will illuminate.
- **+30 SECONDS Function:** Press the **+30 SECONDS** button after lowering the carriage lever. This adds 30 seconds to the current toasting cycle. The indicator light will illuminate.
- **CANCEL Function:** Press the **CANCEL** button at any time to stop the toasting cycle and raise the carriage.

Cleaning and Maintenance

1. **Unplug:** Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Slide out the removable front crumb tray. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
3. **Exterior:** Wipe the exterior of the toaster with a damp cloth and dry with a soft, dry cloth. Do not use abrasive cleaners or harsh chemicals.
4. **Interior:** Never insert any objects into the toasting slots to clean.
5. **Storage:** When not in use, store the toaster in a clean, dry place. Utilize the cord storage feature under the base to keep the cord tidy.



Front crumb tray

Slide-out design ensures quick access and cleaning.

Image: The front crumb tray is shown pulled out from the toaster, ready for cleaning. This design allows for easy removal and disposal of accumulated crumbs.

Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure toaster is securely plugged into a working outlet. Check household circuit breaker.
Bread is not toasting evenly.	Uneven bread thickness; crumb tray full; internal elements dirty.	Ensure bread slices are of similar thickness. Clean crumb tray. Do not insert objects into slots.
Toast is too light or too dark.	Shade setting is incorrect.	Adjust the shade control dial to a higher number for darker toast or a lower number for lighter toast.
Carriage lever does not stay down.	Toaster is not plugged in; internal mechanism issue.	Ensure the toaster is plugged into a live electrical outlet. If the issue persists, contact customer support.

Specifications

Feature	Detail
Brand	Cuisinart
Model Number	CPT-1200
Number of Slices	2
Color	Stone
Material	Plastic
Product Dimensions (DxWxH)	12"D x 8"W x 7.25"H
Wattage	1200 watts
Voltage	120 Volts
Number of Settings	7 (Shade Control)
Special Features	Extra Long Slots, High Lift Carriage, Removable Crumb Tray
Item Weight	3 Pounds

Warranty and Support

This Cuisinart product is designed to provide years of reliable service. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Cuisinart website.

- **Warranty:** The product comes with a 3-year limited warranty.
- **Customer Service:** For assistance, troubleshooting, or to inquire about replacement parts, please contact Cuisinart Customer Service. Contact information can typically be found on the Cuisinart website or in the product packaging.
- **Online Resources:** Visit the [Cuisinart Store on Amazon](#) for additional product information and support.