

VEIKK VK640

VEIKK VK640 Digital Graphic Tablet User Manual

Model: VK640

1. PRODUCT OVERVIEW

The VEIKK VK640 is a compact digital graphic tablet designed for drawing, design, online teaching, and other creative applications. It features a 6x4 inch active area, 6 customizable shortcut keys, and a battery-free stylus with 8192 pressure levels and 60-degree tilt support.



Image: Overview of VEIKK VK640 Graphic Tablet features.



Image: The compact size of the VK640 drawing tablet, ideal for beginners.

2. PACKAGE CONTENTS

Before setup, please verify that all items are present in the package:

- VEIKK VK640 Pen Tablet
- P05 Battery-Free Pen
- Pen Holder
- 28 Replacement Pen Nibs
- Pen Pocket
- OTG Adapter (USB-C)
- Nib Remover Tool
- Artist Glove
- Quick Start Guide

What's In The Box



VK640 Pen Tablet



P05 Pen



Pen Holder



Pen Nibs*28



Pen Pocket



OTG - C



Nib Remover



Artist Glove



Quick Start Guide

Image: All items included in the VK640 product box.

3. SETUP INSTRUCTIONS

3.1 Driver Installation

1. **Uninstall Previous Drivers:** If you have other tablet drivers installed, uninstall them completely before installing the VEIKK driver to avoid conflicts.
2. **Download Driver:** Visit the official VEIKK website (www.veikk.com) and download the latest driver for your operating system (Windows, macOS, or Linux).
3. **Install Driver:** Run the downloaded installer and follow the on-screen instructions.
4. **Restart Computer:** After installation, restart your computer to ensure the driver is properly loaded.

3.2 Connecting the Tablet

Connect the VK640 tablet to your computer using the provided USB cable. For mobile devices, use the included OTG adapter if necessary.



Image: Connecting the VK640 tablet to a mobile device.



Image: The VK640 tablet connected and in use with a laptop.

4. OPERATING THE TABLET

4.1 Using the Battery-Free Pen

The P05 pen is battery-free, eliminating the need for charging. It features 8192 levels of pressure sensitivity and supports 60-degree tilt function, allowing for natural and precise drawing strokes. Adjust the pressure in your software settings for desired line thickness and opacity.



Image: Features of the battery-free stylus, including pressure sensitivity and tilt function.

4.2 Customizable Shortcut Keys

The VK640 tablet is equipped with 6 customizable shortcut keys. These keys can be programmed through the VEIKK driver software to perform various functions, such as undo, redo, zoom in/out, brush size adjustment, or switching tools. Refer to the driver software interface for detailed customization options.



Image: The 6 customizable shortcut keys on the VK640 tablet.



6 Shortcut Keys

Efficiency-focused: Shortcut your way to faster, smoother creativity!

Image: Example functions for the 6 customizable press keys.

4.3 Software Compatibility

The VK640 is compatible with a wide range of creative software, including but not limited to:

- Adobe Photoshop
- Krita
- Adobe Illustrator
- SAI
- SketchBookPro
- FireAlpaca
- OpenCanvas
- Manga Studio

6 Customizable Press Keys

Customize 6 press keys with your preference.
Efficiency-focused: Shortcut your way to faster,
smoother creativity!



Image: Broad compatibility of the VK640 with different operating systems and creative applications.

Create Freely

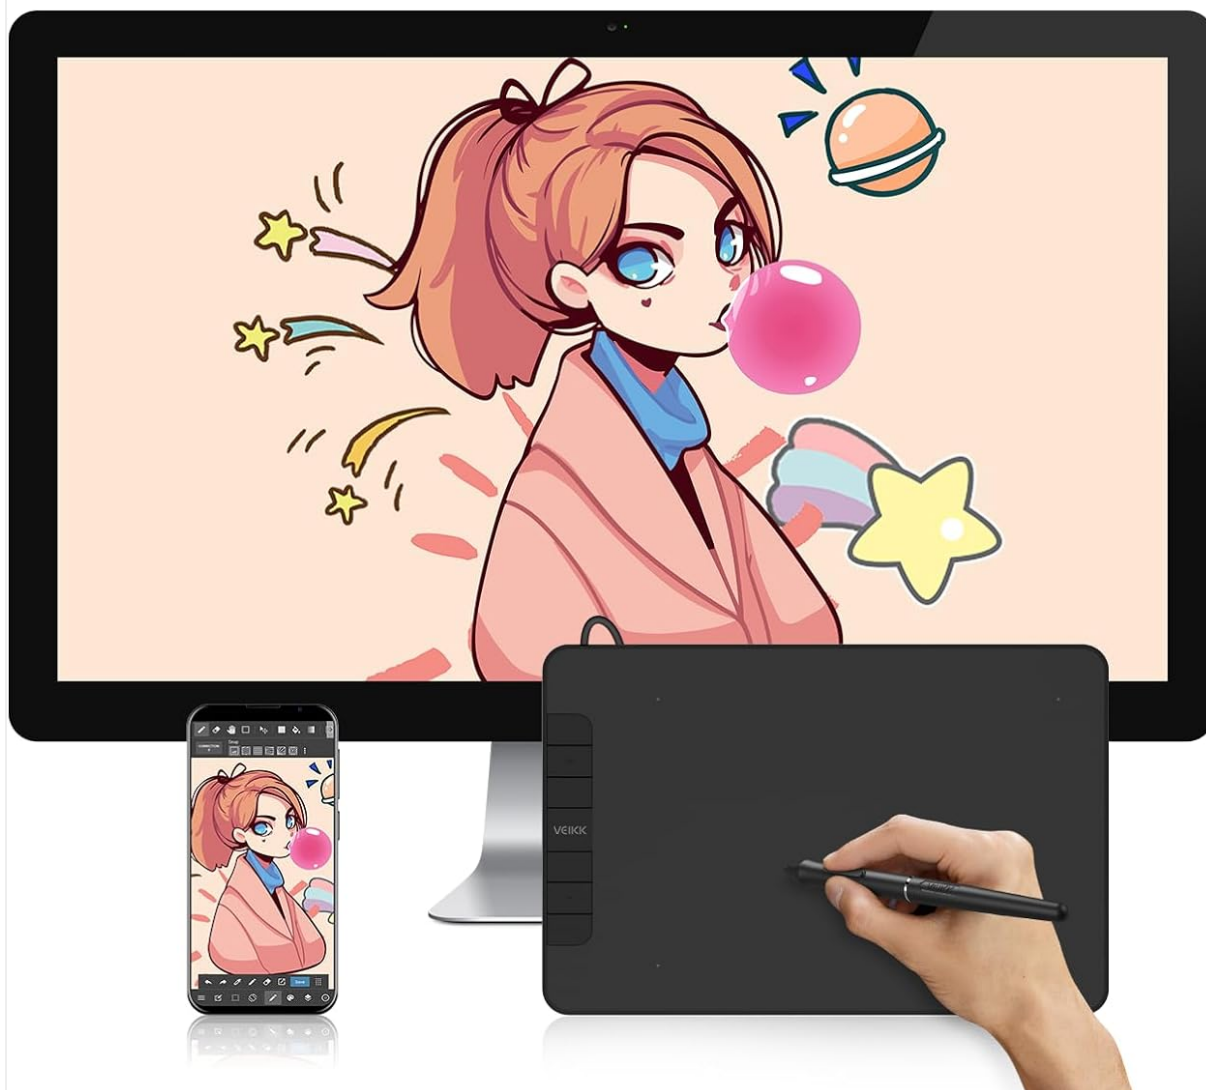


Image: Broad compatibility of the VK640 with different operating systems and creative applications.

5. MAINTENANCE

5.1 Cleaning the Tablet

To clean the tablet surface, use a soft, dry cloth. For stubborn smudges, a slightly damp cloth with a mild, non-abrasive cleaner can be used. Avoid excessive moisture and harsh chemicals.

5.2 Replacing Pen Nibs

The pen nibs will wear down with use. When a nib becomes too short or sharp, replace it using the included nib remover tool. Gently pull out the old nib and insert a new one until it is secure. The package includes 28 replacement pen nibs to ensure long-term use.

6. TROUBLESHOOTING

6.1 Pen Not Responding

- Ensure the tablet is properly connected to your computer.
- Verify that the VEIKK driver is installed correctly and running.
- Try restarting your computer.
- Check if the pen nib is securely inserted or needs replacement.
- Test the tablet on a different USB port or computer if possible.

6.2 Pressure Sensitivity Not Working

- Confirm that the VEIKK driver is installed and updated.
- Check the pressure settings within your drawing software and the VEIKK driver panel.
- Ensure no other tablet drivers are conflicting with the VEIKK driver. Uninstall any old drivers.

6.3 Shortcut Keys Not Functioning

- Open the VEIKK driver software and verify that the shortcut keys are correctly assigned.
- Ensure the driver is active and not conflicting with other software.

7. SPECIFICATIONS

Brand	VEIKK
Model Name	VK640
Connectivity Technology	USB
Active Area	6 x 4 inches (24 square inches)
Pressure Sensitivity	8192 Levels
Tilt Support	60°
Shortcut Keys	6 Customizable Keys
Operating System Compatibility	Windows 7 or later, macOS 10.12 or later, Android 6.0 or later, Linux

Item Weight	279 Grams
Thickness	Approximately 8mm (0.3 inches)

Strong Compatibility with Systems and Softwares

Image: Physical dimensions and weight of the VK640 tablet.

Working Area

Weight: 279g

Thickness: 8mm

Image: Physical dimensions and weight of the VK640 tablet.

8. WARRANTY AND SUPPORT

The VEIKK VK640 Digital Graphic Tablet comes with **one-year warranty** from the date of purchase. VEIKK also provides **lifetime technical support** for this product. For warranty claims, technical assistance, or further inquiries, please contact VEIKK customer support through their official website or the contact information provided in the Quick Start Guide.