



Manuals.plus /

› Moosum /

› Moosum Electric Rice Cooker, 5-Cup Uncooked, Model B0FPWVGDJ3 Instruction Manual

## Moosum B0FPWVGDJ3

# Moosum Electric Rice Cooker Instruction Manual

MODEL: B0FPWVGDJ3

## Introduction

---

Thank you for choosing the Moosum Electric Rice Cooker. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

## Important Safety Instructions

---

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- This appliance is for household use only.
- Do not shake vigorously.

## Product Overview and Package Contents

Your Moosum Electric Rice Cooker is designed for ease of use and versatility. It features a stainless steel inner pot and a one-touch operation system.



Image: The Moosum Electric Rice Cooker in silver, shown with its removable stainless steel inner pot.

The package includes the following items:

- Moosum Electric Rice Cooker Unit
- Stainless Steel Inner Pot
- Plastic Steamer Basket (BPA-free)
- Rice Measuring Cup (160 ml, equivalent to 2/3 U.S. cup)
- Rice Spoon

# 5 CUPS CAPACITY

Suitable for 2-4 people.



Image: A visual representation of the Moosum rice cooker and its included accessories, highlighting the 5-cup capacity.

## Setup

- Unpacking:** Carefully remove all packaging materials and inspect the rice cooker for any damage.
- Initial Cleaning:** Before first use, wash the inner pot, steamer basket, measuring cup, and rice spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.

## Operating Instructions

The Moosum Electric Rice Cooker offers simple one-touch operation for various cooking functions.

# SMALL CAPACITY

5 cups ≈ 10 bowls of rice ( 1 bowl=5.4 oz. )

| UNCOOKED RICE | VOLUME | WATER LINE | COOK TIME | YIELD   |
|---------------|--------|------------|-----------|---------|
| White Rice    | 1 cup  | Line 1     | 15 min    | 2 cups  |
|               | 3 cup  | Line 2     | 21 min    | 6 cups  |
|               | 5 cup  | Line 3     | 28 min    | 10 cups |

1 Rice Measuring Cup = 2/3 U.S Cup



Image: The rice cooker demonstrating its versatility for cooking brown rice, white rice, steaming, slow cooking, making yogurt, and sautéing.

## Cooking Rice

- Measure Rice:** Use the provided measuring cup to measure the desired amount of uncooked rice. One rice measuring cup is approximately 2/3 U.S. cup.
- Wash Rice:** Rinse the rice thoroughly under cold running water until the water runs clear. This helps remove excess starch.
- Add Rice to Inner Pot:** Place the washed rice into the stainless steel inner pot.
- Add Water:** Refer to the water line markings inside the inner pot. For white rice, use the corresponding water line for the number of cups of uncooked rice. For example, for 3 cups of uncooked white rice, fill water to Line 2. Adjust water amount based on rice type and desired consistency.
- Place Inner Pot:** Ensure the exterior of the inner pot is dry, then place it into the main rice cooker unit. Close the lid securely.
- Start Cooking:** Plug the power cord into a wall outlet. Press the 'Cook' button (usually indicated by a rice grain icon or 'Cook' text). The 'Cook' indicator light will illuminate.
- Automatic Keep Warm:** Once cooking is complete, the rice cooker will automatically switch to 'Keep Warm' mode, and the 'Warm' indicator light will illuminate. This function can keep rice warm for over 24 hours.

8. **Serve:** Open the lid carefully to avoid steam. Use the provided rice spoon to fluff and serve the rice.



Image: A detailed table providing guidance on uncooked rice volume, corresponding water lines, approximate cook times, and cooked rice yield for white rice.

### Steaming

To steam vegetables, fish, or other foods:

1. Add water to the inner pot (ensure it does not exceed the steamer basket level).
2. Place the food to be steamed into the plastic steamer basket.
3. Place the steamer basket into the inner pot.
4. Close the lid and press the 'Cook' button. Monitor the food and turn off the cooker manually once steaming is complete, or allow it to switch to 'Keep Warm' if cooking rice simultaneously.

### Other Functions (Slow Cook, Make Yogurt, Sauté)

The Moosum rice cooker can also be used for slow cooking, making yogurt, and sautéing. Specific instructions for these functions may vary based on recipes. Generally, use the 'Cook' setting for active heating and monitor your food. For slow cooking, the 'Keep Warm' function can be utilized for extended gentle heating after initial cooking.

## Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your rice cooker.



**Brown rice**      **White rice**  
**Slow cook**      **Steam**  
**Make yogurt**      **Sauté**

# ONE-TOUCH OPERATION

More possibilities + Fast setup

**Cooks 2 cups of rice only need 19 minutes**

Image: The stainless steel inner pot and steamer basket are shown inside a dishwasher, confirming they are dishwasher safe.

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot and Accessories:** The stainless steel inner pot, steamer basket, measuring cup, and rice spoon are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Removable Inner Cover:** The inner cover is removable for easy cleaning. Detach it from the lid and wash it with warm, soapy water. Rinse and dry before reattaching.
4. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the rice cooker. Store in a cool, dry place.

## Troubleshooting

If you encounter issues with your rice cooker, please refer to the following common problems and solutions:

| Problem                             | Possible Cause   | Solution  |
|-------------------------------------|--|---|
| Rice is too hard or undercooked.    | Insufficient water; lid not properly closed; power interruption. | Ensure correct water-to-rice ratio. Check lid seal. Verify power connection.  |
| Rice is too soft or mushy.          | Too much water.  | Reduce water slightly for future cooking. Ensure rice is rinsed properly.   |
| Rice sticks to the bottom or burns. | Not enough water; rice not rinsed; prolonged 'Keep Warm' cycle.  | Ensure adequate water. Rinse rice thoroughly. Avoid leaving rice on 'Keep Warm' for excessive periods if sticking occurs. |
| Cooker does not turn on.            | Not plugged in; power outage; faulty outlet.                     | Check power cord connection. Test outlet with another appliance.  |
| Steam leaks from lid.               | Lid not properly closed; gasket dirty or damaged.                | Ensure lid is securely closed. Clean or inspect the lid gasket for damage.  |

## Specifications

| Feature            | Detail                                      |
|--------------------|---|
| Brand              | Moosum                                      |
| Model              | B0FPWVGDJ3                                  |
| Capacity           | 5-cup uncooked (10-cup cooked) / 0.8 Liters |
| Product Dimensions | 9.45"D x 9.45"W x 10.24"H                   |
| Power Source       | Corded Electric                             |
| Voltage            | 120 Volts                                   |
| Wattage            | 300 watts                                   |
| Material           | Stainless Steel (inner pot)                 |
| Color              | Silver                                      |
| Special Feature    | Food Steamer, Automatic Keep Warm           |
| Item Weight        | 4.89 pounds                                 |



Image: A visual representation of the rice cooker's dimensions, showing a height of 9.1 inches and a width of 8.7 inches.

## Warranty and Support

The Moosum Electric Rice Cooker has passed U.S. electrical safety and UL Test Report standards, ensuring product quality and safety.

## MAKING EVERY COOKING A LITTLE HEALTHIER

MOOSUM always carries out the concept of health. Our products have passed the U.S. electrical safety and UL Test Report. Our products are always made of safe materials to protect the health of every consumer. Our healthy inner pot is free of PFAS, PFOA, lead, and cadmium. It makes every cooking a little healthier.

Also, simple operation makes it easy for everyone to get started.



UL Test Report

**MOOSUM**<sup>®</sup>

Healthy and Simple

Image: Certification details highlighting the UL Test Report for the Moosum brand.

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official Moosum website. Please have your model number (B0FPWVGDJ3) and purchase date available when contacting support.