

[Manuals.plus](#) /

› [Veken](#) /

› Veken 47.2 Inch Electric Standing Desk User Manual

Veken ODH3V131

Veken 47.2 Inch Electric Standing Desk User Manual

Model: ODH3V131

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your Veken 47.2 Inch Electric Standing Desk. Please read this manual carefully before use to ensure proper function and safety.

SAFETY INFORMATION

Important Safety Warnings:

- Prolonged exposure to the motor noise may affect hearing.
- Always use the height adjustment feature with caution to avoid injury.
- Keep children and pets away from the desk during operation.
- Ensure no obstacles are in the desk's path during height adjustment.
- Do not overload the desk. Refer to specifications for maximum weight capacity.

SETUP AND ASSEMBLY

The Veken Electric Standing Desk is designed for straightforward assembly. It typically takes 10-30 minutes to set up. Ensure you have a Phillips-head screwdriver ready.

Package Contents:

- Desktop (composed of two boards)
- Desk Frame components
- Motor and Control Panel
- Feet Pads (4)
- Headphone Hooks (2)
- Cable Clip
- User Manual

- Instruction for Using the Control Panel
- Assembly Hardware (screws, dowels, etc.)

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Verify all parts are present against the included parts list.
2. **Assemble Tabletop and Desk Frame:** Follow the detailed diagrams in the included user manual to attach the desktop sections and secure them to the desk frame. Ensure the control rod is properly aligned and the set screw is tightened securely to prevent future wobbling.
3. **Install Drawer (if applicable) and Accessories:** Attach any optional drawers or accessories like headphone hooks as per the instructions.
4. **Connect Power Cords:** Connect the motor and control panel to the power supply. Ensure all connections are firm.
5. **Initial Power-On and Test:** Plug the desk into a power outlet and perform an initial test of the height adjustment.



Image: Visual guide for quick and simple installation, showing fewer screws for reduced assembly time.

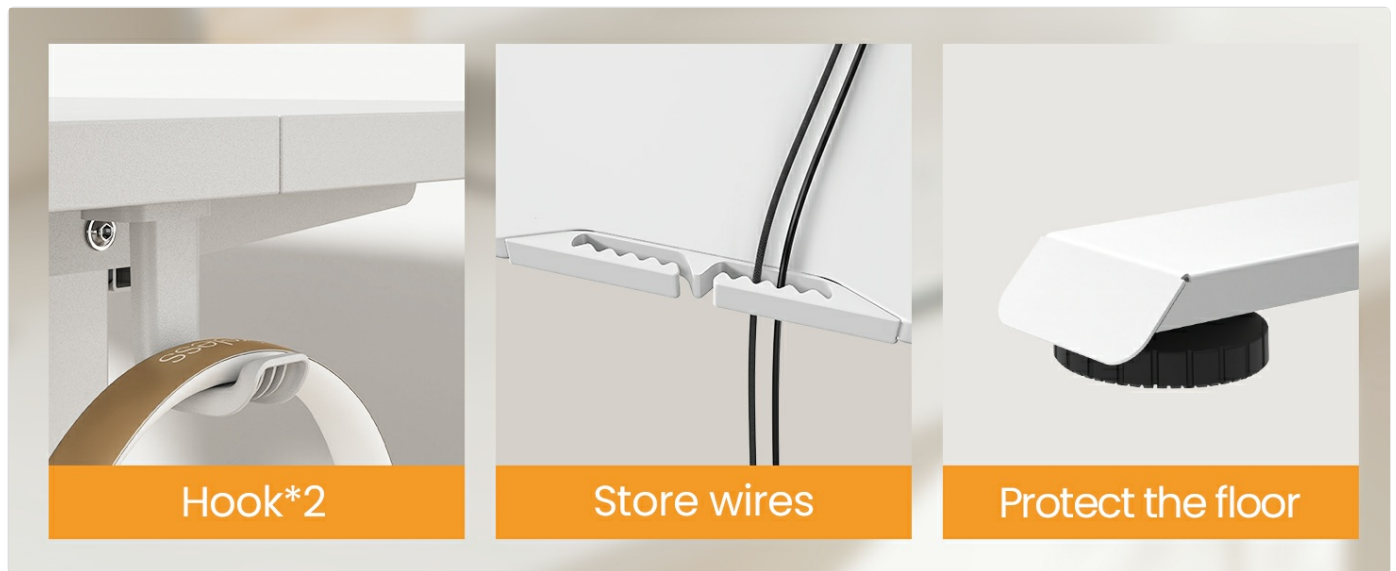


Image: Illustration of various accessories including headphone hooks, cable management clips, and adjustable foot pads.

OPERATING INSTRUCTIONS

Your Veken Electric Standing Desk features an intuitive control panel for easy height adjustment and memory presets.

Control Panel Functions:

- **Up/Down Arrows:** Press and hold to manually adjust the desk height.
- **Memory Presets (1, 2, 3):**
 - a. Adjust the desk to your desired height.
 - b. Press the "M" or "Set" button (if available, otherwise refer to specific control panel instructions).
 - c. Press the desired number button (1, 2, or 3) until you hear a beep or see a confirmation on the display. The height is now saved.
 - d. To recall a saved height, simply press the corresponding number button once. The desk will automatically move to the preset height.
- **Child Lock:** Some models may include a child lock feature. Refer to your specific control panel instructions for activation and deactivation.
- **Sedentary Reminder:** Some models may include a sedentary reminder. Refer to your specific control panel instructions for setup.



Image: The Veken Electric Standing Desk in a typical office setup, showcasing the control panel on the right side.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Veken Electric Standing Desk.

- **Cleaning:** Wipe the desktop surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners to protect the laminated finish. The desktop is designed to be scratch-resistant and heat-resistant.
- **Frame Care:** The carbon steel frame features an anti-corrosion baked varnish. Clean with a dry or slightly damp cloth.
- **Cable Management:** Periodically check and organize cables using the provided cable clip to prevent tangles and damage.
- **Tighten Connections:** Over time, bolts and screws may loosen. Periodically check and tighten all connections, especially those connecting the legs to the feet and the control rod, to maintain stability.



Image: Features of the Veken desktop, highlighting its scratch-resistant, heat-resistant, and environmentally friendly properties.

TROUBLESHOOTING

If you encounter issues with your Veken Electric Standing Desk, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move or stops unexpectedly.	- Power cable disconnected. - Control rod not securely tightened. - Overload protection activated.	- Check all power connections. - Ensure the control rod's set screw is fully tightened. - Remove some weight from the desk and try again. - Unplug the desk for 10 minutes, then plug back in to reset.
Desk wobbles at higher heights.	- Loose bolts or screws. - Uneven floor surface.	- Tighten all assembly bolts and screws, especially those connecting the legs to the feet. - Adjust the feet pads to level the desk on uneven surfaces.
Motor noise is louder than expected.	- Normal operation sound (under 52 dB). - Desk is overloaded.	- The motor operates quietly (under 52 dB). If significantly louder, check for obstructions. - Reduce the load on the desk.

SPECIFICATIONS

Feature	Detail
Brand	Veken
Model Number	ODH3V131

Feature	Detail
Product Dimensions (D x W x H)	23.64"D x 47.24"W x 28.3"H
Minimum Height	28.3 inches
Maximum Height	46.5 inches
Color	Cyber Black
Top Material Type	Engineered Wood (Laminated)
Base Material	Carbon Steel
Lifting Mechanism	Electric
Maximum Weight Recommendation	176 pounds
Noise Level	Under 52 dB
Item Weight	42.1 pounds
Included Components	Cable Clip, Feet Pad *4, Headphone Hook, Instruction for Using the Control Panel *1, User Manual *1



Image: Detailed desk dimensions, illustrating the adjustable height range and desktop measurements.



Image: Visual representation of the desk's 176-pound weight capacity.

WARRANTY INFORMATION

Your Veken Electric Standing Desk comes with a**Limited Warranty**. For specific details regarding coverage and duration, please refer to the warranty card included with your product or contact Veken customer support.



Chosen by more than 200000 families

Solid as a rock, no wobble whatsoever.

Super sturdy, doesn't budge an inch.

Quality materials, feels incredibly durable and strong.

Built like a tank, surprisingly stable too.

Sleek design, makes my office look great.

This thing is going to last forever.

Best desk upgrade I've made yet.

Perfect height, super spacious for my setup.

contains AI created performers

Image: General image of the Veken desk, often associated with positive reviews and warranty information.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please contact Veken customer service. Refer to the contact information provided in your product packaging or visit the official Veken website.

Online Resources:

- Veken Official Website: [Visit the Veken Store on Amazon](#)

© 2026 Veken. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question