

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GEARGO](#) /

› [GEARGO BX60A 1.5L Cordless Electric Heated Lunch Box User Manual](#)

## GEARGO BX60A

# GEARGO BX60A 1.5L Cordless Electric Heated Lunch Box User Manual

Brand: GEARGO | Model: BX60A

## 1. INTRODUCTION

Thank you for choosing the GEARGO BX60A 1.5L Cordless Electric Heated Lunch Box. This innovative device is designed to provide you with warm, fresh meals anytime, anywhere. Featuring a powerful 20000mAh rechargeable battery, a spacious 1.5L stainless steel container, and smart heating functions, it ensures your food is ready when you are. This manual provides essential information for safe and efficient use of your new lunch box.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- **Electrical Safety:** Do not immerse the main unit in water or other liquids. Ensure hands are dry when handling the power cord and plug.
- **Heating Precautions:** Always remove the ice crystal box before activating any heating function. Do not heat empty.
- **Children:** Keep the appliance out of reach of children. Adult supervision is required if used by or near children.
- **Power Source:** Use only the charging cable and adapter provided by the manufacturer.
- **Maintenance:** Refer to the 'Maintenance' section for proper cleaning and care.
- **Damage:** Do not operate the appliance if it has been damaged in any way. Contact customer support for assistance.

## 3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- GEARGO BX60A Cordless Electric Lunch Box (Main Unit)

- Stainless Steel Food Container (1.5L)
- Airtight Lid for Stainless Steel Container
- Ice Crystal Box
- Portable Insulated Carry Bag with Shoulder Strap
- Charging Cable (USB-C) and Adapter
- Fork and Spoon Set
- User Manual



Image: All components included in the GEARGO BX60A package.

## 4. PRODUCT OVERVIEW

The GEARGO BX60A is designed for convenience and efficiency. Familiarize yourself with its key features:

- **Main Unit:** Houses the heating elements, 20000mAh battery, and touchscreen control panel.
- **Touchscreen Digital Display:** Allows for precise temperature and time control, with indicators for battery, heating, delay, and warm modes.
- **Stainless Steel Container:** Food-grade, 1.5L (6.3 cups) capacity, removable for easy cleaning.
- **Airtight Lid:** Features a silicone seal to prevent leaks and spills, ensuring food freshness.
- **Ice Crystal Box:** Keeps food chilled for up to 10 hours before heating.
- **Integrated Handle:** For easy portability.
- **Type-C Charging Port:** Located on the side for convenient recharging.



Image: Main unit and accessories of the GEARGO BX60A.

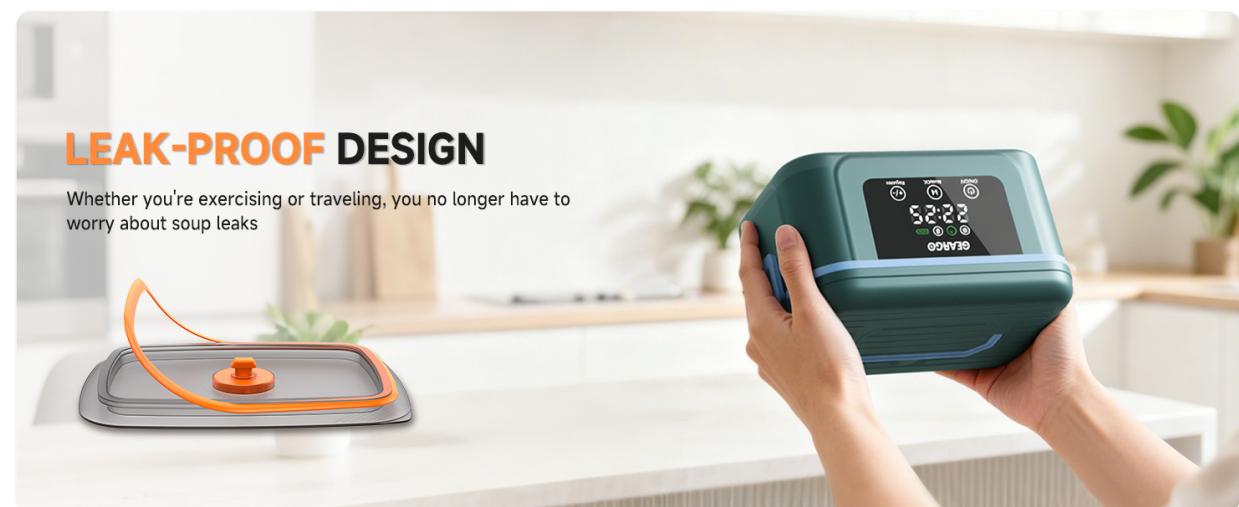


Image: Smart Touch Digital Display for easy operation.



Image: Leak-proof design of the container lid.

## 5. SETUP

### 5.1 Initial Charging

Before first use, fully charge the lunch box. Connect the provided USB-C charging cable to the port on the side of the main unit and plug the adapter into a power outlet. The battery indicator on the display will show charging progress.



Image: Charging the 20000mAh ultra battery.

### 5.2 Preparing for Use

- 1. Clean Components:** Wash the stainless steel food container, its lid, and the utensils with warm soapy water before initial use. These parts are dishwasher safe.
- 2. Insert Container:** Place the clean stainless steel container securely into the main unit.
- 3. Ice Crystal Box (Optional):** If you wish to keep food chilled before heating, place the ice crystal box (pre-frozen) in the designated compartment. **IMPORTANT: Remove the ice crystal box before activating any heating function.**

# 10 HOURS LONG LASTING FRESHNESS

Equipped with the ice crystal box, food stays chilled up to 10 hours



Image: Ice crystal box for extended freshness.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off

To power on or off the device, long press the **ON/OFF/Reset** button on the touchscreen display.

### 6.2 Selecting a Mode

After powering on, short press the **Mode/OK** button to cycle through the available modes: **Heat**, **Delay**, and **Warm**.

### 6.3 Heat Mode

This mode is used to heat cold or room-temperature food to your desired hotness.

1. Select **Heat** mode (indicated by a flame icon).
2. Use the **Up/Down** buttons to adjust the heating time (e.g., 20, 30, 40, 50, 60 minutes).
3. Press the **Temp** button (thermometer icon) and use **Up/Down** buttons to set the desired temperature (e.g., 194°F, 185°F, 176°F, 167°F, 158°F, 149°F).
4. The heating process will begin automatically after a few seconds. The indicator will be on.

## EASY TO ENJOY A HOT FOOD



Image: Easy steps to enjoy a hot meal.

Video: Learn how to use the GEARGO Heated Lunch Box.

### 6.4 Delay Mode

Schedule your meal to be heated at a later time, up to 24 hours in advance.

1. Select **Delay** mode (indicated by a clock icon).
2. Use the **Up/Down** buttons to set the delay time (e.g., 30, 60, 90 minutes, up to 240 minutes).
3. After setting the delay, you can also set the desired heating time and temperature as in Heat Mode.
4. The indicator will be on, and the heating process will start after the set delay time.

## 24-HOUR EXTENDED PRESET

Set the exact meal time to the minute, it auto-heats so you get hot food right on time.



Image: Setting the 24-hour extended preset.

Video: Detailed instructions on how to operate the lunch box.

### 6.5 Warm Mode

This mode keeps your food warm after it has been heated or if you've placed already warm food inside.

1. Select **Warm** mode (indicated by steam icons).
2. The device will maintain a default temperature (e.g., 140°F) to keep your food ready to eat.
3. The product automatically enters warm mode after a heating cycle is completed.

## 7. MAINTENANCE

### 7.1 Cleaning

- **Stainless Steel Container & Lid:** These components are dishwasher safe. For hand washing, use warm water and mild detergent. Rinse thoroughly and dry completely.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid. Ensure the charging port is dry before charging.
- **Utensils:** Wash with warm soapy water or place in the dishwasher.



Image: Removable stainless steel container for easy cleaning.



Image: Dishwasher safe container.

### 7.2 Storage

Store the lunch box in a cool, dry place when not in use. Ensure all components are clean and dry before storage.

## 8. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lunch box not turning on.	Low battery.	Charge the lunch box fully.
Food not heating.	Incorrect mode selected; heating time/temperature too low; ice crystal box still inside.	Ensure 'Heat' mode is selected. Adjust heating time/temperature. Remove ice crystal box before heating.
Food not staying warm.	Lid not properly sealed; 'Warm' mode not activated.	Ensure the airtight lid is securely fastened. Activate 'Warm' mode after heating.
Leakage from the lunch box.	Lid not properly sealed; container not seated correctly.	Check the silicone seal on the lid. Ensure the stainless steel container is correctly placed within the main unit.

If the problem persists, please contact GEARGO customer support.

## 9. SPECIFICATIONS

- Model Number:** BX60A
- Capacity:** 1.5 Liters (6.3 Cups)
- Battery:** 20000mAh Rechargeable
- Material:** Food-Grade Stainless Steel (container), BPA- and Lead-Free PP Plastic (outer shell)
- Heating Time:** Adjustable from 20 to 70 minutes
- Temperature Range:** Adjustable from 149°F to 194°F (65°C to 90°C)
- Delay Timer:** Up to 24 hours
- Special Features:** Ice Crystal Box, Full Touchscreen Operation, 5-Side Heating, Leak-Proof Design, Dishwasher Safe Container
- Item Weight:** 4.2 pounds
- Package Dimensions:** 10.75 x 6.85 x 6.18 inches

## 10. WARRANTY AND SUPPORT

The GEARGO BX60A Cordless Electric Heated Lunch Box comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, warranty claims, or any questions regarding your product, please contact GEARGO customer service through the retailer where you purchased the item or visit the official GEARGO website.

