Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Trevi /
- > Trevi FRS 1490 RW Wireless Headphones with Charging Base User Manual

Trevi FRS 1490 RW

Trevi FRS 1490 RW Wireless Headphones with Charging Base - User Manual

Model: FRS 1490 RW

1. Introduction

Thank you for purchasing the Trevi FRS 1490 RW Wireless Headphones. These headphones are designed to provide a high-quality audio experience with the freedom of wireless connectivity. Featuring RF 2.4 GHz transmission, a charging base, and versatile connectivity options including optical and 3.5mm jack inputs, they are compatible with televisions, Hi-Fi systems, and smartphones. This manual provides detailed instructions for proper setup, operation, and maintenance of your device.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- Trevi FRS 1490 RW Wireless Headphones
- · Charging Base
- Power Adapter
- Optical Audio Cable
- 3.5mm Jack Audio Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

3.1 Headphones

The headphones feature an adjustable headband for comfortable wear during extended listening sessions. Controls for power and volume are located on the earcups.

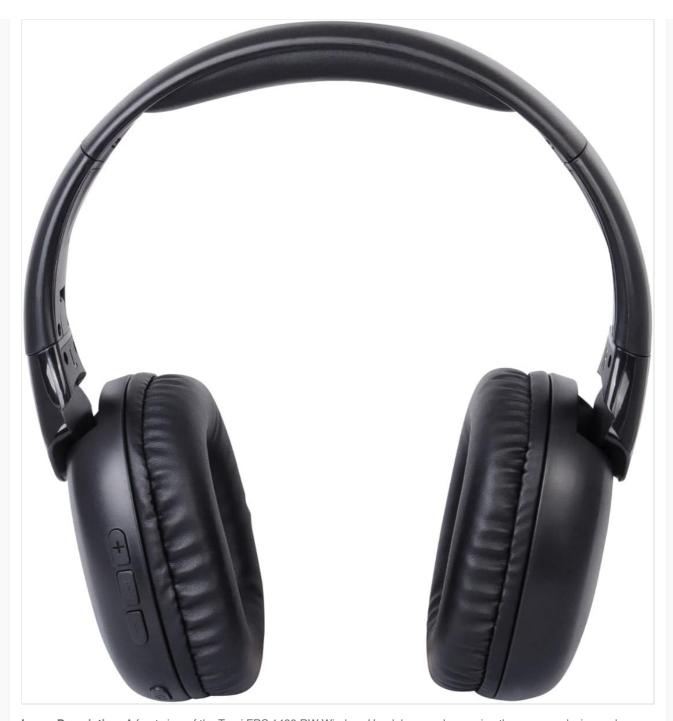


Image Description: A front view of the Trevi FRS 1490 RW Wireless Headphones, showcasing the over-ear design and adjustable headband.



Image Description: A side view of the Trevi FRS 1490 RW Wireless Headphones, highlighting the left earcup with integrated control buttons for power and volume.

3.2 Charging Base

The charging base serves as both a charging station and the RF transmitter. It includes slots for the headphones, a charging indicator LED, and various audio input ports on the rear.



Image Description: A top-down view of the Trevi FRS 1490 RW charging base, clearly showing the two recessed slots where the headphones rest for charging and the central LED indicator.



Image Description: A rear view of the Trevi FRS 1490 RW charging base, illustrating the various connectivity ports: an AUX/Optical input selector switch, a 3.5mm AUX input jack, an Optical audio input, and a USB power input port.

4. SETUP

4.1 Initial Charging

- 1. Connect the power adapter to the USB port on the rear of the charging base.
- 2. Plug the power adapter into a wall outlet.
- 3. Place the headphones onto the charging base. Ensure the charging contacts align. The LED indicator on the base will show charging status.
- 4. Allow the headphones to charge fully before first use.

4.2 Connecting to an Audio Source (TV/Hi-Fi)

The charging base acts as the transmitter and can connect to your audio source via optical or 3.5mm jack.

4.2.1 Optical Connection (Recommended for Digital Audio)

- 1. Ensure your TV or audio device has an optical audio output port.
- 2. Connect one end of the optical audio cable to the Optical IN port on the rear of the charging base.

- 3. Connect the other end of the optical audio cable to the optical audio output port on your TV or audio device.
- 4. Set the AUX/OPTICAL switch on the charging base to 'OPTICAL'.
- 5. On your TV or audio device, ensure the audio output is set to 'Optical' or 'Digital Audio Out'.

4.2.2 3.5mm Jack Connection (Analog Audio)

- 1. Ensure your TV or audio device has a 3.5mm headphone jack or an AUX audio output.
- 2. Connect one end of the 3.5mm jack audio cable to the AUX IN port on the rear of the charging base.
- 3. Connect the other end of the 3.5mm jack audio cable to the headphone jack or AUX output on your TV or audio device.
- 4. Set the AUX/OPTICAL switch on the charging base to 'AUX'.
- 5. On your TV or audio device, ensure the audio output is enabled for the connected port.

4.3 Pairing Headphones with Base

The headphones and charging base are typically pre-paired. Once the base is connected to an audio source and powered, and the headphones are charged and powered on, they should automatically connect. If connection issues occur, refer to the Troubleshooting section.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- To power on the headphones, press and hold the Power button on the earcup until the indicator light
- To power off, press and hold the Power button again until the indicator light turns off.

5.2 Volume Control

• Use the Volume Up (+) and Volume Down (-) buttons on the earcup to adjust the listening volume.

5.3 Dual Connectivity (TV + Smartphone)

The headphones support simultaneous connection to a TV (via the charging base) and a smartphone. This allows you to receive calls without interrupting your TV audio.

- When a call is received on your connected smartphone, the TV audio will automatically lower.
- You can answer and manage calls directly through the headphones (microphone integrated).
- After the call, TV audio will resume at its previous level.

5.4 Automatic Shutdown

The headphones feature an automatic shutdown function to conserve battery life. If no audio signal is detected for a certain period, the headphones will automatically power off.

6. MAINTENANCE

6.1 Cleaning

- Wipe the headphones and charging base with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

6.2 Battery Care

- To maximize battery lifespan, avoid fully discharging the headphones frequently.
- Store the headphones in a cool, dry place when not in use.
- If storing for an extended period, charge the battery to approximately 50% every few months.

6.3 Storage

- Store the headphones on their charging base or in a protective case to prevent damage.
- Avoid exposing the device to extreme temperatures or direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No audio from headphones	Headphones not powered on Base not powered Incorrect audio input selected on base Audio source not playing or output disabled Headphones not paired with base	Ensure headphones are powered on. Check power connection to the charging base. Verify AUX/OPTICAL switch is set correctly. Check TV/audio device settings and volume. Power cycle both headphones and base.
Poor audio quality or interference	Out of range Obstructions between headphones and base Interference from other 2.4 GHz devices	Move closer to the charging base. Ensure a clear line of sight between headphones and base. Move the base away from other wireless devices (e.g., Wi-Fi routers).
Headphones not charging	Improper placement on base Base not powered Dirty charging contacts	Ensure headphones are correctly seated on the base. Check power connection to the charging base. Clean charging contacts on both headphones and base with a dry cloth.
Cannot connect to smartphone	Smartphone not compatible or feature not enabled	Ensure your smartphone supports the dual connectivity feature. Check smartphone settings for audio output.

8. SPECIFICATIONS

Brand	Trevi		
Model	FRS 1490 RW		
Connectivity Technology	Wireless (RF 2.4 GHz)		
Wireless Communication Technology	RF		
Ear Placement	Over-ear		
Form Factor	Over-ear		
Headphone Jack	3.5 mm Jack (on base)		
Compatible Devices	Televisions, Mobile phones		
Color	Black		
Item Weight	550 g		
Package Dimensions	20 x 20 x 10 cm		
Batteries Included	Yes		
Battery Cell Composition	Lithium Ion		
Additional Features	Rechargeable battery, Integrated microphone, Automatic shutdown		

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Trevi website. Keep your proof of purchase for any warranty claims.

© 2023 Trevi. All rights reserved.

Related Documents - FRS 1490 RW



Trevi FRS 1490 RW Hifi Wireless TV Headphones User Manual

Comprehensive user guide for the Trevi FRS 1490 RW Hifi Wireless TV Headphones. Learn how to set up, connect, operate, and maintain your headphones. Includes technical specifications, safety warnings, and disposal information.



Trevi DJ 12E60 BT Wireless HiFi Headphones with Multicolor LED - User Manual

User guide for the Trevi DJ 12E60 BT wireless HiFi headphones. Learn about controls, charging, Bluetooth pairing, audio playback, mobile calls, and technical specifications. Features multicolor LED illumination.



Trevi DJ 12E42 BT Stereo Bluetooth Headphones & MP3 Player User Guide

User guide for the Trevi DJ 12E42 BT stereo Bluetooth headphones with MP3 player functionality. Includes safety precautions, charging instructions, pairing, playback controls, technical specifications, and disposal information.



Trevi DJ 12E35 BT User Guide: Wireless Stereo Headphones

Comprehensive user guide for the Trevi DJ 12E35 BT wireless stereo headphones with MP3 player. Learn about safety precautions, controls, battery charging, wireless pairing, music playback, call handling, and technical specifications.



Trevi MPV 1780 SB: Manuale Utente e Specifiche Tecniche

Guida completa al lettore audio/video/MP3/pedometro Trevi MPV 1780 SB, incluse istruzioni d'uso, caratteristiche tecniche e avvertenze.



Trevi XF 370 KB Portable Bluetooth Speaker User Manual

Comprehensive user manual for the Trevi XF 370 KB portable speaker, covering setup, functions, Bluetooth connectivity, TWS pairing, USB/SD playback, AUX input, disco light effects, microphone use, recording, technical specifications, and disposal information.