

Manuals.plus /

› DEWENWILS /

› DEWENWILS Outdoor Digital Power Strip Timer with 25Ft Extension Cord User Manual

DEWENWILS Outdoor Digital Power Strip Timer

DEWENWILS Outdoor Digital Power Strip Timer with 25Ft Extension Cord User Manual

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your DEWENWILS Outdoor Digital Power Strip Timer with 25Ft Extension Cord. Please read this manual thoroughly before installation and operation, and retain it for future reference.

SAFETY INFORMATION

Always observe basic safety precautions when using electrical products to reduce the risk of fire, electric shock, and personal injury.

- Ensure the product is rated for the intended use and voltage.
- Do not immerse the timer or extension cord in water.
- Keep children away from the product during operation.
- Do not overload the power strip. Refer to the specifications for maximum load.
- Ensure all connections are secure and protected from moisture.
- Unplug the unit from the power source before performing any maintenance or cleaning.

PRODUCT OVERVIEW

The DEWENWILS Outdoor Digital Power Strip Timer is designed for outdoor use, featuring a digital timer, multiple grounded outlets, and a 25-foot extension cord. It is suitable for controlling various outdoor devices such as pond pumps, sprinklers, and decorative lighting.



Figure 1: Overview of the DEWENWILS Outdoor Digital Power Strip Timer. This image displays the main components: the digital timer unit with its protective cover, the integrated stake for ground installation, the 25-foot green extension cord with multiple outlets, and the main power plug. The timer unit features a digital display and control buttons for programming.

Components:

- **Digital Timer Unit:** Features a display and control buttons for setting schedules.
- **Weatherproof Cover:** Protects the digital timer from outdoor elements.
- **Grounded Outlets:** Three outlets for connecting devices, each with a safety cover.

- **25-Foot SJTW Extension Cord:** Durable, weatherproof cord for outdoor use.
- **Ground Stake:** For secure installation in the ground.

SETUP

1. **Assemble the Stake:** Connect the ground stake to the bottom of the power strip timer unit. Ensure it is securely attached.
2. **Position the Unit:** Wedge the assembled unit into the ground in the desired outdoor location. Ensure it is stable and upright.
3. **Connect Devices:** Plug your outdoor devices into the grounded outlets on the power strip. Ensure the safety covers are properly seated when not in use.
4. **Power Connection:** Plug the 25-foot extension cord's main plug into a suitable outdoor power source.

OPERATING INSTRUCTIONS

The timer allows for up to 20 ON/OFF settings. The display uses a 24-hour system (military time) and does not show AM/PM indicators.

Setting the Current Time:

1. Press the **CLOCK** button.
2. Use the **WEEK**, **HOURL**, and **MIN** buttons to set the current day of the week, hour, and minute.
3. Press **CLOCK** again to confirm and exit time setting mode.

Programming ON/OFF Times:

1. Press the **PROG** button to enter programming mode. The display will show "1 ON".
2. Use the **WEEK**, **HOURL**, and **MIN** buttons to set the desired ON time for the first program.
3. Press **PROG** again. The display will show "1 OFF".
4. Use the **WEEK**, **HOURL**, and **MIN** buttons to set the desired OFF time for the first program.
5. Repeat steps 2-4 for up to 20 ON/OFF programs.
6. After setting all desired programs, press the **CLOCK** button to exit programming mode.

Setting Operating Mode:

Press the **ON/AUTO/OFF** button to cycle through the operating modes:

- **ON:** The power strip outlets are continuously ON.
- **AUTO:** The power strip operates according to the programmed ON/OFF times.
- **OFF:** The power strip outlets are continuously OFF.

For automatic operation, ensure the timer is set to **AUTO** mode.

MAINTENANCE

- **Cleaning:** Periodically wipe the unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the unit is unplugged before cleaning.
- **Weather Protection:** The sturdy weatherproof cover protects the digital timer. Ensure it is properly closed to

prevent water and dust ingress.

- **Cord Inspection:** Regularly inspect the SJTW weatherproof wire for any signs of damage, cuts, or fraying. Replace if damaged.
- **Outlet Covers:** Ensure the safety covers on unused outlets are securely in place to protect against moisture and dust.
- **Flexibility in Cold Weather:** The unique material of the power cord maintains flexibility in cold temperatures, allowing for easy arrangement without cracking.

TROUBLESHOOTING

- **Timer not turning ON/OFF:**
 - Check if the timer is in **AUTO** mode.
 - Verify that the current time and programmed ON/OFF times are set correctly.
 - Ensure the unit is receiving power from the wall outlet.
- **Display is blank:**
 - Confirm the unit is plugged into a live power source.
 - The internal battery might be low. Allow the unit to charge for a few hours while plugged in.
- **Devices not receiving power:**
 - Check if the individual devices are properly plugged into the power strip outlets.
 - Ensure the timer is in **ON** or **AUTO** mode with an active ON period.
 - Verify that the devices themselves are functional.

SPECIFICATIONS

Model:	Outdoor Digital Power Strip Timer
ASIN:	B0FPXJRYP6
Cord Length:	25 Feet
Cord Type:	SJTW Weatherproof Wire
Outlets:	3 Grounded Outlets with Safety Covers
Timer Settings:	Up to 20 ON/OFF programs, weekly repeat
Display:	24-hour system (military time)
Certifications:	UL Certified
First Available Date:	November 6, 2019

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the DEWENWILS official website or contact your retailer. Please have your product model and ASIN (B0FPXJRYP6) available when seeking support.

