

Lacoste LC33 (2030064)

Lacoste LC33 Digital Watch User Manual

Model: LC33 (2030064)

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. INTRODUCTION

Welcome to the user manual for your Lacoste LC33 Digital Watch, Model 2030064. This watch is designed for kids and teens aged 8 and above, offering a blend of modern design and practical features. It features a durable TR90 case, a comfortable silicone strap, and a clear digital display. Key functions include day/date, alarm, stopwatch, countdown timer, and backlight. The watch is also water-resistant up to 100 meters, making it suitable for various activities.



Figure 1: Front view of the Lacoste LC33 Digital Watch.

2. SETUP

2.1. Setting Analog Time

To set the analog time on your Lacoste LC33 watch, follow these steps:

1. Carefully pull out the crown located on the side of the watch.
2. Turn the crown clockwise until the analog hands display the correct time.
3. Once the time is set, push the crown back into its original position to secure the setting.

Your browser does not support the video tag.

Video 1: Instructional video on setting the analog and digital time for Lacoste watches.

2.2. Setting Digital Time

To set the digital time, date, and other digital functions:

1. Press the **MODE** button three times to enter the time setting mode. The seconds display will begin to flash.
2. Press the **RESET** button to cycle through the items you wish to set (seconds, minutes, hour, day, month, weekday).
3. While an item is flashing, press the **START** button to adjust its value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to real-time display.



Figure 2: Side view of the watch highlighting the control buttons.

3. OPERATING INSTRUCTIONS

3.1. Basic Display and Date

In normal time mode, the digital display shows the current time. To view the date, press the **START** button once.

3.2. Alarm Function

To set the alarm:

1. Press the **MODE** button until "AL" (Alarm) appears on the digital display.
2. Press the **RESET** button to select the hour or minute to set.
3. Use the **START** button to adjust the flashing hour or minute.
4. Press **MODE** to exit. To activate/deactivate the alarm, press **START** and **RESET** simultaneously in alarm mode.

3.3. Stopwatch (Chronograph) Function

The stopwatch function allows you to measure elapsed time.

1. Press the **MODE** button once to enter chronograph mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press **START** again to pause the stopwatch. Press **START** to resume.
4. To measure split times while the stopwatch is running, press the **RESET** button. The split time will be displayed, but the stopwatch will continue running in the background. Press **RESET** again to return to the running stopwatch display.
5. When the stopwatch is stopped, press the **RESET** button to reset the chronograph to zero.

Your browser does not support the video tag.

Video 2: Instructional video on using the chronograph function for Lacoste watches.

3.4. Countdown Timer

To use the countdown timer:

1. Press the **MODE** button until "TR" (Timer) appears on the digital display.
2. Press the **RESET** button to select the hour or minute to set.
3. Use the **START** button to adjust the flashing hour or minute.
4. Press **START** to begin the countdown. Press **START** again to pause.
5. Press **RESET** to reset the timer to its initial set value.

3.5. Backlight

To illuminate the display in low-light conditions, press the **LIGHT** button located on the top left side of the watch.

4. MAINTENANCE

4.1. General Care

Your Lacoste watch is crafted with attention to quality. To ensure its longevity:

- Avoid exposing the watch to extreme temperatures or sudden temperature changes.
- Clean the watch regularly with a soft, damp cloth.
- A maintenance interval of 3 to 5 years is recommended, in addition to any required battery replacement.
- **Never attempt to open the watch yourself** as this may void the warranty and damage internal components.

4.2. Water Resistance

This watch is water-resistant up to 100 meters (10 ATM). This means it is suitable for swimming and snorkeling. However,

it is **not** designed for deep diving. The water resistance rating indicates pressure tolerance and not a safe submersion depth. Ensure the crown is fully pushed in before any water exposure.

5. TROUBLESHOOTING

If your watch is not functioning as expected, consider the following common issues:

- **Display is blank or dim:** The battery may need replacement. Contact an authorized service center.
- **Time is incorrect:** Refer to the "Setting Analog Time" and "Setting Digital Time" sections to re-adjust the time.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not a feature of this model). If issues persist, a reset might be needed by an authorized technician.

For complex issues, it is recommended to contact Lacoste customer support or an authorized service provider.

6. SPECIFICATIONS

Feature	Detail
Brand	Lacoste
Model Name	LC33
Model Number	2030064
Display Type	Digital
Movement Type	Digital
Case Material	Stainless Steel
Case Diameter	32.6 Millimeters
Case Thickness	12.3 Millimeters
Band Material	Silicone
Band Width	18 Millimeters
Clasp Type	Tongue Buckle
Water Resistance Depth	100 Meters (10 ATM)
Additional Features	Alarm, Backlight, Stopwatch, Countdown Timer, Day/Date
Power Source	Battery Powered
Department	Unisex Kids
UPC	885997633710

Watch Sizing Guide



Figure 3: Watch Sizing Guide.

7. WARRANTY & SUPPORT

7.1. Warranty Information

Your Lacoste LC33 Digital Watch comes with a **Limited Warranty**. For specific details regarding the terms and conditions of your warranty, please refer to the warranty card included with your purchase or visit the official Lacoste website.

7.2. Customer Support

For any questions, technical assistance, or service requests, please contact Lacoste customer support. You can typically find contact information on the official Lacoste website or through the retailer where you purchased the watch.

Manufacturer: Lacoste

Online Support: [Visit the Lacoste Store on Amazon](#)

