

TPOB miniplay

TPOB Mini Play Professional Hair Clippers

User Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your TPOB Mini Play Professional Hair Clippers. Please read all instructions carefully before operating the device and retain this manual for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Use with caution around ears and neck.
- Avoid use on wet hair.
- Keep away from water sources.
- Always unplug and allow to cool before cleaning.
- Do not use on infants or children.
- Do not operate if the cord or plug is damaged.
- Do not disassemble the unit; refer servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- TPOB Mini Play Hair Clipper
- XO PLAY Blade (pre-installed)
- SnapTek 5 Clicking Lever Arm
- 6 Black Guide Combs (various sizes)
- USB-C Charging Cable
- Cleaning Brush (if included, not explicitly listed but common)
- Blade Oil (if included, not explicitly listed but common)



Image 3.1: TPOB Mini Play Hair Clipper with its full set of 6 guide combs, USB-C charging cable, and other accessories laid out in the box.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your TPOB Mini Play Hair Clippers.



Image 4.1: Front view of the TPOB Mini Play Hair Clipper, showcasing its compact design and the TPOB logo.

- **XO PLAY Blade:** Precision blade designed for professional use, featuring oil reservoirs for extended lubrication.
- **SnapTek 5 Clicking Lever Arm:** Adjustable lever for precise cutting length adjustments, ideal for fading.
- **Dual Speed Motor:** Offers two speed settings (6000-7500 RPM) for versatile cutting performance.
- **USB-C Charging Port:** Convenient and modern charging interface.
- **Power Indicator Light:** Displays battery status.



Image 4.2: Close-up view of the XO PLAY Blade, highlighting its teeth and design for precise cutting.



Image 4.3: Side view of the TPOB Mini Play Clipper, focusing on the SnapTek 5 clicking lever arm for blade adjustment.

5. SETUP

5.1 Charging the Clippers

1. Ensure the clipper is turned off.
2. Insert the USB-C cable into the charging port at the bottom of the clipper.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a USB port.
4. The power indicator light will illuminate to show charging status. A full charge typically takes approximately 3 hours, providing up to 3 hours of run time.
5. Unplug the clipper once fully charged.

5.2 Attaching Guide Combs

Guide combs are used to achieve desired hair lengths.

1. Select the desired guide comb size.
2. Align the guide comb with the clipper blade and slide it firmly until it clicks into place.
3. To remove, gently pull the comb away from the blade.



Image 5.1: The TPOB Mini Play Clipper displayed alongside its six black guide combs, each marked with its respective length in millimeters and inches.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Speed Adjustment

- To turn on the clipper, press the power button. It will start at the default speed.
- To switch between the two speed settings (6000 RPM and 7500 RPM), press the power button again while the

clipper is running.

- To turn off the clipper, press the power button a third time.

6.2 Using the SnapTek 5 Clicking Lever Arm

The lever arm allows for fine adjustment of the cutting length without changing guide combs, essential for fading and blending.

- Move the lever up for a shorter cut (closer to the skin).
- Move the lever down for a longer cut.
- The "clicking" mechanism provides tactile feedback for precise adjustments.

6.3 General Hair Cutting Tips

- Ensure hair is clean and dry before cutting.
- Always start with a longer guide comb than you think you need and gradually reduce the length.
- Cut against the direction of hair growth for an even cut.
- Use smooth, overlapping strokes.
- Regularly clear cut hair from the blade during use to maintain performance.

7. MAINTENANCE

7.1 Cleaning the Blades

1. Turn off and unplug the clipper before cleaning.
2. Use the provided cleaning brush to remove loose hair from the blades.
3. For a more thorough clean, the blade set can be carefully removed (refer to manufacturer's guidelines for blade removal if necessary, typically involves unscrewing).
4. Do not rinse the clipper body under water. The blades can be wiped with a damp cloth, then thoroughly dried.

7.2 Lubrication

The XO PLAY Blade features oil reservoirs for extended lubrication. However, regular oiling is still recommended for optimal performance and blade longevity.

1. After each use, or at least once a week, apply 1-2 drops of clipper oil (not included, but commonly available) to the teeth of the blade while the clipper is running for a few seconds.
2. Wipe off any excess oil with a soft cloth.

7.3 Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Ensure it is turned off and unplugged before storing.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.

Problem	Possible Cause	Solution
Clipper runs slowly or pulls hair.	Blades are dirty or not lubricated.	Clean and oil the blades.
Clipper makes unusual noise.	Blades may be misaligned or damaged.	Check blade alignment. If damaged, contact support.
Battery life is shorter than expected.	Battery not fully charged or aging.	Ensure full charge. Battery performance may degrade over time.

9. SPECIFICATIONS

Model	TPOB Mini Play
Blade Material	Metal (XO PLAY Blade)
Motor Speed	Dual Speed: 6000 - 7500 RPM
Power Source	Battery Powered
Charging Port	USB-C
Run Time	Up to 3 hours (approx.)
Dimensions	5 x 1 x 1 inches
Weight	0.9 kg
Included Components	SnapTek 5 clicking lever arm, 6 Black Guide Combs, USB-C charging port

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or visit the official TPOB website. Keep your proof of purchase for warranty claims.
Official TPOB Store: [Visit TPOB Store on Amazon](#)

11. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is intended for personal grooming and professional barber use only. The manufacturer is not responsible for any damage or injury caused by improper use of this product.

© 2023 TPOB. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question