

VINGLI BL0SM10

VINGLI Fireplace TV Stand (Model BL0SM10) Instruction Manual

Comprehensive guide for assembly, operation, and maintenance.

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your VINGLI Fireplace TV Stand, Model BL0SM10. This farmhouse-style entertainment center is designed to accommodate TVs up to 80 inches and features an integrated electric fireplace heater with adjustable shelves for media storage.

Please read this manual thoroughly before beginning assembly or operation to ensure safe and correct usage of the product.

2. IMPORTANT SAFETY INFORMATION

- **Electrical Safety:** Ensure the electric fireplace is connected to a properly grounded outlet. Do not overload electrical circuits.
- **Placement:** Place the TV stand on a flat, stable surface. Avoid placing it near flammable materials or in areas with high humidity.
- **Ventilation:** Do not block the air vents of the electric fireplace. Ensure adequate clearance around the unit for proper airflow.
- **Overheating Protection:** The electric fireplace includes CSA-certified overheating protection. If the unit overheats, it will automatically shut off. Unplug the unit and allow it to cool before restarting.
- **Tip-Over Prevention:** Always secure adjustable shelves to prevent tip-over risk. Use the provided anti-tip hardware to secure the TV stand to a wall, especially in households with children or pets.
- **Children and Pets:** Keep children and pets away from the electric fireplace when it is operating, as surfaces can become hot.
- **Maintenance:** Unplug the unit before performing any cleaning or maintenance.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. The package includes:

- All necessary wooden panels for the TV stand structure.
- Electric fireplace insert.
- Remote control for the fireplace.
- All required assembly hardware (screws, dowels, cam locks, etc.).
- Assembly instructions.
- Anti-tip device.

If any parts are missing or damaged, please contact VINGLI customer service for assistance.

4. SETUP AND ASSEMBLY

Assembly of the VINGLI Fireplace TV Stand requires following the provided step-by-step instructions. It is recommended to have two people for assembly. All necessary tools are included.

Assembly Tips:

- Lay out all components on a soft, clean surface to prevent scratches.
- Identify each part by its label before starting.
- Do not overtighten screws during initial assembly; tighten them fully once the structure is stable.
- Ensure all wooden dowels are inserted correctly into their designated holes for structural integrity.
- It is advisable to insert wooden dowels for the top panel into the side panels before attaching the top to the main structure. This can prevent issues with alignment later in the assembly process.


Refer to the detailed assembly instructions included in your package for specific steps and diagrams.



Refined and Elegant Surface



Anti-tilt Device

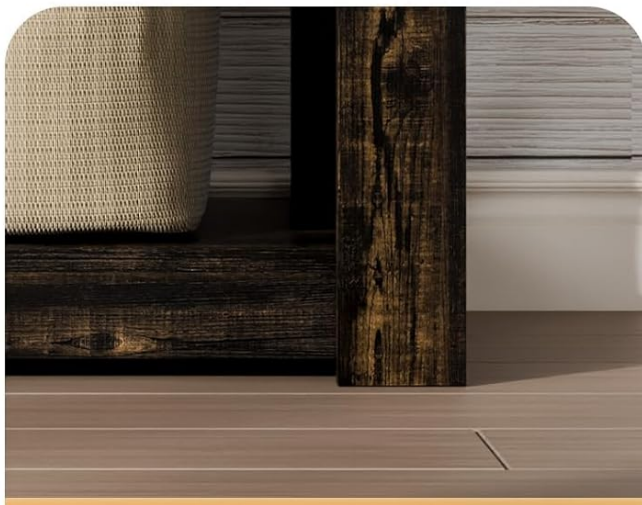

Robust Support Legs



Criss-Cross Embellishment



We Stand Behind Our Products

VINGLI values your shopping experience. Reach out for a resolution to any issues.



1-year
Quality Service



24/7 Professional
Quality Service

Image: Detailed view of the TV stand's features, including the refined surface, anti-tilt device, robust support legs, and decorative criss-cross embellishment.



Image: The assembled VINGLI Fireplace TV Stand, showcasing its capacity to hold a large TV and provide ample storage on its shelves.

5. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The electric fireplace provides both ambient flame effects and heating functionality. It can be operated using the control panel on the unit or the included remote control.

Features:

- **Realistic Flame Effect:** Enjoy a visual flame effect that can be used independently of the heater.
- **Adjustable Flame Colors:** Choose from 6 different flame color options to match your mood or decor.
- **Adjustable Heating:** The heater can be set to temperatures between 62°F and 82°F (17°C - 28°C).
- **Timer Function:** Set the fireplace to operate for a duration of 0.5 to 6 hours.
- **Remote Control:** Full control over all fireplace functions from a distance.

Basic Operation:

1. **Power On/Off:** Press the power button on the control panel or remote to turn the unit on or off.
2. **Adjust Flame:** Use the flame button on the remote or control panel to cycle through the 6 flame color options.
3. **Set Temperature:** Use the temperature up/down buttons to select your desired heat setting.
4. **Set Timer:** Use the timer button to select the desired operating duration.



Image: The 23-inch electric fireplace unit, illustrating its remote control and key features such as adjustable flame, timer, and temperature settings.

Official Product Videos:

Your browser does not support the video tag.

Video: A user demonstrating the electric fireplace's heating capabilities and flame effects, highlighting its warmth and ambiance.

Your browser does not support the video tag.

Video: A detailed review showcasing the ease of assembly, remote control functionality, and effective heat output of the fireplace TV stand.

6. MAINTENANCE

Cleaning the TV Stand:

- Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- For spills, wipe immediately with a dry cloth.

Cleaning the Electric Fireplace:

- Ensure the fireplace is unplugged and cool before cleaning.
- Use a soft, dry cloth to wipe the exterior.
- Periodically check the air intake and exhaust vents for dust accumulation and clean with a vacuum cleaner if necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, unit overheated, remote battery low.	Check power connection. Unplug and allow to cool for 15 minutes. Replace remote batteries.

Problem	Possible Cause	Solution
No heat, but flames are visible.	Heater function is off, temperature setting too low.	Activate heater function. Increase temperature setting.
Unit makes unusual noises.	Dust in fan, loose components.	Unplug and clean vents. Check for loose screws in the fireplace insert.
Stand feels unstable after assembly.	Screws not fully tightened, dowels not properly seated.	Review assembly instructions, tighten all screws, ensure dowels are fully inserted. Apply anti-tip hardware.

8. SPECIFICATIONS

- **Model Number:** BL0SM10
- **Brand:** VINGLI
- **Material:** Engineered Wood
- **Color:** Dark Rustic Oak
- **Style:** Farmhouse
- **Product Dimensions:** 70 x 13.58 x 23.62 inches (W x D x H)
- **Item Weight:** Approximately 63.9 pounds
- **Maximum TV Size Supported:** Up to 80 inches
- **Maximum Load-bearing Capacity:** 420 lbs
- **Fireplace Features:** Adjustable Flame, 6 Color Options, Adjustable Heating (62°F–82°F), 0.5–6 Hour Timer, Remote Control, CSA-certified Overheating Protection.



Image: Visual representation of the TV stand's dimensions and its compatibility with TVs up to 80 inches.

Personalized Storage Options

Flexible storage to meet your specific needs

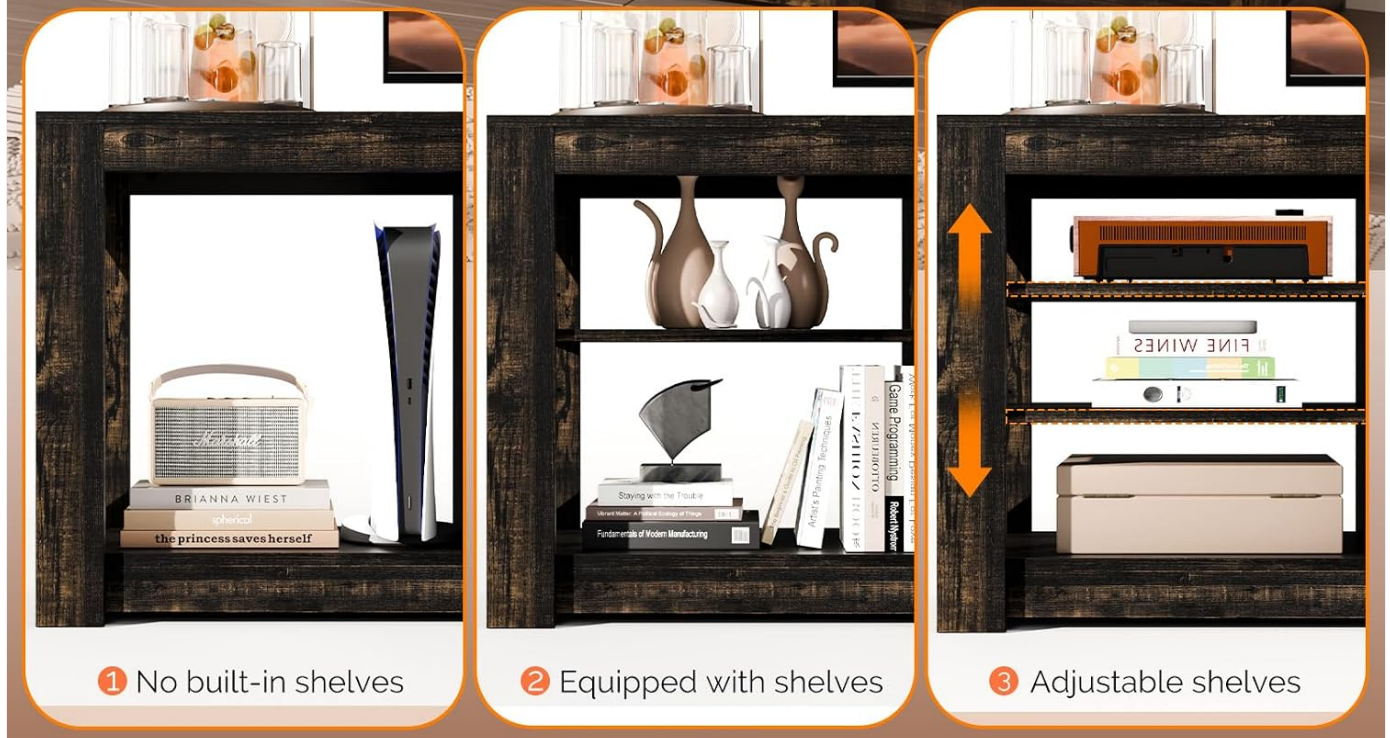


Image: Demonstrates the versatile storage options, including the ability to remove or adjust shelves to fit various media devices.

9. WARRANTY AND SUPPORT

VINGLI stands behind the quality of its products. This product is backed by a 1-year quality service warranty.

For any questions, concerns, or issues regarding assembly, missing parts, or product functionality, please contact VINGLI customer service. Our responsive support team is available 24/7 to ensure a seamless experience.

Contact Information: Refer to the contact details provided in your product packaging or visit the official VINGLI website for support.

Returns: This product is eligible for 30-day easy returns. Please consult the retailer's return policy for specific details.



Image: VINGLI's commitment to quality service, including a 1-year warranty and 24/7 professional support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question