

[Manuals.plus](#) /

› [Pairtty](#) /

› Pairtty Universal TV Remote Control Instruction Manual for Samsung, Sony, Vizio, Hisense, and More

Pairtty Universal TV Remote Control

Pairtty Universal TV Remote Control Instruction Manual

Model: Universal TV Remote Control (ASIN: B0FQ4S7V8V)

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Pairtty Universal TV Remote Control. Please read this manual carefully before use to ensure proper functionality and to maximize your remote control's capabilities.

The Pairtty Universal Remote Control is designed to replace multiple remote controls, offering a simplified solution for managing various audio and video devices. It is compatible with a wide range of TV brands and other entertainment systems.

PRODUCT OVERVIEW: REMOTE CONTROL LAYOUT AND FUNCTIONS

Familiarize yourself with the buttons and their functions on your universal remote control.



Image: Front view of the Pairtty Universal Remote Control with labels indicating the function of each button, such as Power, Input, Setup, TV, STR, AUD, navigation keys, volume, channel, number pad, and media playback controls.

- **Power:** Turns devices ON/OFF.
- **Input:** Selects video inputs.
- **SETUP:** Used to program the remote.
- **TV/STR/AUD:** Selects the device to control (Television, Streaming, Audio).
- **Media Playback Controls (Rewind, Play, Pause, Fast Forward, Stop, Record):** For DVD/Blu-ray players, streaming media, or cable/satellite receivers.
- **A, B, C, D Buttons:** Access additional features for DVRs, cable, and satellite receivers.
- **MENU:** Displays the on-screen menu.
- **APP Hotkey:** Access top apps like Netflix, Amazon Prime, Hulu, and more (functionality depends on the controlled device).
- **Navigation (Up/Down/Left/Right) & OK:** Used for menu navigation and selection.
- **EXIT:** Exits on-screen menus.

- **VOL +/-:** Adjusts volume up or down.
- **CH +/-:** Changes channels up or down.
- **Mute:** Mutes sound.
- **Numbers (0-9):** Enter numbers for direct channel selection.
- **ENTER:** Confirms selection (some devices require this after channel selection).
- **(-):** Used to select digital channels (e.g., 4.1).

BATTERY INSTALLATION

The remote control requires two (2) AAA alkaline batteries (not included).



Image: Side and back views of the Pairtty Universal Remote Control, illustrating its dimensions (6.9 inches length, 1.77 inches width, 0.6 inches thickness) and the battery compartment requiring 2 AAA alkaline batteries.

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the

compartment.

3. Close the battery compartment cover securely.

Important Battery Notes:

- Do not mix old and new batteries.
- Do not mix different types of batteries (e.g., alkaline with rechargeable).
- If the remote control is not functioning correctly, try reinstalling the batteries.
- Replace batteries when the remote control becomes unresponsive or less sensitive.

SETUP AND PROGRAMMING

The Pairtty Universal Remote Control can be programmed using a 4-digit code or an automatic search function.

Method 1: Code Setting (4-Digit Code)

1. Press and hold the **[SET]** button. After approximately 3 seconds, the indicator light on the remote will turn on. Release the **[SET]** button.
2. Enter the 4-digit code for your device (refer to the included code table or contact support for an electronic version).
3. If the code is entered correctly, the indicator light will turn off, and the remote will exit programming mode. If the code is incorrect, the light will flash twice and then exit.
4. Press the **[SET]** button to manually exit programming mode, or it will automatically exit after 30 seconds of inactivity.

Method 2: Automatic Code Search

1. Press and hold the **[SET]** button. After approximately 3 seconds, the indicator light on the remote will turn on. Release the **[SET]** button.
2. Press the **[POWER]** key to initiate the automatic code search. The remote will send out codes sequentially.
3. While the search is active, you can press **[VOL+]** or **[VOL-]** to adjust the code value. Each press will update the code. If the **[POWER]** key does not have a code value, the remote will send the **[PLAY]** code.
4. Once your device responds (e.g., turns off or changes volume), press the corresponding device key (e.g. **[TV]**, **[STR]**, **[AUD]**) to save the code and exit. The indicator light will turn off.
5. Alternatively, press **[SET]** to flash the light 5 times and exit the search process. During the search, you can test other key functions to confirm compatibility.

Note: A code table is included with the packaging. If lost, please contact customer support for an electronic version.

COMPATIBILITY

The Pairtty Universal Remote Control is designed for broad compatibility with various audio and video devices. It can control up to three devices simultaneously.

Universal Remote Compatible Devices



Sound Bar Audio



TVs



DVD/Blu-ray players

Media
Steaming
Players

Image: The Pairtty Universal Remote Control displayed alongside various compatible device types, including Sound Bar Audio, TVs, DVD/Blu-ray players, and Media Streaming Players.

Supported Device Types:

- Televisions (TVs)
- DVD/Blu-ray Players
- Streaming Media Players
- Sound Bars
- Digital Converter Boxes
- TV DVD VCR COMBO units
- Audio devices

Compatible TV Brands (Examples):

Universal Replacement Remote Control!

For Thousands of Audio and Video Devices

Compatible with Most Brands:

For Samsung

For Philips /For Hisense

For Emerson / For Insignia

For Sharp / For JVC

For Vizio / For Sony

For TCL / For Roku

For RCA / For Onn

For Toshiba, Etc.



Image: The Pairtty Universal Remote Control shown next to a list of compatible brands, including Samsung, Philips, Hisense, Emerson, Insignia, Sharp, JVC, Vizio, Sony, TCL, Roku, RCA, Onn, and Toshiba.

- Samsung, Philips, Panasonic, Sharp, TCL, Vizio, Sony, Sanyo, Sansui, Toshiba, Magnavox, Hisense, JVC, RCA, Roku, Hitachi, Emerson, Westinghouse, Skyworth, Vestel, Seiki, and most other Smart TV brands.

Known Incompatibilities:

- Roku Streaming Sticks
- Roku Sound Bar
- TCL Sound Bar
- Hisense Sound Bar
- All TV Sticks
- All FR TV
- All TV Cube

If you are unsure about your TV model or device's compatibility, please contact customer support for assistance.

OPERATING INSTRUCTIONS

After successful programming, select the desired device mode (TV, STR, AUD) by pressing the corresponding button at the top of the remote. Then, use the remote's buttons to control your device as you would with its original remote.

- **Power On/Off:** Press the **[POWER]** button.
- **Change Channels:** Use **[CH+]** or **[CH-]**. For direct channel entry, use the number pad and then **[ENTER]** if required by your device.
- **Adjust Volume:** Use **[VOL+]** or **[VOL-]**.
- **Access Menus:** Press the **[MENU]** button, then use the navigation arrows and **[OK]** to browse. Press **[EXIT]** to leave the menu.
- **Switch Inputs:** Press the **[INPUT]** button to cycle through available inputs.
- **Streaming Apps:** Use the **[APP]** hotkey to access smart TV applications.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA alkaline batteries are correctly installed with proper polarity.
 - Reinstall the batteries.
 - Reprogram the remote control using either the 4-digit code or automatic search method.
 - Ensure there are no obstructions between the remote and the device's IR receiver.
 - Confirm the correct device mode (TV, STR, AUD) is selected.
- **Some buttons not working:**
 - The programmed code might not be fully compatible with all functions of your specific device. Try a different code from the code table if available, or use the automatic search method.
 - Ensure the remote is pointed directly at the device.
- **Indicator light flashes twice and exits during code entry:**
 - This indicates an incorrect 4-digit code was entered. Verify the code and try again.
- **Remote is less sensitive:**
 - Replace the batteries with new AAA alkaline batteries.

SPECIFICATIONS

Brand	Pairtty
Model	Universal TV Remote Control (ASIN: B0FQ4S7V8V)
Color	Black
Power Source	2 x AAA Alkaline Batteries (not included)
Max Supported Devices	3
Special Feature	Universal, No Programming Required (for some direct use cases)
Item Weight	2.08 ounces
Package Dimensions	7.83 x 3.39 x 1.1 inches

SUPPORT AND WARRANTY

For further assistance, troubleshooting, or to request an electronic version of the code table and instructions, please contact Pairtty customer support.

Information regarding specific warranty terms is not provided in the product details. Please refer to the product packaging or contact the seller directly for warranty details.

© 2025 Pairtty. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reprogram my Pairtty Universal TV Remote Control for a Vizio TV if it does not have a button labeled 'Setup'?

On the Pairtty Universal TV Remote Control, the button used for programming is labeled as [SET] rather than "Setup." If you are trying to program the remote for your Vizio TV, please follow these...

[Read full answer](#)