

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Jocoevol](#) /

› [Jocoevol Pellet Smoker Grill \(Model: Smoker Grill\) Instruction Manual](#)

Jocoevol Smoker Grill

Jocoevol Pellet Smoker Grill User Manual

Model: Smoker Grill (ASIN: B0GRZJW3DH)

1. IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before operating your Jocoevol Pellet Smoker Grill. Failure to follow these instructions could result in property damage, bodily injury, or even death. Keep this manual for future reference.

- **Outdoor Use Only:** This appliance is designed for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Clearance:** Maintain a minimum distance of 10 feet (3 meters) from combustible materials.
- **Electrical Safety:** Ensure the power cord is not damaged and is connected to a grounded outlet. Do not operate in wet conditions.
- **Pellet Fuel:** Use only food-grade wood pellets. Do not use charcoal, lighter fluid, or other fuels.
- **Hot Surfaces:** The grill surfaces become extremely hot during operation. Use heat-resistant gloves and avoid direct contact.
- **Children and Pets:** Keep children and pets away from the grill during operation and while it is cooling down.

2. SETUP AND ASSEMBLY

Your Jocoevol Pellet Smoker Grill requires some assembly before first use. Follow these steps carefully.

2.1 Unpacking and Inspection

- Carefully remove all components from the packaging.
- Inspect all parts for damage. If any parts are damaged or missing, do not proceed with assembly. Contact customer support.
- Retain packaging materials until assembly is complete and the grill is confirmed to be working correctly.

2.2 Assembly Instructions

Refer to the included assembly diagram for detailed steps. General assembly involves attaching the legs, wheels, side shelves, and internal components.



Figure 2.2.1: Exploded view of the Jocoevol Pellet Smoker Grill, showing various components and their assembly points. This image illustrates the main body, hopper, control panel, legs, wheels, and side shelves.

2.3 Initial Burn-In Procedure

Before cooking food, perform an initial burn-in to remove any manufacturing oils or residues.

1. Fill the pellet hopper with food-grade wood pellets.
2. Plug the grill into a grounded electrical outlet.
3. Turn the grill on and set the temperature to 350°F (175°C).
4. Allow the grill to run for at least 45 minutes.
5. Turn off the grill and let it cool completely.

3. OPERATING INSTRUCTIONS

Learn how to effectively use your Jocoevol Pellet Smoker Grill for various cooking methods.

3.1 Pellet Loading

The grill features a 20-lb (5.5 kg) pellet hopper. Ensure the hopper is adequately filled before starting a cook, especially for long smoking sessions.



Figure 3.1.1: The Jocoevol Pellet Smoker Grill with its hopper open, showing the wood pellets inside. The image also highlights the temperature control panel and the cooking area.

3.2 Powering On and Temperature Control

The grill uses advanced PID temperature control to maintain a consistent temperature range of 180-425°F (82-218°C).

1. Ensure the grill is plugged in.
2. Press the power button to turn on the grill.
3. Use the temperature dial to select your desired cooking temperature. The digital display will show the current internal temperature.
4. Allow 10-15 minutes for the grill to reach the set temperature.



Figure 3.2.1: A detailed view of the Jocoevol Pellet Smoker Grill's control panel, featuring the temperature display, adjustment dial, and power switch. This panel allows precise temperature management.

3.3 Cooking Functions (6-in-1 Versatility)

Your Jocoevol grill offers multiple cooking functions:

- **Smoking:** Use lower temperatures (180-225°F) for slow cooking and infusing rich wood-fired flavor.
- **Grilling:** Higher temperatures (350-425°F) are ideal for searing and grilling.
- **Baking/Roasting:** The consistent temperature control allows for baking and roasting various foods.
- **Braising/BBQ:** Achieve tender results with longer cooks at moderate temperatures.



Figure 3.3.1: The interior of the Jocoevol Pellet Smoker Grill, showcasing ribs, potatoes, and tomatoes cooking on the grates. Smoke is visible, indicating active smoking or grilling.

3.4 Shutting Down the Grill

Always follow the proper shutdown procedure to ensure safety and longevity of your grill.

1. Turn the temperature dial to the 'OFF' position or press the power button.
2. The grill will enter a cool-down cycle, which typically takes 10-15 minutes. Do not unplug the grill during this cycle.
3. Once the cool-down cycle is complete, the grill will automatically shut off. You can then unplug it.

4. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the life of your grill.

4.1 Cleaning the Grill Grates

After each use, allow the grill to cool, then clean the enamel-coated grill grates with a grill brush. For stubborn residue, use warm soapy water.

4.2 Grease Management

The grill is equipped with a grease bucket to collect drippings. Regularly empty and clean the grease bucket to prevent flare-ups and maintain hygiene.



Figure 4.2.1: An image highlighting various features of the Jocoevol Pellet Smoker Grill, including a close-up of the grease bucket located on the side, designed for easy removal and cleaning.

4.3 Hopper Cleanout

If the grill will not be used for an extended period, it is recommended to empty the pellet hopper. Use the discharge port to release unused pellets into a bucket.



Figure 4.3.1: A close-up view of the pellet hopper cleanout mechanism on the Jocoevol Pellet Smoker Grill. This feature allows for easy removal of unused pellets, preventing moisture absorption and extending pellet life.

4.4 Exterior Cleaning and Storage

Clean the exterior with a damp cloth. For long-term storage, ensure the grill is clean, dry, and covered with the provided rain cover.



Figure 4.4.1: The Jocoevol Pellet Smoker Grill covered with its 420D waterproof Oxford fabric cover, demonstrating protection against water, UV, dust, and snow. This ensures durability and longevity for outdoor storage.

5. TROUBLESHOOTING GUIDE

This section addresses common issues you might encounter with your pellet smoker grill.

Problem	Possible Cause	Solution
Grill not powering on	No power, tripped breaker, faulty cord	Check power connection, reset breaker, inspect power cord for damage.
Temperature inconsistent	Low pellet level, dirty temperature probe, extreme weather	Ensure hopper is full, clean temperature probe, use grill in sheltered area if possible.

Problem	Possible Cause	Solution
No smoke production	No pellets, auger jam, igniter issue	Check pellet level, clear any auger obstructions, contact support if igniter is suspected.
Excessive smoke	Wet pellets, too much airflow restriction	Use dry pellets, ensure exhaust is clear.

6. PRODUCT SPECIFICATIONS

Detailed technical specifications for the Jocoevol Pellet Smoker Grill.

Feature	Specification
Brand	Jocevol
Model Name	Smoker Grill
Power Source	Electric
Color	Red
Outer Material	Stainless Steel
Item Weight	90 Pounds (40.8 kg)
Product Dimensions (D x W x H)	28.7"D x 46.1"W x 40.5"H (72.9cm x 117.1cm x 102.9cm)
Fuel Type	Wood Pellets
Cooking Area	456 Sq. In. (2942 sq. cm)
Temperature Control Range	180-425°F (82-218°C)
Hopper Capacity	20 lbs (5.5 kg)

LONG-LASTING DESIGN



Figure 6.1.1: Dimensional drawing of the Jocoevol Pellet Smoker Grill, illustrating its overall height, width, and depth, along with key component measurements for planning placement.

7. WARRANTY AND CUSTOMER SUPPORT

For any questions, concerns, or warranty claims, please contact Jocoevol customer support.

7.1 Return Policy

This product is eligible for a 30-day return policy (refund/replacement) from the date of purchase. Please refer to your retailer's specific return guidelines.

7.2 Contact Information

For assistance, please visit the official Jocoevol store or contact their customer service department. Keep your purchase receipt and product model information (Smoker Grill, ASIN: B0GRZJW3DH) handy when contacting support.

