

[Manuals.plus](#) /

› [Vozascly](#) /

› Vozascly W12SE Cordless Wet Dry Vacuum Cleaner User Manual

Vozascly W12SE

Vozascly W12SE Cordless Wet Dry Vacuum Cleaner User Manual

Model: W12SE

INTRODUCTION

Thank you for choosing the Vozascly W12SE Cordless Wet Dry Vacuum Cleaner. This 2-in-1 device is designed to simplify your cleaning routine by vacuuming and washing floors simultaneously. It features self-cleaning capabilities, anti-tangle hair technology, and electrolytic disinfection for a hygienic home environment. Please read this manual carefully before use to ensure proper operation and maintenance.

INCLUDED COMPONENTS


The Vozascly W12SE package includes the following items:

- Vozascly W12SE Main Unit
- Charging Dock
- Floor Brush (pre-installed)
- Crevice Nozzle
- User Manual

Pulisce Sporco Secco e Umido in Un Solo Passo

Adatto ai Tipici Pavimenti Duri di Europa e Nord America

Compatibile con:

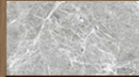

Piastrelle



Marmo



Legno



Laminato



Image: Visual guide for assembling the main unit and its components.

SETUP AND INITIAL USE

1. **Assembly:**

Carefully unpack all components. Insert the handle into the main body until it clicks into place. Ensure the clean water tank and dirty water tank are correctly installed.

2. **Charging:**

Place the vacuum cleaner on the charging dock. Connect the power adapter to the dock and a power outlet. Allow the device to fully charge before first use. The battery indicator will show charging status.

3. **Filling the Clean Water Tank:**

Remove the clean water tank (600ml capacity). Fill it with clean tap water. For enhanced cleaning, you may add a small amount of non-foaming floor cleaning solution suitable for wet vacuums. Do not overfill. Reattach the tank securely.



Image: Illustration of the 600ml clean water tank and 550ml dirty water tank.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button to turn the device on or off. The device will typically start in a combined vacuum and wash mode.

Cleaning Modes

The Vozascly W12SE offers versatile cleaning for various sealed hard surfaces including hardwood, tiles, marble, and laminate. It can also handle light cleaning on carpets (dry vacuuming).

- **Wet & Dry Vacuuming (2-in-1):** This mode simultaneously vacuums dry debris and washes the floor with water from the clean water tank. It is suitable for most daily cleaning tasks. You can adjust the water quantity dispensed to

suit your needs.

- **Dry Vacuuming Only:** For dry debris or light carpet cleaning, the device can be used in a dry vacuum mode. Refer to the device's display or voice prompts for mode selection.



Regolazione di 2 modalità

aspirazione e strofinamento, e solo aspirazione

Image: The vacuum cleaner in action, showing both wet floor washing and dry debris vacuuming modes.



Pulisce tutti i tipi di superfici sigillate

Per pavimenti duri, piastrelle, pietra, laminato e tappeti.

Image: The device effectively cleaning paw prints, coffee grounds, spilled noodles, and crumbs on hard floors and carpet.

Electrolytic Disinfection

Upon activation, the wet vacuum produces disinfected water, achieving a 99.9% germ reduction rate during cleaning. This feature helps ensure hygienic floors.

Self-Propelled Brush Roll

The self-propelled brush roll assists in moving the vacuum cleaner forward and backward, making operation easier and reducing physical effort.



Rullo spazzola semovente

Il rullo della spazzola semovente rende più rilassato lo spostamento
in avanti o indietro

Image: Visual representation of the self-propelled brush roll assisting movement during cleaning.

Battery Life

The device offers up to 45 minutes of battery life on a single charge, allowing you to clean areas up to 150 m² (approximately 1600 sq ft).



Pulisci Tutta La Tua Casa Con Una Sola Carica

Nessuna Interruzione, Solo Risultati Puliti

Image: The vacuum cleaner in a living room setting, highlighting its 45-minute runtime and ability to clean up to 150 m².

MAINTENANCE

Automatic Self-Cleaning

After each use, place the vacuum cleaner on its charging dock. Press and hold the "Auto Clean" button for 2 seconds to activate the self-cleaning mode. The device will automatically clean the brush roll and internal tubes. This process typically lasts about 45 minutes, depending on battery charge and cleaning mode. The device will stop automatically when the battery is depleted or the dirty water tank is full. You can manually stop it by briefly pressing the power button.



Autopulizia Senza Mani

Risparmia Tempo Con Il Rullo E Il Tubo Autopulenti

Image: A user activating the self-cleaning function on the Vozascly W12SE while it is docked.

Manual Cleaning (Recommended)

While the self-cleaning function is effective, it is highly recommended to manually clean the brush roll, dirty water tank, and any parts in contact with dirty water after each use to prevent odors and ensure optimal performance. The device features an anti-tangle hair design, but occasional manual removal of tangled hair from the brush roll may be necessary.

- **Dirty Water Tank:** Empty and rinse the dirty water tank (550ml capacity) thoroughly with clean water after every use.
- **Brush Roll:** Remove the brush roll and rinse it under running water. Ensure all debris and hair are removed. Allow it to air dry completely before reinserting.
- **HEPA Filter:** The device uses a HEPA filter. Clean the filter regularly according to the instructions provided in the full manual (not available here) and replace it periodically to maintain suction efficiency.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Leaves streaks or residue on the floor.	◦ Excessive detergent. ◦ Residue from previous cleaning methods. ◦ Dirty brush roll or dirty water tank.	◦ Use less detergent or clean with only water for a few cycles. ◦ Ensure brush roll and dirty water tank are clean. ◦ Adjust water quantity settings.
Unpleasant odors from the device.	◦ Insufficient cleaning of dirty water tank or brush roll. ◦ Mold formation due to moisture.	◦ Perform thorough manual cleaning of the dirty water tank, brush roll, and all parts in contact with dirty water after each use. ◦ Ensure components are completely dry before reassembly.
Device stops unexpectedly.	◦ Low battery. ◦ Dirty water tank is full. ◦ Obstruction in the brush roll or suction path.	◦ Recharge the device. ◦ Empty the dirty water tank. ◦ Check and clear any obstructions from the brush roll and suction inlet.
Voice prompts are in English and not adjustable.	This is a design feature.	The device currently supports voice prompts only in English. There is no option to change the language, adjust volume, or disable this feature. Voice prompts provide operational feedback such as "Started," "Tank Full," "Cleaning Completed."

SPECIFICATIONS

Feature	Detail
Model Name	W12SE

Feature	Detail
Brand	Vozascly
Special Features	Cordless, 2-in-1 (Vacuum & Wash), Self-Cleaning, Anti-Tangle Hair, Electrolytic Disinfection
Filter Type	HEPA Filter
Recommended Surfaces	Hardwood, Ceramic Tiles, Marble, Laminate
Power Source	Battery Powered
Clean Water Tank Capacity	600 ml
Dirty Water Tank Capacity	550 ml
Battery Life / Run Time	Up to 45 minutes
Item Weight	5.75 Kilograms
Color	Black
Included Components	Charging Dock, Floor Brush, Crevice Nozzle

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Vozascly customer service through the retailer where you purchased the device. Keep your purchase receipt as proof of purchase.

© 2023 Vozascly. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question