

U-MAX SS13080UBR

U-MAX Mid-Century Accent Chair Instruction Manual

Model: SS13080UBR | Brand: U-MAX

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Always follow assembly instructions precisely to ensure structural integrity.
- This chair weighs approximately 12.16 kg (26.8 lbs). Exercise caution and seek assistance when lifting or moving to prevent injury.
- The maximum weight capacity for this chair is 150 kg (330 lbs). Do not exceed this limit.
- Keep all small parts and packaging materials away from children and pets to avoid choking hazards.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not stand on the chair or use it as a step stool.
- Avoid placing the chair near open flames or excessive heat sources.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Chair Frame Components (Arms, Backrest, Seat Base)
- Seat Cushion
- Back Cushion / Pillow
- Hardware Pack (Screws, Allen Wrench)

3. ASSEMBLY INSTRUCTIONS

Assembly typically requires one person and approximately 15-30 minutes. A soft, clean surface is recommended for assembly to prevent scratching components.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a protected surface.
2. **Attach Side Frames:** Identify the left and right armrest frames. Align them with the seat base and backrest frame. Secure using the provided screws and Allen wrench. Ensure screws are inserted correctly; if a screw does not fit, try swapping the armrest sides.

3. **Tighten All Fasteners:** Once all frame components are loosely assembled, gradually tighten all screws until secure. Do not overtighten.
4. **Place Cushions:** Position the seat cushion onto the seat base. Place the back cushion/pillow against the backrest.
5. **Final Check:** Gently rock the chair to ensure stability. If any wobbling occurs, re-check all connections and tighten screws as necessary.



Figure 3.1: Product Dimensions and Weight Capacity. This image illustrates the overall dimensions of the chair and its maximum weight capacity.

HIGH DENSITY SPONGE



High rebound sponge rebound performance is superior,
long time sitting is not easy to deformation
and collapse.

Figure 3.2: Product Detail. This image highlights key features such as cushion thickness, removable cover, and foot protection.

4. OPERATING INSTRUCTIONS

The U-MAX Accent Chair is designed for comfortable seating in various indoor environments.

- **Seating:** Sit gently on the chair, distributing your weight evenly. The ergonomic design provides support for relaxation.
- **Placement:** Position the chair on a flat, stable surface. The anti-slip felt foot padding helps protect floors.
- **Movement:** When moving the chair, lift it rather than dragging to prevent damage to the chair or your flooring.



Figure 4.1: U-MAX Accent Chair in a Living Room. This image shows the chair in a typical usage environment.

5. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your U-MAX Accent Chair.

- **Faux Leather Upholstery:**

- Wipe spills immediately with a clean, dry cloth.
- For general cleaning, use a soft, damp cloth with mild soap and water. Avoid harsh chemicals or abrasive cleaners.
- Do not expose to direct sunlight for prolonged periods to prevent fading and material degradation.

- **Wood Frame:**

- Wipe the wood frame with a soft, dry cloth.
- Avoid using silicone-based polishes or cleaners, as they can build up over time.

- **Cushions:** The pillow cover is removable via zipper for easy cleaning. Follow care instructions on the label if available.

- **Hardware:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten as needed to maintain stability.

6. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common solutions:

Problem	Possible Cause	Solution
Chair is wobbly or unstable.	Loose screws or uneven assembly.	Ensure all screws are fully tightened. Place the chair on a flat surface and apply gentle pressure to each corner to identify and correct any unevenness.
Screws do not fit during assembly.	Incorrect orientation of parts (e.g., left armrest on right side).	Verify that all components are oriented correctly according to the assembly steps. Try swapping the left and right armrest frames.
Squeaking noises.	Loose connections or friction between parts.	Re-tighten all screws. If squeaking persists, apply a small amount of silicone lubricant to the joints.

7. SPECIFICATIONS

Brand	U-MAX
Model Number	SS13080UBR
Colour	Brown
Material	Faux Leather (Upholstery), Walnut Wood (Frame)
Product Dimensions (Overall)	74.9 cm (D) x 64.7 cm (W) x 73 cm (H) / 29.5" (D) x 25.5" (W) x 28.75" (H)
Item Weight	12.16 kg (26.8 lbs)
Maximum Weight Capacity	150 kg (330 lbs)
Special Feature	Arm Rest, Removable Cushion Cover
Back Style	Mid Back



Figure 7.1: High-Density Sponge Detail. This image illustrates the quality of the cushion's internal material.

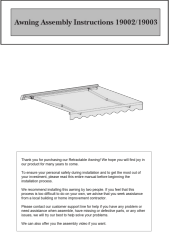




8. WARRANTY INFORMATION

Specific warranty details for the U-MAX Accent Chair (Model SS13080UBR) are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product listing on the retailer's website or contact U-MAX customer support directly.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact the retailer where you purchased the product or visit the official U-MAX website for support contact information. For general inquiries, you may also visit the U-MAX store page on Amazon: [U-MAX Store on Amazon](#)

Related Documents - SS13080UBR

	<p>Retractable Awning Assembly Instructions 19002/19003</p> <p>Detailed assembly instructions for U-MAX Retractable Awning models 19002 and 19003. Covers safety precautions, parts list, step-by-step assembly guide, tool requirements, specifications, wall mounting, and common mistakes.</p>
	<p>UMAX U-Box N42 Mini-PC User Manual</p> <p>User manual for the UMAX U-Box N42 mini-PC. Learn about setup, extending storage, VESA mount installation, and Windows 10 tips.</p>
	<p>UMAX U-Box N51 Pro User Manual</p> <p>This user manual provides comprehensive information on the UMAX U-Box N51 Pro mini PC, covering its overview, turning on the device, power supply, storage and memory upgrades, VESA mount usage, Windows tips, keyboard shortcuts, and safety information. Learn about the ports, specifications, and safe operation of your UMAX mini PC.</p>
	<p>UMAX U-Band 130Plus HR Color: User Manual and Features</p> <p>Discover the UMAX U-Band 130Plus HR Color fitness tracker. This guide covers its features, connectivity, activity tracking, heart rate monitoring, and more.</p>
	<p>UMAX U-BAND P2 Smartwatch User Manual and Features Guide</p> <p>Comprehensive guide to the UMAX U-BAND P2 smartwatch, covering setup, features like heart rate monitoring, activity tracking, sleep monitoring, and app connectivity. Learn how to use your UMAX U-BAND P2 effectively.</p>



[UMAX U-Box A15 Pro User Manual](#)

User manual for the UMAX U-Box A15 Pro mini PC, providing comprehensive instructions on setup, operation, maintenance, and safety precautions. Available in multiple languages.