

[manuals.plus](#) /

› [FUNMILY](#) /

› [FUNMILY Upgrade Walking Pad Folding Treadmill User Manual](#)

## **FUNMILY FUNMILY Upgrade Walking Pad Folding Treadmill**

# **FUNMILY Upgrade Walking Pad Folding Treadmill User Manual**

**MODEL: FUNMILY UPGRADE WALKING PAD FOLDING TREADMILL**

## **1. Introduction**

This manual provides essential information for the safe and effective operation and maintenance of your FUNMILY Upgrade Walking Pad Folding Treadmill. Please read this manual thoroughly before initial use and retain it for future reference. This versatile fitness equipment is designed for various exercise needs, functioning as an under-desk walking pad, a traditional treadmill, and offering incline training capabilities with a reinforced handle bar.



*Image: The FUNMILY Walking Pad Folding Treadmill in both its upright position with a handle bar and its flat, under-desk configuration.*

## 2. Important Safety Instructions

- Always consult with a physician before starting any exercise program.
- Place the treadmill on a flat, stable surface with adequate clearance around it.
- Ensure the safety key is properly attached before operating the treadmill.
- Do not operate the treadmill if it is damaged or malfunctioning.
- Keep children and pets away from the treadmill during operation.
- Wear appropriate athletic footwear and clothing.
- Do not step on or off the treadmill while the belt is moving.
- Use the handle bar for stability, especially when adjusting speed or incline.
- Unplug the treadmill from the power outlet when not in use or before cleaning/maintenance.

### 3. Package Contents

Verify that all components are present upon unboxing:

- FUNMILY Walking Pad Treadmill (x1)
- Mobile Support (x1)
- Remote Control (x1)
- Lubricating Oil (x1)
- Safety Key (x1)
- Screws (x4)
- Wrench (x1)
- User Manual (x1)

### 4. Setup

#### 4.1 Unboxing and Initial Assembly

Carefully remove all components from the packaging. The treadmill comes largely pre-assembled. The main step is to secure the handle bar.

1. Lift the handle bar to its upright position.
2. Align the holes on the handle bar with the corresponding holes on the treadmill base.
3. Insert the provided screws and tighten them securely with the wrench.
4. Attach the mobile support/device holder to the top of the handle bar.

# 12% INCLINE WALKING PAD = 100% BURNS MORE CALORIES

Enjoy Outdoor Adventure



*Image: A user securing the handle bar to the treadmill base during assembly.*

## 4.2 Adjusting Incline

The treadmill features a 2-level manually adjustable incline system. To adjust, locate the adjustable feet at the rear of the treadmill. Lift the treadmill slightly and pivot the feet to the desired position for either a flat or inclined workout.

## 4.3 Power Connection

Plug the power cord into a grounded electrical outlet. Turn on the main power switch located on the treadmill base.

## 4.4 Setup Demonstration Video

Your browser does not support the video tag.

*Video: An unboxing and demonstration of the FUNMILY Walking Treadmill, showing the assembly process and initial setup steps.*

## 5. Operating Instructions

## 5.1 Powering On/Off

After connecting to power and turning on the main switch, the LED display will illuminate. Press the power button on the remote control to start or stop the treadmill.

## 5.2 Using the Remote Control

The remote control allows you to adjust speed, start/stop, and switch between exercise modes. Use the '+' and '-' buttons to increase or decrease speed. The 'M' button cycles through different modes.

## 5.3 LED Display

The multi-function LED display clearly shows real-time data including time, calories burned, current speed, and distance covered during your workout.



*Image: The treadmill's LED display showing various workout metrics and the remote control for operation.*

## 5.4 Exercise Modes

The treadmill supports various exercise modes, including walking, jogging (up to 4.0 MPH), and incline walking. The handle bar can be used for support or folded down for under-desk use.

## 5.5 Operating Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the foldable walking pad with incline, showcasing its operational features and different modes.

## 6. Key Features

### 6.1 4-in-1 Multi-Function Design

This treadmill combines the functionality of an under-desk walking pad, a traditional treadmill, an incline trainer, and a treadmill with a safety handle bar, adapting to various fitness routines and spaces.



*Image: The treadmill demonstrating its 4-in-1 versatility, including under-desk use and upright use with a handle bar.*

### 6.2 12% Max Incline Training

Manually adjust the incline up to 12% to simulate uphill walking, engaging specific muscle groups (glutes, calves, core) and potentially burning more calories compared to flat walking.

## UNDER DESK TREADMILL



## TREADMILL WITH HANDLE BAR

*Image: A user on the treadmill with a visual representation of the 12% incline and its effect on calorie expenditure.*

### 6.3 Enhanced Safety Handle Bar

The reinforced handle bar provides balanced support and stability, reducing the risk of falls and redistributing body weight to protect knees and joints during exercise.

# YOUR PERFECT RUNNING PARTNER: SPACIOUS, STRONG, AND STEADY



PVC MATERIALS



✗ OTHERS WALKING PAD



ALLOY MATERIALS



✓ OUR WALKING PAD

*Image: A user demonstrating the use of the handle bar for enhanced safety and support on the treadmill.*

## 6.4 16" Widened Belt with 7-Layer Shock Absorption

The extra-large 16-inch running surface offers ample space for comfortable workouts. Its 7-layer high-tech dual rebound shock absorption system minimizes pressure on joints, ensuring comfort.

# ANTI-SLIP SHOCK-ABSORBING WALKING TREADMILL:

## Protect Your Knee Health



7-Layers  
Non-Slip Running Belt



Knee Protection  
Shock Absorption



Low Noise No  
Disturb Others



*Image: A detailed view of the treadmill's 7-layer shock-absorbing running belt, emphasizing joint protection.*

### 6.5 Powerful and Quiet 3.5HP Motor

Equipped with a robust 3.5HP motor, the treadmill provides smooth and consistent performance. Its low-noise operation (under 45dB) allows for use in various environments without disturbance.

### 6.6 Easy to Move & Store

The foldable design and built-in wheels make the treadmill easy to move and store in compact spaces, such as under a sofa or bed, making it ideal for home or office use.

## EASY TO MOVE & STORE – FITS ANYWHERE!



*Image: The treadmill being easily folded and stored, showcasing its space-saving design and built-in wheels.*

### 6.7 Feature Demonstration Video

Your browser does not support the video tag.

*Video: A comprehensive review demonstrating the 4-in-1 functionality, incline options, and portability of the treadmill.*

## 7. Maintenance

### 7.1 Cleaning

Regularly wipe down the treadmill with a damp cloth to remove dust and sweat. Avoid using abrasive cleaners or solvents.

### 7.2 Lubrication

The running belt requires periodic lubrication to ensure smooth operation and prolong its lifespan. Apply the provided lubricating oil under the belt as instructed in the separate lubrication guide (if included) or as recommended by the manufacturer, typically every few months depending on usage.

## 7.3 Belt Adjustment

If the running belt shifts to one side or feels loose, it may need adjustment. Refer to the specific instructions in the full user manual for proper belt centering and tensioning procedures using the provided wrench.

## 8. Troubleshooting

- Treadmill not powering on:** Ensure the power cord is securely plugged into a working outlet and the main power switch is in the 'ON' position. Check the remote control battery.
- Belt not moving:** Verify the safety key is correctly placed. Ensure the remote control is paired and the start button has been pressed.
- Unusual noise or squeaking:** Check for proper lubrication of the running belt. Ensure all assembly screws are tightened. If the noise persists, contact customer support.
- Belt slipping or uneven movement:** The running belt may require tensioning or centering. Refer to the maintenance section or the full user manual for adjustment instructions.

## 9. Specifications

Feature	Detail
Product Dimensions (LxWxH)	54"D x 25.99"W x 5.9"H
Material	Metal, Rubber, Plastic
Weight Capacity	400+ lbs
Motor Power	3.5 HP
Running Surface Width	16 inches
Incline Levels	2-level manual (up to 12%)
Speed Range	0.6 - 4.0 MPH
Noise Level	< 45 dB

## 10. Warranty and Support

Specific warranty details are not provided within this manual. For warranty information, customer support, or to inquire about replacement parts, please refer to the product packaging or contact FUNMILY customer service directly. The treadmill is certified by SGS to meet CE, RoHS, CB, EN 957, and IEC standards, ensuring product quality and safety.

