

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [V-Guard](#) /

› [V-Guard VIC01 V2 1200 Watt Induction Cook-top User Manual](#)

V-Guard VIC01 V2

V-Guard VIC01 V2 1200 Watt Induction Cook-top User Manual

Model: VIC01 V2

1. INTRODUCTION

Thank you for choosing the V-Guard VIC01 V2 Induction Cook-top. This appliance is designed for efficient and convenient cooking with its 1200 Watt power, digital display, and soft switch controls. Please read this manual thoroughly before operating the cook-top to ensure safe and optimal performance. Keep this manual for future reference.



Image: The V-Guard VIC01 V2 Induction Cook-top, showcasing its sleek black design and control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause

injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure proper ventilation around the cook-top during operation.
- Use only induction-compatible cookware.

Ultimate Peace of Mind



3KV Surge
Protection



3 Years Induction
Coil Coverage



Image: Visual representation of key safety features including Cool Touch Surface, Automatic Voltage Regulation, and Aerodynamic Cooling System.

Effortless Maintenance

with Easy-to-Clean Glass Top and Stable Anti-Skid Feet



Image: Icons highlighting 3KV Surge Protection and 3 Years Induction Coil Coverage for enhanced durability and peace of mind.

3. PRODUCT OVERVIEW AND FEATURES

The V-Guard VIC01 V2 Induction Cook-top is equipped with advanced features for a superior cooking experience.

Key Features:

- **1200 Watt Power:** Provides rapid heating for efficient cooking.
- **7 Levels of Power and Temperature Setting:** Offers precise control over cooking intensity.
- **Soft Switch Controls:** User-friendly and durable control panel.
- **4 Digit LED Display:** Clear indication of settings and status.
- **7 Cook Modes:** Pre-programmed settings for various dishes.
- **4 Hour Timer Function:** Allows setting cooking duration.
- **24 Hour Preset Function:** Schedule cooking to start at a later time.

- **Hi-Low Voltage Cut-Off:** Protects the appliance from voltage fluctuations.
- **3 KV Surge Protection:** Safeguards against power surges.
- **Voltage Indicator:** Displays current voltage.
- **Cool Touch Surface:** Enhances safety during and after cooking.
- **Aerodynamic Cooling System:** Ensures fast cooling for extended product life and safety.
- **Pan Sensor:** Detects suitable cookware and prevents operation without a pan.
- **Auto-Off:** Automatically switches off after a period of inactivity or if no pan is detected.
- **Easy-to-Clean Glass Top:** Simplifies maintenance.
- **Stable Anti-Skid Feet:** Provides stability during use.



Image: Overview of smart cooking features including multiple cooking modes, high power, adjustable temperature/power, and pre-set function.

4. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the cook-top from its packaging.
2. Check for any damage during transit. If damaged, do not use and contact customer service.
3. Remove all packaging materials, stickers, and labels from the appliance.

Placement:

- Place the cook-top on a flat, stable, heat-resistant surface.
- Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance from walls or other objects).
- Do not place the cook-top near water sources or heat-sensitive materials.

Power Connection:

- Plug the power cord into a standard 240V AC electrical outlet.
- The cook-top will emit a beep, and the display will briefly light up, indicating it is in standby mode.

5. OPERATING INSTRUCTIONS

Control Panel:



Push Button Control

For Quick & Effortless Cooking



Aerodynamic Cooling System

Fast cooling for longer product life and safety

Image: Close-up of the cook-top's control panel, featuring soft push buttons and a digital display for easy operation.

Basic Operation:

1. Place suitable induction-compatible cookware centrally on the cooking zone.
2. Press the **Power On/Off** button to activate the cook-top. The display will show default settings or '---'.
3. Select a cooking mode or adjust power/temperature manually.
4. To turn off, press the **Power On/Off** button again. The fan may continue to run for a short period to cool down the appliance.

Temperature and Power Settings:

- After turning on, use the '+' and '-' buttons to adjust the power or temperature level.
- The cook-top offers 7 levels of power/temperature, allowing for precise heat control.

Cooking Modes:

The V-Guard VIC01 V2 features 7 versatile cooking modes for different culinary needs. Press the **'Function'** or specific mode buttons to select.

Sit Back And Enjoy

With Hands-free Cooking



Auto-Off



Pan
Sensor



24 Hour
Pre-Set Function



Timer Function

Select the cooking time for
your dish upto 4 hrs



Image: Diagram illustrating the 7 versatile cooking modes available on the cook-top, including Deep Fry, Manual Mode, Chapathi/Dosa, Curry, Idli, Boil, and Milk.

- **Deep Fry:** Optimized for deep frying with stable high temperature.
- **Manual Mode:** Allows full manual control over power/temperature settings.
- **Chapathi/Dosa:** Ideal for flatbreads requiring consistent heat.
- **Curry:** Suitable for simmering and cooking curries.
- **Idli:** Designed for steaming idlis.
- **Boil:** Quick heating to bring liquids to a boil.
- **Milk:** Gentle heating to prevent milk from boiling over.

Timer Function:

- Press the '**Timer**' button to set a cooking duration.
- Use the '+' and '-' buttons to adjust the time, up to 4 hours.
- The cook-top will automatically switch off once the set time expires.

Preset Function:

- The '**Preset**' function allows you to schedule cooking to start at a later time, up to 24 hours.

- Set your desired cooking mode and duration, then activate the preset function and set the delay time.

Pan Detection and Auto-Off:

- The cook-top will only operate when suitable induction-compatible cookware is placed on the cooking zone.
- If no pan is detected or an unsuitable pan is used, an error code may appear, and the cook-top will not heat.
- The appliance features an **Auto-Off** function for safety, switching off after a period of inactivity or if the pan is removed.

6. CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your V-Guard Induction Cook-top.

Cleaning:

1. Always unplug the cook-top from the power outlet and allow it to cool completely before cleaning.
2. Wipe the glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cook-tops.
3. Do not use abrasive pads, harsh chemicals, or scouring agents, as these can damage the surface.
4. Clean the control panel with a soft, damp cloth. Ensure no liquid enters the control panel area.
5. Wipe the exterior housing with a damp cloth.
6. Ensure all parts are thoroughly dry before plugging the appliance back in.

Storage:

- Store the cook-top in a cool, dry place when not in use.
- Avoid placing heavy objects on the cook-top surface during storage.

Enjoy Smart & Effortless Cooking

With V-Guard VIC 1.2 Induction Cooktop



7 Cooking Modes



1200W High Power



7 Temperature & Power Levels



24 Hour Pre-Set Function

Image: Demonstrating effortless maintenance with the easy-to-clean glass top and stable anti-skid feet for secure placement.

Cook Worry-free

With Advance Safety Features



Cool Touch
Surface



Automatic Voltage
Regulation



Aerodynamic
Cooling System



Image: Underside view of the cook-top, illustrating the Aerodynamic Cooling System designed for fast cooling and extended product life.

7. TROUBLESHOOTING

If you encounter any issues with your V-Guard Induction Cook-top, please refer to the following table before contacting customer service.

Problem	Possible Cause	Solution
Cook-top does not turn on.	No power supply; Power cord not plugged in; Main switch off.	Check power outlet; Ensure cord is securely plugged in; Turn on main switch.
Cook-top turns on but does not heat.	Unsuitable cookware; No cookware on the cooking zone; Pan not centered.	Use induction-compatible cookware; Place cookware on the cooking zone; Center the pan properly.

Problem	Possible Cause	Solution
Display shows an error code.	Various issues (e.g., overheating, voltage fluctuation, sensor error).	Refer to the specific error code in the full manual (if available) or unplug and plug back in after a few minutes. Ensure proper ventilation.
Food not cooking evenly.	Cookware base is uneven; Incorrect power/temperature setting.	Use cookware with a flat, thick base; Adjust power/temperature as needed.
Loud fan noise.	Normal operation of cooling fan.	This is normal during and after cooking to cool internal components.

8. TECHNICAL SPECIFICATIONS

Specification	Detail
Model Number	VIC01 V2
Wattage	1200 Watt Hours
Voltage	240 Volts
Heating Elements	1
Controls Type	Push Button, Soft Switch
Special Feature	Digital Display, Hi-Low Voltage Cut-Off, 3 KV Surge Protection
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	12D x 5W x 12H Centimeters
Item Weight	500 Grams
Recommended Uses	Cooking Small Meals & Fast Recipes
Included Components	User Manual
Certifications	BIS Certified Product

9. WARRANTY AND SUPPORT

Warranty Information:

- **1 Year Product Warranty:** The V-Guard VIC01 V2 Induction Cook-top comes with a 1-year warranty covering manufacturing defects from the date of purchase.

- **3 Year Warranty for Induction Coil:** The induction coil specifically is covered by a 3-year warranty.
- Please retain your purchase receipt as proof of purchase for warranty claims.
- The warranty does not cover damage caused by misuse, accident, unauthorized repairs, or normal wear and tear.

Customer Support:

For any queries, service requests, or warranty claims, please contact V-Guard customer support. Refer to the contact information provided in your warranty card or visit the official V-Guard website.