

[manuals.plus](#) /› [SereneLife](#) /› [SereneLife Smart Space Heater SLSPCHTRW3BK User Manual](#)

SereneLife SLSPCHTRW3BK

SereneLife Smart Space Heater User Manual

Model: SLSPCHTRW3BK | Brand: SereneLife

1. INTRODUCTION

Thank you for purchasing the SereneLife Smart Space Heater, Model SLSPCHTRW3BK. This 1500W PTC ceramic electric heater is designed to provide efficient and customizable warmth for your home or office. Featuring a thermostat, remote control, 12-hour timer, and Wi-Fi connectivity, it offers convenient operation and advanced safety features. Please read this manual thoroughly before use to ensure proper operation and safety.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces,

like a bed, where openings may become blocked.

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes a tip-over safety switch and overheat protection for enhanced safety.
- Ensure the child lock feature is engaged when children or pets are present.

3. PRODUCT FEATURES

- **Fast and Efficient Heating:** 1500W PTC ceramic heating element for quick and even heat distribution.
- **Smart Wi-Fi and Remote Control:** Control the heater via a dedicated Wi-Fi app or the included remote control.
- **Advanced Safety Features:** Equipped with overheat protection, tip-over safety, and a child lock.
- **Quiet and Energy Efficient:** Brushless DC motor and winglet fan for low-noise operation. Features a thermostat and ECO mode for optimized energy use.
- **Portable Design:** Lightweight with a built-in carry handle for easy mobility.
- **Multiple Heating Modes:** Offers Power Heat (1500W), ECO mode, and Fan Only mode.
- **Adjustable Thermostat:** Allows temperature settings from 41°F (5°C) to 95°F (35°C).
- **12-Hour Timer:** Program the heater to operate for specific durations.
- **Oscillation Function:** Activate or deactivate the left and right swing function.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your SereneLife Smart Space Heater.

worry-free heating for families



child lock



overheat protection

tip-over protection



Figure 1: Front view of the SereneLife Smart Space Heater, showing the main grille and base.

Warmth Without Distraction



1hr - 12hr
Timer



Low-Noise
Operation



Figure 2: Diagram illustrating the smart touch control panel and its functions, including power, mode, timer, temperature adjustment, and swing.

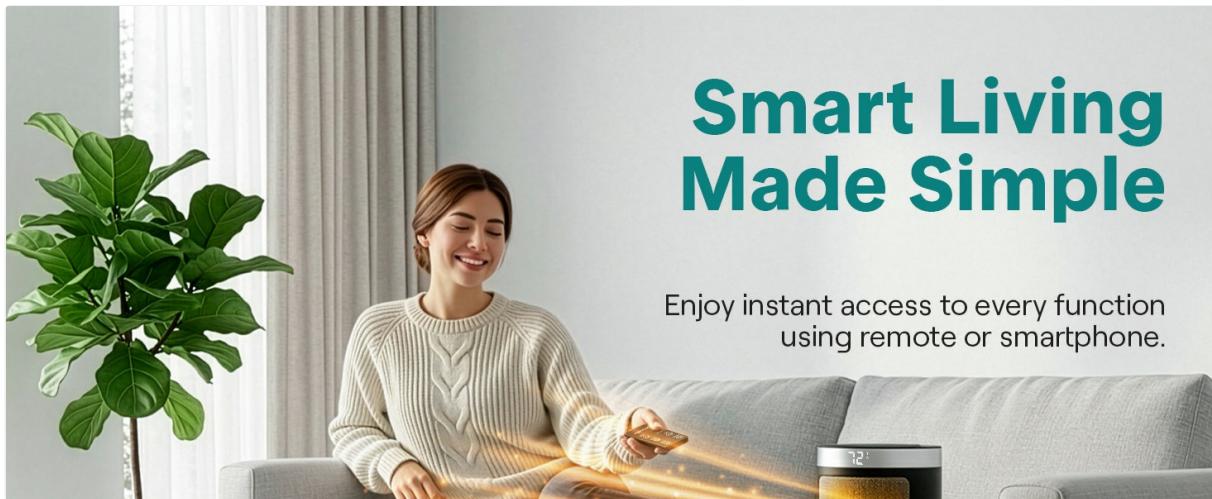


Figure 3: The heater can be controlled via a smartphone app (left) or the included remote control (right).

5. SETUP

- 1. Unpack:** Carefully remove the heater from its packaging. Retain packaging for future storage.
- 2. Placement:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 m) away from walls, furniture, and other combustible materials. Do not place on soft surfaces like rugs or carpets that could block airflow.
- 3. Power Connection:** Plug the power cord directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.
- 4. Initial Check:** Ensure the heater is stable and there are no obstructions around the air intake or exhaust vents.

6. OPERATION

6.1 Control Panel and Remote Control

The heater can be operated using the touch controls on the top panel or the provided remote control.

- **Power Button ():** Press to turn the heater ON or OFF.
- **Mode Button (M):** Cycle through heating modes: Power Heat (HI), ECO, and Fan Only (LO).
- **Temperature Adjustment (+/-):** Increase or decrease the desired temperature. The temperature range is 41°F to 95°F (5°C to 35°C).
- **Timer Button ():** Set the auto-off timer from 1 to 12 hours.
- **Oscillation Button (U):** Activate or deactivate the left and right swing function.

6.2 Heating Modes



Smart Touch Control

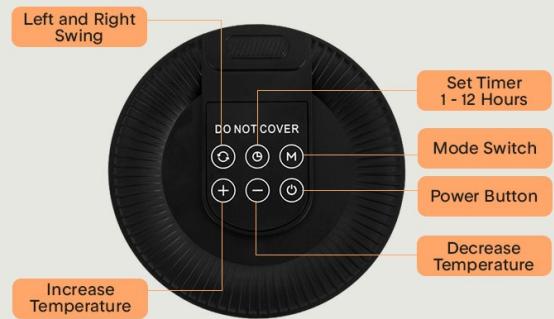


Figure 4: Display indicators for the various operating modes: LO (Low Heat), HI (High Heat), ECO (Energy Saving), and FAN (Fan Only).

- **Power Heat (HI):** Provides maximum heat output at 1500W.
- **ECO Mode:** Automatically adjusts heating power to maintain the set temperature, optimizing energy consumption.
- **Fan Only (LO):** Operates as a fan without heating, suitable for air circulation.

7. Wi-Fi CONNECTIVITY

Control your SereneLife Smart Space Heater from anywhere using the dedicated smartphone application.

1. **Download App:** Search for "SereneLife Smart Home" or a compatible smart home app in your device's app store.
2. **Account Creation:** Follow the in-app instructions to create an account or log in.
3. **Add Device:** Select "Add Device" and choose your SereneLife Smart Space Heater from the list.
4. **Pairing:** Follow the app's prompts to connect the heater to your home Wi-Fi network. This typically involves putting the heater into pairing mode (refer to app for specific instructions).
5. **Control:** Once paired, you can adjust temperature, change modes, set timers, and manage other functions remotely.

8. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles.
- **Storage:** When not in use, store the heater in a cool, dry place, preferably in its original packaging.
- **No Internal Servicing:** Do not attempt to open or service the heater yourself. Refer all servicing to qualified service personnel.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in securely. Power outlet malfunction. Tip-over switch activated. Overheat protection activated.	Ensure the power cord is firmly plugged into a working outlet. Test the outlet with another appliance. Place the heater on a flat, stable surface. Unplug the heater, wait 30 minutes for it to cool, then plug it back in.
Heater produces no heat or insufficient heat.	Incorrect mode selected. Thermostat set too low. Air inlets/outlets blocked.	Ensure "Power Heat" or "ECO" mode is selected. Increase the desired temperature setting. Check and clear any obstructions from the grilles.
Wi-Fi connection issues.	Incorrect Wi-Fi password. Heater too far from router. App not configured correctly.	Verify Wi-Fi password in the app. Move the heater closer to your Wi-Fi router. Restart the app and try the pairing process again. Ensure your router is on a 2.4GHz network.

10. SPECIFICATIONS

- **Model:** SLSPCHTRW3BK
- **Brand:** SereneLife
- **Power Output:** 1500W
- **Voltage:** 120V
- **Amperage:** 12.5 Amps
- **Heating Element:** PTC Ceramic
- **Temperature Range:** 41°F - 95°F (5°C - 35°C)
- **Number of Speeds:** 3 (Power Heat, ECO, Fan Only)
- **Timer:** 1-12 Hours
- **Special Features:** Adjustable Temperature, Wi-Fi Enabled, Remote Control, Overheat Protection, Tip-Over Safety, Child Lock, Oscillation.
- **Product Dimensions:** 5.9"D x 5.9"W x 9.52"H
- **Item Weight:** 2.88 pounds
- **Indoor/Outdoor Usage:** Indoor
- **Form Factor:** Cabinet
- **UPC:** 842893178479

11. WARRANTY AND SUPPORT

For warranty information or technical support, please contact SereneLife customer service. Keep your purchase receipt as proof of purchase.

Visit the official SereneLife website for the most up-to-date support information:[SereneLife Store](#)