

[Manuals.plus](#) /

› [SereneLife](#) /

› SereneLife Smart Space Heater SLSPCHTRW3GY User Manual

SereneLife SLSPCHTRW3GY

SereneLife Smart Space Heater SLSPCHTRW3GY User Manual

Brand: SereneLife

Model: SLSPCHTRW3GY

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your SereneLife Smart Space Heater (Model SLSPCHTRW3GY). Please read this manual thoroughly before use and retain it for future reference. The SereneLife Smart Space Heater is a 1500W PTC ceramic electric heater designed for indoor use in homes and offices. It features a thermostat, remote control, 12-hour timer, and Wi-Fi connectivity for convenient temperature management.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate

heater where it may fall into a bathtub or other water container.

- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes a **Tip-Over Safety Switch** which automatically shuts off the heater if it is tipped over.
- This heater includes an **Overheat Protection System** which automatically shuts off the heater if it overheats.
- The heater also features a **Child Lock** function to prevent accidental changes to settings.

worry-free heating for families



tip-over protection



Image: Safety features including child lock, overheat protection, and tip-over protection are integrated for family safety.

3. PACKAGE CONTENTS

- SereneLife Smart Space Heater (Model SLSPCHTRW3GY)
- Remote Control
- User Manual

4. PRODUCT FEATURES

- **Fast and Efficient Heating:** 1500W PTC ceramic heating element for quick and even heat distribution.
- **Smart Wi-Fi and Remote Control:** Control temperature, set timers, and switch modes via a mobile app or the

included remote.

- **Safe and Reliable Operation:** Equipped with overheat protection, tip-over safety, and a child lock.
- **Quiet and Energy Efficient:** Features a brushless DC motor and winglet fan for low-noise operation. ECO mode and thermostat optimize energy use.
- **Portable Design:** Lightweight with a built-in carry handle for easy mobility.
- **Multiple Heating Modes:** Includes Power Heat, ECO, and Fan Only modes for year-round comfort.
- **Oscillation Function:** Distributes heat across a wider area.

power & comfort on the go

3 heating modes for all
seasons

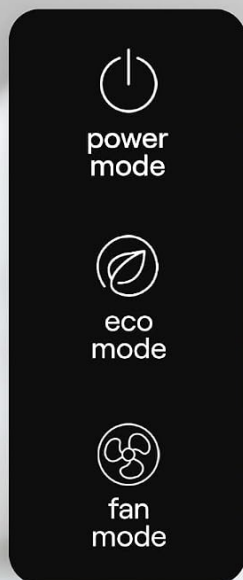


Image: The portable design includes a convenient carry handle and offers three distinct heating modes.

5. SETUP

1. **Placement:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 m) away from any walls, furniture, curtains, or other combustible materials. Do not place it on soft surfaces like rugs or carpets that could block air vents.

2. **Power Connection:** Plug the heater directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.
3. **Initial Power On:** Press the Power button on the control panel or remote control to turn on the heater. The display will show the current room temperature.



Image: Compact design allows for flexible placement in various indoor settings.

6. OPERATING INSTRUCTIONS

Control Panel & Remote Control

The heater can be operated using the touch control panel on top of the unit or the included remote control. The remote control offers the same functions as the touch panel.

Versatile Modes for Personal Comfort



LO MODE

Provides Low Heat at 900W



HI MODE

Provides Low Heat at 1500W



ECO MODE

Automatically Adjusts Temp



FAN MODE

Fan Only

Image: Detailed view of the smart touch control panel on the heater.

smart control anywhere

wi-fi + remote for easy access



Image: Remote control and Wi-Fi app provide convenient control from anywhere.

Functions:

- **Power Button ()**: Turns the heater ON or OFF.
- **Mode Button (M)**: Cycles through heating modes:
 - **LO Mode (900W)**: Provides low heat.
 - **HI Mode (1500W)**: Provides high heat.
 - **ECO Mode**: Automatically adjusts heating power to maintain the set temperature, optimizing energy consumption.
 - **FAN Mode**: Operates as a fan only, without heat.



Image: Various operating modes displayed on the heater's screen.

- **Temperature Up/Down Buttons (+ / -)**: Adjusts the desired temperature setting (41°F to 95°F).
- **Oscillation Button ()**: Activates or deactivates the oscillation function, allowing the heater to rotate and distribute warm air more widely.
- **Timer Button ()**: Sets the auto-off timer from 1 to 12 hours. Each press increases the timer by one hour.

Wi-Fi Connectivity (SereneLife Smart Home App):

1. Download the "SereneLife Smart Home" app from your smartphone's app store.
2. Follow the in-app instructions to pair your heater with your Wi-Fi network.
3. Once connected, you can control all heater functions remotely via the app.

Your browser does not support the video tag.

Video: Demonstration of the SereneLife Smart Space Heater's features and controls, including temperature adjustment and mode selection.

7. MAINTENANCE

- Always unplug the heater before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater.
- Do not use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface.
- Do not immerse the heater in water.
- Clean the air intake and exhaust vents regularly with a vacuum cleaner to remove dust and lint.
- Store the heater in a cool, dry location when not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power switch off; tip-over switch activated; overheat protection activated.	Ensure plug is firmly in outlet; check power switch; place heater on a flat, stable surface; unplug and allow to cool for 30 minutes before restarting.
Heater stops heating unexpectedly.	Overheat protection activated; tip-over switch activated; desired temperature reached in ECO mode.	Unplug and allow to cool; place heater on a flat, stable surface; check set temperature and adjust if needed.
Remote control not working.	Batteries dead; obstruction between remote and heater; remote out of range.	Replace batteries; remove obstructions; ensure remote is within effective range.
Wi-Fi connection issues.	Incorrect Wi-Fi password; weak signal; router issues.	Verify Wi-Fi password; move heater closer to router; restart router; re-pair device in app.

9. SPECIFICATIONS

Brand	SereneLife
Model Number	SLSPCHTRW3GY
Power Output	1500 Watts (High), 900 Watts (Low)
Voltage	120 Volts
Amperage	12.5 Amps
Heating Element	PTC Ceramic
Temperature Range	41°F - 95°F
Timer	1-12 Hours
Dimensions (D x W x H)	5.9" x 5.9" x 9.52"
Item Weight	2.88 pounds
Special Features	Adjustable Temperature, Wi-Fi Enabled, Remote Control, Oscillation, Overheat Protection, Tip-Over Safety, Child Lock, ECO Mode
Indoor/Outdoor Usage	Indoor

10. WARRANTY AND SUPPORT

This SereneLife Smart Space Heater (Model SLSPCHTRW3GY) comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. For warranty claims, technical support, or customer service inquiries, please contact SereneLife customer support through their official website or the contact information provided with your product packaging. Please retain your proof of purchase for warranty validation.