

[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY Farmhouse 7-Drawer Dresser (Model YH-0947-0) Instruction Manual

YESHOMY YH-0947-0

YESHOMY Farmhouse 7-Drawer Dresser Instruction Manual

Model: YH-0947-0

INTRODUCTION

Thank you for choosing the YESHOMY Farmhouse 7-Drawer Dresser. This manual provides essential information for the safe assembly, proper use, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

Your safety is paramount. Please adhere to the following guidelines:

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all hardware is securely tightened before use. Periodically check and re-tighten as necessary.
- Do not allow children to climb on or play with the dresser.
- Always install the anti-tip device provided to prevent serious injury from tipping furniture.
- Distribute weight evenly across drawers. Avoid placing heavy items in top drawers only.
- Do not overload drawers.



Image: Safety Design - Always install the anti-tip device to prevent furniture from tipping over. Do not allow children to climb on the dresser.

PACKAGE CONTENTS

Before assembly, verify that all components are present. If any parts are missing or damaged, please contact customer service.

- Dresser panels (top, bottom, sides, back, drawer fronts)
- 7 Drawer boxes
- Metal handles
- Drawer slide rails
- Assembly hardware (screws, dowels, cam locks, etc.)
- Anti-tip kit
- Instruction manual (this document)
- Tool kit (basic assembly tools may be included)

ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Follow the step-by-step diagrams and instructions provided in the separate assembly guide included in your package. Below are general guidelines and key features to note during assembly.

1. **Unpack and Identify Parts:** Lay out all parts and hardware. Compare them with the parts list in the assembly guide to ensure everything is present.
2. **Assemble the Main Frame:** Begin by connecting the side panels to the bottom and top panels using the specified hardware. Ensure all connections are secure.
3. **Install Drawer Rails:** Attach the drawer slide rails to the dresser frame and to the drawer boxes as indicated in the assembly guide. Ensure they are level and aligned for smooth operation.
4. **Assemble Drawers:** Construct each drawer box, then attach the drawer fronts and metal handles.

5. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots on the dresser frame.
6. **Attach Anti-Tip Device:** Securely fasten the anti-tip device to the back of the dresser and to a wall stud, following the specific instructions provided with the kit. This step is critical for safety.

Product Size

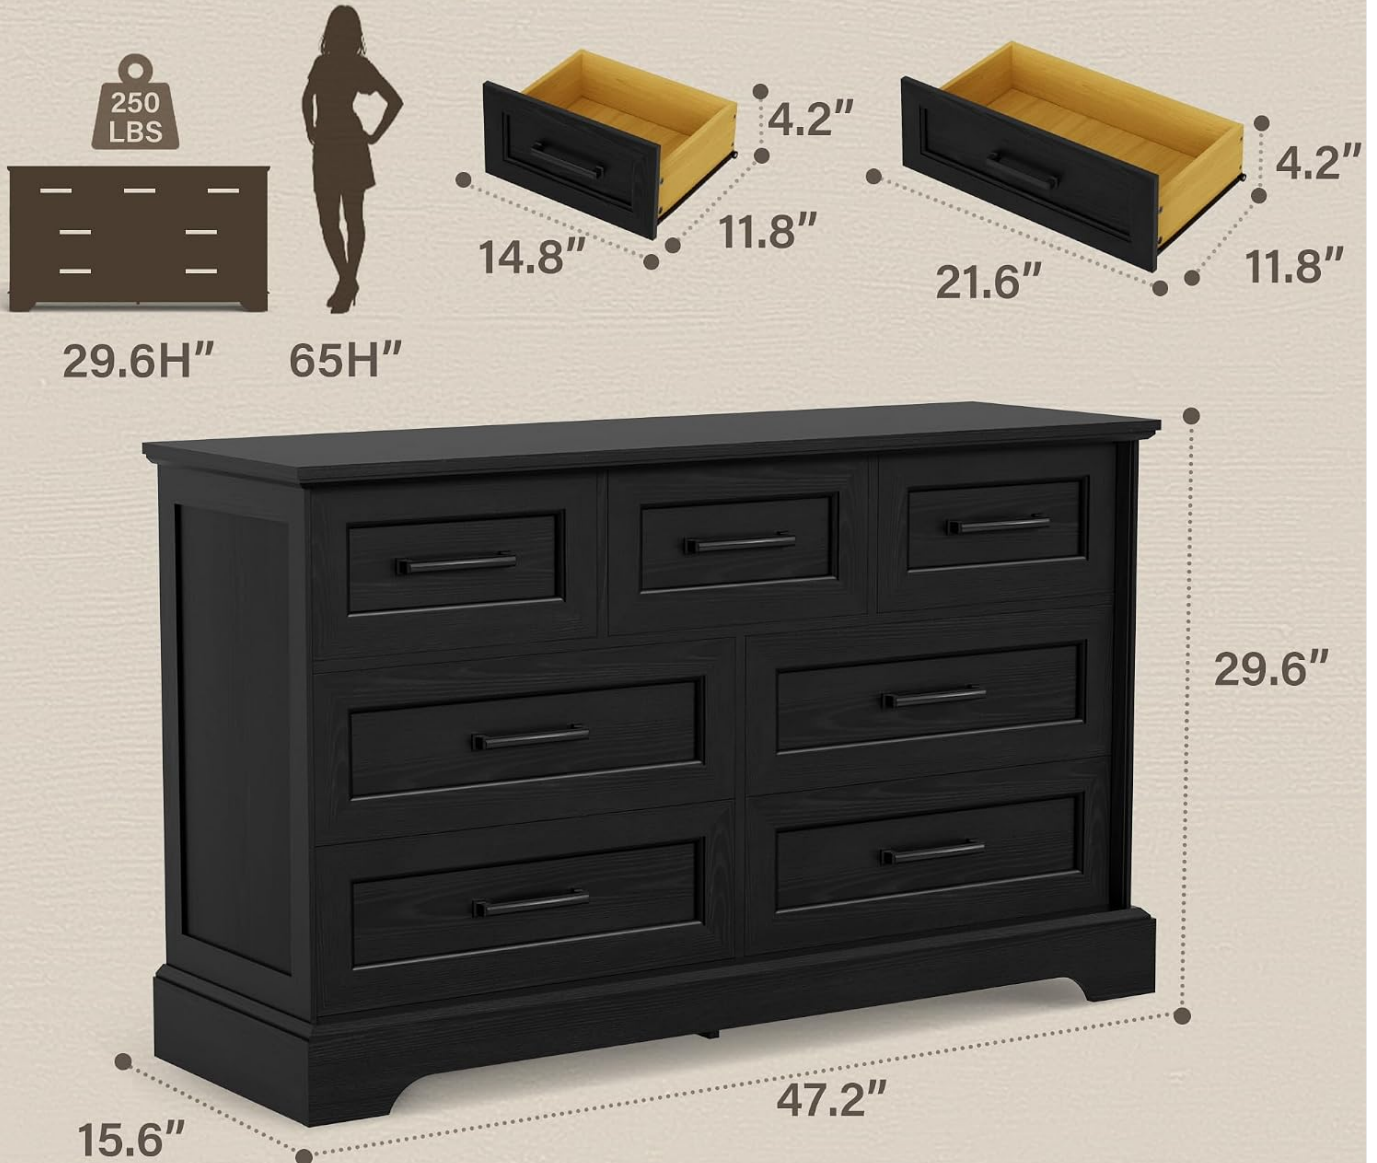


Image: Assembled Dresser - A front view of the YESHOMY Farmhouse 7-Drawer Dresser after successful assembly.

DIFFERENT SIZE OPTIONS



Image: Drawer Mechanism and Anti-Tip - Illustrates the smooth-gliding drawer rails and the anti-tip design for enhanced stability.

OPERATING INSTRUCTIONS

Using your YESHOMY dresser is straightforward. Follow these tips for optimal performance and longevity:

- **Drawer Operation:** Pull and push drawers gently using the metal handles. Avoid forcing drawers open or closed.
- **Weight Distribution:** Distribute items evenly across all seven drawers. Place heavier items in lower drawers to maintain stability.
- **Tabletop Use:** The wide tabletop can hold decorative items, lamps, or other personal belongings. Ensure items placed on top do not exceed the dresser's weight capacity (refer to specifications).



Image: Exquisite Tabletop and Features - Shows the spacious tabletop, metal handles, smooth sliding railway, and stable base design.

MAINTENANCE

Proper care will help maintain the appearance and functionality of your dresser for years to come.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or water damage.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Humidity:** Maintain a stable humidity level in the room to prevent wood from warping or cracking.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned rails, loose screws, debris in rails.	Check rail alignment and tighten screws. Clean rails of any obstructions.
Dresser feels wobbly.	Loose assembly hardware, uneven floor.	Ensure all assembly screws are tightened. Use furniture levelers if the floor is uneven. Verify anti-tip device is securely installed.
Drawer does not close completely.	Overloaded drawer, obstruction, misaligned rails.	Remove excess items. Check for obstructions behind the drawer. Re-check rail alignment.

Problem	Possible Cause	Solution
Surface scratches or chips.	Impact during assembly or use.	Minor scratches can sometimes be touched up with a furniture repair marker matching the finish. For deeper damage, professional repair may be needed.

SPECIFICATIONS



Image: Product Dimensions - Detailed measurements of the dresser and individual drawers.

- Brand:** YESHOMY
- Model Name:** Farmhouse 7-Drawer Dresser
- Model Number:** YH-0947-0
- Color:** Black
- Material:** Wood (Note: Product description indicates engineered wood with a painted finish)
- Finish Type:** Painted
- Product Dimensions (Overall):** 15.6"D x 47.2"W x 29.6"H
- Number of Drawers:** 7
- Item Weight:** Approximately 94.4 pounds
- Room Type:** Bedroom, Closet, Dressing Room
- Included Components:** Dresser, Drawers, Assembly Hardware, Anti-Tip Kit

WARRANTY AND SUPPORT

For warranty information, missing parts, or technical support, please refer to the documentation included with your purchase or visit the official YESHOMY website. You may also contact the seller directly through your purchase platform for assistance.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question