

## HIXICOPA SA-531

# HIXICOPA SA-531 2.1 Channel Sound Bar with Wired Subwoofer User Manual

Model: SA-531

## 1. PRODUCT OVERVIEW

---

The HIXICOPA SA-531 is a 2.1 channel sound bar system designed to enhance your home audio experience. It features a detachable 35-inch sound bar and a wired subwoofer, offering versatile placement options and powerful sound output. This system supports multiple connectivity methods, including Bluetooth, HDMI ARC, Optical, Coaxial, AUX, USB, and FM radio.

### Key Features:

- **Immersive 2.1 Channel Surround Sound:** Delivers rich, theater-quality audio with deep bass from the wired subwoofer and clear dialogue from four full-range speakers.
- **Unique 3-Section Detachable Design:** The 35-inch sound bar can be used as a single unit or separated into three pieces (Left, Center, Right) for flexible setup, wider stereo staging, or wall mounting.
- **Universal Connectivity:** Supports Bluetooth, HDMI ARC, Optical, Coaxial, AUX, USB, and FM radio for seamless integration with various devices.
- **Compact Design, Powerful Performance:** The sleek subwoofer provides powerful bass without occupying excessive space.
- **Plug-and-Play Simplicity:** Easy setup with all necessary cables and mounting accessories included.

**SA-531**

## HIXICOPA Soundbar Home Audio System Soundbar(35" Length) + Subwoofer



Figure 1: HIXICOPA SA-531 Sound Bar and Subwoofer in a home theater setup.

## 2. PACKAGE CONTENTS

Before beginning installation, please verify that all items listed below are present in your package:

- HIXICOPA SA-531 Sound Bar (3-section detachable)
- Wired Subwoofer
- Remote Control
- Power Adapter
- Optical Cable
- AUX Cable (3.5mm-3.5mm audio cable)
- RCA-RCA Cable \* 2
- Wall-Mounting Kit (Mount screws, Base \* 2)
- Quick Start Guide



Figure 2: Included components of the HIXICOPA SA-531 Sound Bar System.

## 3. SETUP AND INSTALLATION

### 3.1 Sound Bar Assembly

The HIXICOPA SA-531 sound bar can be assembled in two configurations: a single 35-inch bar or two separate tower speakers.

1. **Single Sound Bar Configuration:** Connect the three sections of the sound bar by aligning the connectors and gently pushing them together until they click into place.
2. **Split Tower Speaker Configuration:** Attach the provided bases to the bottom of the left and right sound bar sections. Ensure the connections are secure.



Figure 3: Detachable sound bar and available input options.

### 3.2 Connecting the Subwoofer

The subwoofer connects to the sound bar via a wired connection. Locate the subwoofer output port on the main sound bar unit and connect it to the input port on the subwoofer using the provided cable.



Figure 4: Wired subwoofer for enhanced bass.

### 3.3 Power Connection

Connect the power adapter to the sound bar and then plug it into a standard electrical outlet. Ensure the subwoofer is also connected to power if it has a separate power input.

### 3.4 Audio Connections

Choose one of the following methods to connect the sound bar to your audio source (e.g., TV, media player):

- **HDMI ARC:** Connect an HDMI cable from the sound bar's HDMI ARC port to your TV's HDMI ARC port. This allows for audio return and TV remote control of the sound bar volume.
- **Optical:** Connect an Optical cable from the sound bar's Optical input to your TV's Optical output.
- **AUX:** Use the 3.5mm AUX cable to connect the sound bar to devices with a 3.5mm audio output.
- **Coaxial:** Connect a Coaxial cable from the sound bar's Coaxial input to your audio source's Coaxial output.
- **USB:** Insert a USB drive into the USB port to play audio files directly.
- **Bluetooth:** Pair your Bluetooth-enabled device wirelessly with the sound bar.



The image shows a comparison between two soundbar setups. On the left, labeled 'Ours', a soundbar is shown in a living room setting with a TV displaying a concert. On the right, labeled 'Others', a soundbar is shown in a living room setting with a TV displaying an airplane. A large 'VS' graphic is placed between the two setups. Below each setup is a list of features with checkmarks or crosses.

Ours	Others
✓ Vocal Channel 2.1	✗ Vocal Channel 2.0
✓ Total Power: 240W	✗ Total Power: 50W
✓ EQ/DSP/TREBLE/ BASS/Dolby TrueHD DTS-HD Master Audio	✗ DSP/TREBLE/ BASS/Dolby
✓ Number of Speakers 4	✗ Number of Speakers 3
✓ Bluetooth 5.4	✗ Bluetooth 5.0
✓ Bluetooth.AUX.USB. HDMI(ARC).Optical	✗ AUX, USB, HDMI

Figure 5: Multiple connection methods for audio sources.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

Press the Power button on the remote control or the sound bar to turn the unit on or off.

### 4.2 Input Selection

Press the 'INPUT' button on the remote control or the sound bar to cycle through available input modes (Bluetooth, HDMI ARC, Optical, Coaxial, AUX, USB, FM).

Your browser does not support the video tag.

Video 1: Demonstration of input mode switching on the HIXICOPA soundbar.

### 4.3 Volume Control

Use the 'VOL+' and 'VOL-' buttons on the remote control to adjust the master volume. If connected via HDMI ARC, your TV remote may also control the volume.

### 4.4 Sound Modes

The sound bar features 3 preset sound effects optimized for different content types:

- **Movie Mode:** Enhances cinematic audio with dynamic range and surround effects.
- **Music Mode:** Provides balanced audio for music playback.
- **News Mode:** Optimizes dialogue clarity for spoken content.

Press the corresponding button on the remote control to select your desired sound mode.



Figure 6: Three preset sound effects for optimized listening.

## 5. MAINTENANCE

---

To ensure the longevity and optimal performance of your HIXICOPA SA-531 Sound Bar System, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the sound bar and subwoofer. Do not use liquid cleaners or abrasive materials, as they may damage the finish.
- **Ventilation:** Ensure adequate ventilation around the sound bar and subwoofer to prevent overheating. Do not block any ventilation openings.
- **Placement:** Avoid placing the unit in direct sunlight, near heat sources, or in areas with high humidity or dust.
- **Power:** Disconnect the power adapter from the wall outlet if the unit will not be used for an extended period.

## 6. TROUBLESHOOTING

---

If you encounter issues with your sound bar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cable is securely connected. Test the outlet with another device.
No sound	Incorrect input selected; Volume too low; Cables loose	Select the correct input mode. Increase volume. Check all audio cable connections.
Bluetooth pairing issues	Sound bar not in pairing mode; Device too far; Interference	Ensure sound bar is in Bluetooth mode and blinking. Move device closer. Reduce interference.
Remote control not working	Batteries drained; Obstruction; Remote out of range	Replace batteries. Remove obstructions between remote and sound bar. Ensure remote is within range.
Subwoofer not producing bass	Subwoofer cable loose; Subwoofer not powered	Check the wired connection between the sound bar and subwoofer. Ensure subwoofer has power.

## 7. SPECIFICATIONS

---

Feature	Specification
Model Name	SA-531
Speaker Type	Soundbar with Wired Subwoofer
Surround Sound Channel Configuration	2.1
Speaker Maximum Output Power	240 Watts
Frequency Response	20000 KHz
Connectivity Technology	Bluetooth, Coaxial, HDMI (ARC), Optical, AUX, USB
Wireless Communication Technology	Bluetooth
Subwoofer Connectivity Technology	Wired
Subwoofer Diameter	5.25 Inches
Speaker Size	35 Inches (Soundbar)
Product Dimensions	10"D x 35"W x 13"H
Item Weight	10.78 pounds
Mounting Type	Wall Mount, Desktop Placement
Control Method	Push Button, Remote
Compatible Devices	Desktop, Home Theater, Laptop, Tablet, Television, Smartphones

## 8. WARRANTY INFORMATION

---

HIXICOPA products are manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions, including the duration of coverage and how to make a claim.

## 9. CUSTOMER SUPPORT

---

For technical assistance, troubleshooting, or warranty inquiries, please contact HIXICOPA customer support. Contact information can typically be found in the Quick Start Guide or on the official HIXICOPA website.