

ATFO-RPL-RMT-070925-03755

## Generic Replacement Remote Control Instruction Manual

For ATYME TV Models: 650GM7UD, 240AM5HD, 320GM5HD, 400AM7HD, 500AM7HD

### INTRODUCTION

---

This manual provides instructions for the proper setup, operation, and maintenance of your Generic Replacement Remote Control. This remote is designed to be compatible with various ATYME TV models, including 650GM7UD, 240AM5HD, 320GM5HD, 400AM7HD, and 500AM7HD. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

**Note:** This is a replacement remote control and may not offer all functions present on your original ATYME TV remote. Some minor cosmetic imperfections may be present due to bulk item storage.

### SAFETY INFORMATION

---

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or any other liquids.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not incinerate batteries.

### SETUP

---

#### 1. Battery Installation

The remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



*Image: Front view of the Generic Replacement Remote Control. This image displays the layout of the buttons, including power, number pad, volume, channel, navigation, and input controls.*

## 2. Initial Use

This remote control operates using infrared (IR) technology. No programming or pairing is typically required. Once batteries are installed, point the remote directly at your ATYME TV and press the Power button to test functionality.

## OPERATING INSTRUCTIONS

---

Ensure there are no obstructions between the remote control and the TV's IR receiver. The maximum effective range is approximately 5 meters (16 feet).

### Button Functions (Common)

- **Power:** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.
- **CH +/-:** Changes channels up or down.
- **VOL +/-:** Adjusts volume up or down.
- **Mute:** Mutes or unmutes the TV audio.
- **Input/Source:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.
- **Back/Exit:** Returns to the previous menu or exits the current menu.
- **Menu:** Opens the TV's main menu.
- **Play/Pause/Stop/Rewind/Fast Forward:** Controls media playback (if supported by TV and content).

Refer to your ATYME TV's original user manual for specific functions of advanced buttons, as this replacement remote may not support all specialized features.

## MAINTENANCE

---

### Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface or internal components.

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

## Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

## TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstructions between the remote and the TV's IR receiver.
  - Confirm you are within the operating range (approximately 5 meters).
- **Some functions do not work:**
  - This replacement remote may not support all specialized functions of your original ATYME TV remote. This is normal for non-genuine replacement units.
  - Verify that the TV is powered on and not in a specific mode that disables certain remote functions.
- **Buttons are sticky or unresponsive:**
  - Clean the remote control as described in the Maintenance section.
  - If the issue persists, the remote may be damaged and require replacement.

## SPECIFICATIONS

<b>Brand</b>	Generic
<b>Model Number</b>	ATFO-RPL-RMT-070925-03755
<b>Compatible Devices</b>	ATYME TV models: 650GM7UD, 240AM5HD, 320GM5HD, 400AM7HD, 500AM7HD
<b>Connectivity Technology</b>	Infrared (IR)
<b>Maximum Range</b>	5 Meters (approx. 16 feet)
<b>Battery Type</b>	2 x AAA (not included)
<b>Special Feature</b>	Ergonomic design

## WARRANTY AND SUPPORT

Specific warranty information for this Generic Replacement Remote Control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the seller or retailer from whom the product was purchased.

For further assistance with your ATYME TV, please consult your television's original user manual or contact ATYME customer support directly.