

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kitchen Elite](#) /

› [Kitchen Elite 16 Quart French Door Air Fryer Oven Instruction Manual \(Model SET-G16A\(G\)\)](#)

Kitchen Elite SET-G16A(G)

Kitchen Elite 16 Quart French Door Air Fryer Oven

INSTRUCTION MANUAL

Model: SET-G16A(G)

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls,

and the like, when in operation.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- To turn off this appliance, press the power button.

Product Overview

The Kitchen Elite 16 Quart French Door Air Fryer Oven is a versatile countertop appliance designed for a wide range of cooking tasks. Its family-size capacity and multiple functions make it ideal for preparing various meals with ease and efficiency.



The Kitchen Elite 16 Quart French Door Air Fryer Oven, showcasing its sleek stainless steel design and digital control panel.

Key Features:

- **Family-Size Capacity:** 16-quart cooking chamber suitable for large meals.
- **Elegant French Door Design:** Double doors open smoothly for convenient access.

- **Precision LED Display:** Digital control panel with a wide 100–450°F temperature range and 0–24 hour timer.
- **Multi-Cooking Functions:** Air fry, bake, broil, roast, toast, dehydrate, defrost, proof dough, and more.
- **360° Turbo-Air Technology:** Ensures even and efficient cooking.

Included Accessories:

- Food Tray
- Air Fryer Basket
- Wire Rack
- Crumb Tray



The Kitchen Elite Air Fryer Oven shown with its complete set of included accessories for versatile cooking.

Setup

1. **Unpacking:** Carefully remove all packaging materials and accessories from the oven.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is at least 6 inches of clearance on all sides and above the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
3. **Initial Cleaning:** Before first use, wipe the exterior with a damp cloth. Wash all removable accessories

(food tray, air fryer basket, wire rack, crumb tray) with warm, soapy water. Dry thoroughly.

4. **First Use Burn-Off:** It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present during this process; this is normal. Ensure adequate ventilation.

Operating Instructions

Control Panel Overview:

The oven features an intuitive LED digital touch control panel. The main functions include temperature adjustment, time setting, preset cooking modes, an interior light, and power control.



The digital control panel displays various cooking presets and manual adjustment options.

Using Preset Functions:

The oven comes with 18 preset cooking options for common dishes. To select a preset:

1. Press the menu/hamburger icon button (usually on the bottom left) to cycle through the available presets (e.g., Air Fry, Steak, Bacon, Chicken, Fries, Fish, Shrimp, Wings, Defrost, Bagel, Bake, Broil, Pizza, Pastry, Warm, Roast, Proof, Toast).
2. Once the desired preset is highlighted, the oven will display a default temperature and time.

3. You can adjust the default temperature using the temperature icon and '+' / '-' buttons, and the time using the clock icon and '+' / '-' buttons.
4. Press the power button (usually on the far right) to start cooking.

Manual Operation:

For custom cooking, you can manually set the temperature and time:

1. Press the temperature icon to activate temperature adjustment. Use the '+' / '-' buttons to set the desired temperature (100–450°F).
2. Press the clock icon to activate time adjustment. Use the '+' / '-' buttons to set the desired cooking time (0–24 hours).
3. Press the power button to start cooking.

Interior Light:

Press the light bulb icon to turn the interior light on or off, allowing you to monitor your food without opening the doors.

Rack Positions:

The oven features multiple rack positions, optimized for different cooking methods. Refer to the labels on the inside of the oven door for guidance:

- **Dehydrator:** Topmost position, typically for dehydrating.
- **Fast Air Frying / Broil / Grill / Steak:** Upper position for intense heat and crisping.
- **Air Frying:** Middle position for general air frying.
- **Bake 2 / Pizza / Warm / Defrost / Roast / Toast:** Lower-middle position for baking and general cooking.
- **Bake 1 / Proofing:** Lowest position, ideal for proofing dough or gentle baking.

Your browser does not support the video tag.

This video demonstrates the control panel functions, French door operation, and rack position labels inside the Kitchen Elite Air Fryer Oven.

Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Kitchen Elite Air Fryer Oven.

1. **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. **Interior:** For light cleaning, wipe the interior walls with a damp cloth and mild detergent. For stubborn food residue, a non-abrasive sponge or brush can be used. Ensure the interior is completely dry before next use.
4. **Crumb Tray:** Remove the crumb tray from the bottom of the oven. Discard crumbs and wash the tray with warm, soapy water. Rinse and dry thoroughly. This should be done regularly to prevent grease buildup and potential fire hazards.
5. **Accessories:** The food tray, air fryer basket, and wire rack can be washed with warm, soapy water. For baked-on food, soak them in warm water before scrubbing. All accessories are dishwasher safe.
6. **Glass Doors:** Clean the glass doors with a glass cleaner or a damp cloth. Avoid harsh chemicals that

could damage the door seals.

Troubleshooting

If you encounter any issues with your Kitchen Elite Air Fryer Oven, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--------------------------------|--|---|
| Appliance does not turn on | Not plugged in; Power outlet malfunction; Appliance malfunction | Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. If the issue persists, contact customer support. |
| Food not cooking evenly | Overcrowding the basket/tray; Incorrect rack position; Uneven food placement | Avoid overcrowding; cook in smaller batches if necessary. Use the recommended rack position for your food type. Flip or shake food halfway through cooking. |
| Excessive smoke from oven | Grease buildup; Fatty foods; Food touching heating elements | Clean the oven and accessories thoroughly after each use. Use the crumb tray to catch drips. Ensure food does not touch the heating elements. |
| Digital display not responding | Temporary electronic glitch | Unplug the oven for 5 minutes, then plug it back in. If the problem persists, contact customer support. |

Specifications



Width

15.1"

Weight

13.2LB
(6KG)

Depth

13.7"



Height

13.9"

Includes
**Food Tray, Air Fryer Basket,
Wire Rack & Crumb Tray**



Free
Recipe Book



Key dimensions and weight of the Kitchen Elite Air Fryer Oven.

| Feature | Detail |
|----------------------|--|
| Brand | Kitchen Elite |
| Model Number | SET-G16A(G) |
| Capacity | 16 Quarts (14.79 Liters) |
| Wattage | 1600 Watts |
| Temperature Range | 100–450°F |
| Timer Range | 0–24 Hours |
| Item Weight | 13.22 pounds |
| Dimensions (Approx.) | 15.1" (Width) x 13.9" (Height) x 13.7" (Depth) |
| Material Type | Stainless Steel, Graphite |

Warranty and Support

For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official Kitchen Elite website. Our customer service team is available to assist you with any questions or concerns regarding your appliance.