



[Manuals.plus](#) /

› [Beautiful](#) /

› Beautiful 10-Cup Food Processor User Manual (Icing White)

Beautiful 10-Cup Food Processor

Beautiful 10-Cup Food Processor User Manual

Model: 10-Cup Food Processor

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Beautiful 10-Cup Food Processor. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or other liquids.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Ensure the lid is securely locked in place before operating the food processor. The appliance will not operate unless properly assembled.
- Do not process hot liquids.
- Do not use attachments not recommended or sold by the manufacturer.
- Keep hands and utensils out of the work bowl while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used but only when the food processor is not running.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Beautiful 10-Cup Food Processor is designed for efficient food preparation, including chopping, slicing, shredding, and puréeing. It features a powerful motor and a range of accessories for versatile use.

Components Included:

- Food Processor Base (Motor Unit)
- 10-Cup Work Bowl with Handle
- Work Bowl Lid with Feed Tube
- Food Pusher
- Stainless Steel Multi-Purpose S-Blade
- Reversible Stainless-Steel Slicing/Shredding Disc
- Emulsifying Disc



Image: All components of the Beautiful 10-Cup Food Processor, including the base, work bowl, lid, food pusher, S-blade, slicing/shredding disc, and emulsifying disc.



Image: An exploded view illustrating how the various parts of the food processor fit together, from the base to the lid and accessories.

3. SETUP AND ASSEMBLY

Before first use, wash all parts except the motor base in warm, soapy water. Rinse thoroughly and dry. Ensure the unit is unplugged before assembly.

1. **Place the Motor Base:** Position the motor base on a clean, dry, and stable surface.
2. **Attach the Work Bowl:** Place the 10-cup work bowl onto the motor base. Align the handle with the front of the base and twist clockwise until it locks securely into place. You will hear a click.
3. **Insert the Blade/Disc:**
 - For chopping/puréeing: Carefully place the S-blade onto the center shaft in the work bowl. Push down firmly until it seats properly.
 - For slicing/shredding: Place the reversible slicing/shredding disc onto the center shaft. Ensure the desired side (slicing or shredding) is facing up.
 - For emulsifying: Place the emulsifying disc onto the center shaft.
4. **Add Ingredients:** Place your ingredients into the work bowl. Do not overfill beyond the maximum fill line.
5. **Secure the Lid:** Place the work bowl lid onto the work bowl. Align the lid's tab with the handle of the work bowl and twist clockwise until it locks securely. The food processor will not operate if the lid is not properly locked.
6. **Insert Food Pusher:** Place the food pusher into the feed tube of the lid. This is used to guide ingredients when slicing or shredding.



Image: Demonstrates the secure twist-and-lock system for the work bowl and lid, preventing spills and ensuring safe operation. The image shows the work bowl being twisted onto the base.

4. OPERATING INSTRUCTIONS

Once assembled, plug the food processor into a standard electrical outlet. The control dial is located on the front of the motor base.

Control Dial Settings:

- **OFF:** The appliance is off.
- **LOW:** For softer ingredients or lighter processing tasks.
- **HIGH:** For harder ingredients or more intensive processing.

- **PULSE:** Provides short bursts of power for precise control, ideal for chopping or when you need to avoid over-processing. The unit operates only while the dial is held in the PULSE position.

General Operation:

1. Ensure the food processor is properly assembled and ingredients are in the work bowl.
2. Select the desired speed (LOW, HIGH) or use the PULSE function by turning the control dial.
3. For slicing or shredding, use the food pusher to guide ingredients through the feed tube. Do not force ingredients down.
4. When finished, turn the dial to OFF and unplug the appliance.
5. Wait for the blade or disc to stop completely before removing the lid and work bowl.



Image: Illustrates the use of the food pusher to guide ingredients through the extra-wide feed tube, accommodating bulkier foods for slicing or shredding.



Image: The food processor in operation, demonstrating its ability to process vegetables efficiently, with a bowl of prepared food next to it.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your food processor.

1. **Unplug Before Cleaning:** Always ensure the appliance is unplugged from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the food pusher, lid, work bowl, and blade/disc from the motor base.
3. **Wash Parts:** The work bowl, lid, food pusher, S-blade, slicing/shredding disc, and emulsifying disc are all dishwasher-safe. Alternatively, wash them in warm, soapy water. Use caution when handling the sharp blades.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.
6. **Storage:** For compact storage, all accessories (S-blade, discs, food pusher) can be stored inside the 10-cup work bowl, and the lid can be inverted and placed on top.



Image: Shows how the accessories can be neatly stored inside the work bowl for compact and tidy storage, saving space in your kitchen.

6. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Food processor does not turn on.	Not plugged in. Work bowl or lid not securely locked. Power outage or circuit breaker tripped.	Ensure the power cord is firmly plugged into a working outlet. Twist the work bowl and lid clockwise until they click into their locked positions. Check your home's circuit breaker.
Motor stops during operation.	Overloaded work bowl. Motor overheating.	Turn off, unplug, and remove some ingredients. Restart. Turn off and unplug. Allow the motor to cool down for at least 30 minutes before restarting.
Ingredients are not evenly processed.	Too many ingredients. Ingredients are too large. Incorrect speed setting.	Process in smaller batches. Cut ingredients into smaller, more uniform pieces. Use the PULSE function for better control, or adjust speed as needed.
Loud noise or vibration.	Improper assembly of blade/disc. Work bowl or lid not properly secured.	Turn off and unplug. Reassemble the blade/disc, ensuring it is seated correctly. Ensure the work bowl and lid are twisted and locked into place.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Model Name	10-Cup Food Processor
Brand	Beautiful
Capacity	10 Cups
Wattage	500 watts
Number of Speeds	3 (Low, High, Pulse)
Product Dimensions	8.98"D x 10.31"W x 17.05"H
Item Weight	6 pounds
Blade Material	Stainless Steel
Special Feature	Dishwasher Safe Parts, Twist-and-Lock System, Wide Feed Tube
Power Source	Electric



Image: A visual representation of the food processor's dimensions, indicating its height and width for placement considerations.

8. WARRANTY AND CUSTOMER SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact our customer support team. Contact information can typically be found on the manufacturer's website or on the product packaging.

Please have your model number (10-Cup Food Processor) and purchase date available when contacting support.



