

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware 0.9 Cu. Ft. Black Microwave Oven \(Model FMWEI09BKA\) Instruction Manual](#)

Farberware FMWEI09BKA

Farberware 0.9 Cu. Ft. Black Microwave Oven

MODEL: **FMWEI09BKA**

Introduction

This manual provides essential information for the safe and efficient operation of your new Farberware 0.9 Cu. Ft. Black Microwave Oven. Please read all instructions carefully before use and retain for future reference.

Your microwave oven is designed for cooking, reheating, and defrosting various food items. It features 900 watts of power, 10 power levels, and 8 convenient auto-cook presets to simplify your cooking experience.



Image: Front view of the Farberware 0.9 Cu. Ft. Black Microwave Oven.

Safety Information

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including:

- Read all instructions before using the appliance.
- Do not operate the oven if the door is damaged, or if the oven is malfunctioning.
- Do not heat liquids or other foods in closed containers as they are liable to explode.
- Do not allow children to use the oven without supervision.
- Only use microwave-safe cookware.
- Do not attempt to service or repair the oven yourself.

Setup

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight. Ensure there is adequate ventilation space around the oven (at least 3 inches on the sides and back, 12 inches above). Do not block air vents.
3. **Power Connection:** Plug the oven into a standard 3-prong, 120V AC, 60Hz grounded electrical outlet. Do not use an extension cord.
4. **Turntable Installation:** Place the roller ring in the center of the oven cavity. Place the glass turntable on top of the roller ring, ensuring it sits securely.

Operating Instructions



Cooking Made Easy.

eight auto-cook presets

defrost options

intuitive control panel

one touch start

child safety lock

Image: Close-up of the microwave control panel, highlighting auto-cook presets, defrost options, intuitive controls, one-touch start, and child safety lock.

Setting the Clock

1. Press the 'Clock' button once.
2. Use the number pads to enter the current time (e.g., 1-2-3-0 for 12:30).
3. Press 'Clock' again to confirm.

Basic Cooking (Time Cook)

1. Place food in a microwave-safe container on the turntable.
2. Press the 'Time Cook' button.
3. Enter the desired cooking time using the number pads (e.g., 1-0-0 for 1 minute).
4. Press 'Power' to adjust power level (optional, default is 100%). Use number pads 1-0 for 10%-100% power.
5. Press 'Start/+30Sec' to begin cooking.

Auto-Cook Presets

The oven includes 8 one-touch auto-cook presets for common foods:

- Popcorn
- Potato
- Pizza
- Frozen Vegetable
- Fresh Vegetable
- Beverage
- Bread
- Meat

To use a preset:

1. Place food in the oven.
2. Press the desired preset button (e.g., 'Popcorn').
3. Press 'Start/+30Sec' to begin. Some presets may require multiple presses to select quantity.

Express Cooking

For quick heating, simply press 'Start/+30Sec' to immediately start cooking for 30 seconds at 100% power. Each subsequent press adds 30 seconds to the cooking time.

Defrosting

The oven offers two defrost modes: Time Defrost and Weight Defrost.

- **Weight Defrost:** Press 'Defrost' once. Enter the food's weight using the number pads (e.g., 1.0 for 1 lb). Press 'Start/+30Sec'.
- **Time Defrost:** Press 'Defrost' twice. Enter the desired defrosting time. Press 'Start/+30Sec'.

Child Safety Lock

To activate the child safety lock, press and hold the 'Stop/Cancel' button for 3 seconds. The display will show 'LOC'. To deactivate, press and hold 'Stop/Cancel' again for 3 seconds.

Maintenance

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Interior:** Wipe the inside of the oven with a damp cloth after each use. For stubborn stains, use a mild detergent. Do not use abrasive cleaners.
- **Exterior:** Clean the exterior with a soft, damp cloth. Avoid harsh chemicals.
- **Turtable:** The glass turntable and roller ring can be removed for cleaning. They are dishwasher safe or can be washed by hand with warm, soapy water. Ensure they are completely dry before placing them back in the oven.

Easy, Clean, Convenient.

easy-to-clean interior is perfect for the home and office



FARBERWARE®

Image: The microwave interior showing the removable glass turntable and its dimensions, emphasizing ease of cleaning.

Troubleshooting

If you encounter issues with your microwave, refer to the following common solutions:

- **Oven not starting:** Check if the power cord is securely plugged in. Ensure the door is closed properly. Check for a blown fuse or tripped circuit breaker.
- **Food not heating:** Verify that the cooking time and power level are set correctly. Ensure the door is fully closed.
- **Unusual noise:** Check if the turntable and roller ring are correctly positioned. Ensure no foreign objects are inside the oven cavity.
- **Display shows 'LOC':** The child safety lock is active. Refer to the 'Child Safety Lock' section to deactivate it.

Specifications

| Feature | Detail |
|---------|--------|
|---------|--------|

| | |
|--------------------------------|------------------------------|
| Model Number | FMWEI09BKA |
| Capacity | 0.9 Cubic Feet |
| Wattage | 900 watts |
| Power Levels | 10 |
| Auto-Cook Presets | 8 |
| Product Dimensions (D x W x H) | 18.98 x 13.51 x 10.75 inches |
| Item Weight | 29.1 pounds |
| Color | Black |
| Material | Painted Metal |
| Installation Type | Countertop |

Get the Perfect Fit.

compact size to
make the most of
your space



Image: Side view of the microwave with key dimensions (width, depth, height) indicated.

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your product or contact Farberware customer service. Protection plans may be available for extended coverage.