

[Manuals.plus](#) /

› [Farberware](#) /

› Farberware 0.9 Cu. Ft. Countertop Microwave Oven (Model FM09WEISS) Instruction Manual

Farberware FM09WEISS

Farberware 0.9 Cu. Ft. Countertop Microwave Oven (Model FM09WEISS)

User Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not allow children to use the microwave without close supervision.
- Do not heat sealed containers, as they may explode.
- Use caution when removing hot items to prevent burns.
- Ensure the appliance is properly grounded.
- Do not operate the microwave if the door is damaged or if the seals are broken.
- Only qualified service personnel should perform repairs.

SETUP

Unpacking and Placement

1. Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape.
2. Place the microwave on a flat, stable surface that is strong enough to hold the oven and the food items you will place inside. Ensure there is adequate ventilation space around the unit (at least 4 inches on top, sides, and back).
3. Do not block air vents. Do not place the microwave near heat sources or in damp areas.

Turntable Assembly

1. Place the turntable ring inside the microwave cavity.
2. Position the glass turntable plate securely on top of the turntable ring, ensuring it sits properly on the center hub.



The Farberware 0.9 Cu. Ft. Countertop Microwave Oven, featuring a stainless steel finish and digital control panel.

OPERATING INSTRUCTIONS

Control Panel Overview

The microwave features an intuitive digital control panel for easy operation. It includes buttons for time cook, defrost, power levels, and various auto-cook settings.

Cooking Made Easy.



eight auto-cook presets

defrost options

intuitive control panel

one touch start

child safety lock

Detailed view of the microwave's control panel, highlighting auto-cook presets, defrost options, and the child safety lock feature.

Basic Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Press the 'Time Cook' button.
4. Enter the desired cooking time using the number pad.
5. Press 'Start' to begin cooking.

Power Levels

To adjust the cooking power:

1. Press the 'Power' button after setting the cooking time.
2. Select a power level from 1 to 10 using the number pad (10 being 100% power).
3. Press 'Start'.

Auto-Cook Settings

The microwave includes 8 pre-programmed auto-cook menus for common items:

- Popcorn
- Potato
- Pizza
- Frozen Vegetable
- Beverage
- Dinner Plate
- Meat
- Bread

Simply press the corresponding button for the desired food item. The microwave will automatically set the optimal cooking time and power level.

Express Cook & +30 Second Function

- **Express Cook:** For quick cooking, press any number from 1 to 6 on the 'Express Cook' section of the keypad to instantly start cooking for that many minutes at 100% power.
- **+30 Second:** Press the 'Start/+30SEC' button to add 30 seconds to the current cooking time or to start cooking for 30 seconds at 100% power if no other settings are entered. Repeated presses will add 30 seconds each time.

Defrost Options

The microwave offers both time and weight defrost options for various frozen foods.

- **Time Defrost:** Press 'Time Defrost', enter the desired defrosting time, then press 'Start'.
- **Weight Defrost:** Press 'Weight Defrost', enter the weight of the food in ounces, then press 'Start'.

Child Safety Lock

To activate the child safety lock, press and hold the 'Stop/Cancel' button for 3 seconds. The display will show 'LOCK'. To deactivate, press and hold 'Stop/Cancel' again for 3 seconds.

MAINTENANCE AND CLEANING

Cleaning the Exterior

Wipe the exterior surface with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals that could damage the finish.

Cleaning the Interior

Clean the inside of the microwave regularly. For spills, wipe immediately with a damp cloth. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes until steam fills the cavity. This will loosen food particles, making them easier to wipe away.

Turntable Care

The glass turntable and turntable ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the microwave.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microwave does not start	Door not closed properly; Power cord unplugged; Circuit breaker tripped; Child lock activated.	Ensure door is firmly closed; Check power connection; Reset circuit breaker; Deactivate child lock.

Problem	Possible Cause	Solution
Food not heating evenly	Food not stirred or rearranged; Incorrect power level or cooking time.	Stir or rearrange food halfway through cooking; Adjust power level and time as needed.
Display not working or unresponsive	Power interruption; Internal malfunction.	Unplug the unit for 1 minute, then plug back in. If issue persists, contact customer support.
Unusual noise during operation	Turntable not seated correctly; Foreign object in cavity.	Ensure turntable and ring are properly positioned. Remove any obstructions.

SPECIFICATIONS

Brand: Farberware
Model Number: FM09WEISS
Capacity: 0.9 Cubic Feet
Wattage: 900 watts
Product Dimensions: 18.62"D x 14.72"W x 10.7"H
Item Weight: 34 pounds
Installation Type: Countertop
Color: Stainless Steel
Special Feature: Defrost
Controller Type: Button

WARRANTY INFORMATION

This Farberware microwave oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or to inquire about replacement parts, please visit the official Farberware website or contact their customer service department. You can find more information at the [Farberware Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FQ7YF3ZY>

More documents and user manuals: <https://manuals.plus/>