

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSORI](#) /

› [COSORI Dual Blaze TwinFry 10L Air Fryer Instruction Manual \(Model CAF-TF102S\)](#)

COSORI CAF-TF102S

COSORI Dual Blaze TwinFry 10L Air Fryer Instruction Manual

Model: CAF-TF102S

1. INTRODUCTION

Thank you for purchasing the COSORI Dual Blaze TwinFry 10L Air Fryer. This appliance is designed to provide efficient and versatile cooking with less oil, offering a healthier alternative to traditional frying methods. Please read this manual thoroughly before first use and save it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your air fryer.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions and safety warnings carefully before operating this appliance.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for adequate ventilation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid using accessories not recommended by the manufacturer, as this may cause injuries.
- Do not block any ventilation openings.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- As per IEC/EN 60335-2-9 safety standard, the "Start" button on the Smart Air Fryer must be pressed manually to begin cooking. The machine cannot start remotely.

3. PRODUCT OVERVIEW

The COSORI Dual Blaze TwinFry Air Fryer features a unique design with dual heating elements and a versatile basket system to cook multiple dishes simultaneously.

Key Components:

- **Main Unit:** Houses the control panel, heating elements, and cooking chambers.
- **Dual Baskets (5L + 5L):** Two independent cooking baskets for separate dishes.
- **Removable Divider:** Allows combining the two 5L baskets into a single 10L GrandZone for larger items.
- **Crisper Plates:** Non-stick plates designed for optimal air circulation and easy cleaning.
- **Control Panel:** Digital display with touch controls for various cooking functions, temperature, and time settings.
- **VeSync App:** Connects to your smartphone for remote control, recipe access, and cooking notifications.

Features:

- **Extra-Large 10-Liter GrandZone Capacity:** Accommodates a whole chicken, half a pumpkin, or a Tomahawk steak for up to 8 people.
- **Flexible Cooking:** The removable divider allows for cooking two different dishes simultaneously at varying temperatures and times.
- **7-in-1 Functions:** Includes Air Fry, Roast, Bake, Grill, Reheat, Dry, and Proof modes.
- **Dual Heating Elements (2800W):** Four heating elements ensure 360° heating for crispy and tender results without preheating or flipping.
- **Powerful Performance:** Reaches up to 240°C, using 95% less oil, cooking 65% faster, and consuming 45% less energy compared to traditional ovens.
- **Smart Connectivity:** Monitor and control your air fryer via the VeSync app, which also provides access to over 70 customized recipes.
- **Easy to Clean:** Non-stick interior plates and baskets are dishwasher safe for hassle-free cleaning.



Image: COSORI Dual Blaze TwinFry 10L Air Fryer, showcasing its sleek design and dual basket system.

4. SETUP

Unboxing and Initial Preparation:

1. Carefully remove all packaging materials from the air fryer and its accessories.
2. Wipe down the exterior of the air fryer with a damp cloth.
3. Wash the baskets and crisper plates with warm, soapy water, then rinse and dry thoroughly.
4. Ensure the air fryer is placed on a flat, stable, and heat-resistant surface with at least 15 cm (6 inches) of space around it for proper air circulation.

Inserting Crisper Plates and Divider:

The crisper plates are designed to fit one way into the baskets. Tilt the crisper plate to one side first, then press down on the other side to secure it. The removable divider can be inserted into the large basket to create two separate cooking zones.

Video: Demonstrates the assembly of accessories for the COSORI Dual Blaze 10 Liters Air Fryer, including inserting the crisper plates and the removable divider into the baskets.

Video: Shows various accessories for the Cosori 10L Air Fryer, including different types of silicone inserts and racks, and how they fit into the baskets.

Video: Illustrates the use of a splatter guard accessory for the air fryer, demonstrating how it is placed and removed to prevent splatters during cooking.

5. OPERATING INSTRUCTIONS

Control Panel Overview:

The intuitive touch control panel allows you to easily select cooking modes, adjust temperature, and set timers. The display shows current settings and cooking progress.

Basic Operation:

1. Plug in the air fryer. The power button will illuminate.
2. Press the power button to turn on the appliance.
3. Place your food in the basket(s). If using the divider, ensure food is evenly distributed in each section.
4. Select your desired cooking mode (e.g., Air Fry, Roast, Bake).
5. Adjust the temperature (40-240°C) and time using the arrow buttons.
6. Press the Start/Pause button to begin cooking.
7. The air fryer will beep when cooking is complete. Carefully remove the baskets and food.

Using the VeSync App:

Download the VeSync app from your smartphone's app store. Follow the in-app instructions to connect your COSORI air fryer via WiFi. The app allows you to:

- Remotely control cooking settings.
- Monitor cooking progress and receive notifications.
- Access over 70 pre-programmed recipes.

Oltre 70 Ricette sull'App VeSync

Tante Idee Fresche a Portata di Mano



Image: Illustration of the VeSync app interface showing recipes and remote control features for the COSORI air fryer.

Cooking Modes:

Mode	Temperature Range	Description
Air Fry	80-205°C	For crispy foods with minimal oil.
Roast	80-205°C	Ideal for meats and vegetables.
Bake	80-205°C	Perfect for cakes, pastries, and bread.
Grill	205-240°C	For searing and browning.
Reheat	40-205°C	Warms up leftovers quickly.
Dry	40-80°C	For dehydrating fruits and vegetables.
Proof	30-40°C	For rising dough.

6. MAINTENANCE AND CLEANING

Regular cleaning of your air fryer will ensure its longevity and hygienic operation.

Cleaning the Baskets and Crisper Plates:

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The non-stick baskets and crisper plates are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
- For stubborn food residue, soak the baskets and plates in warm, soapy water for 15-20 minutes before cleaning.
- Ensure all parts are thoroughly dry before reassembling or storing.

Cleaning the Interior and Exterior:

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean the interior of the air fryer with a damp cloth and mild detergent. Avoid getting water into the electrical components.
- The heating elements can be gently wiped with a damp cloth if necessary, ensuring the appliance is unplugged and cool.

7. TROUBLESHOOTING

If you encounter any issues with your COSORI Dual Blaze TwinFry Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Contact customer support if the issue persists.
Food is not cooked evenly.	Overcrowding the basket; insufficient shaking/flipping.	Do not overcrowd the basket. Cook in smaller batches if necessary. Shake or flip food halfway through cooking for even results.
White smoke coming from the air fryer.	Grease residue from previous use; fatty foods.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, place a piece of aluminum foil under the crisper plate to catch excess grease.
Appliance smells like plastic.	New appliance odor.	This is normal for new appliances. Run the air fryer empty for 10-15 minutes at 200°C (390°F) to burn off any manufacturing odors. Ensure good ventilation.

For further assistance, please contact COSORI Customer Support.

8. SPECIFICATIONS

Attribute	Value
-----------	-------

Attribute	Value
Brand	COSORI
Model	CAF-TF102S
Color	White
Dimensions (L x W x H)	33.8 x 51.8 x 31.3 cm
Weight	9.2 kg
Capacity	10 Liters (Dual 5L baskets)
Wattage	2800 watts
Voltage	240 Volts
Material	Aluminum
Automatic Shut-off	Yes

9. WARRANTY AND SUPPORT

The COSORI Dual Blaze TwinFry Air Fryer comes with a 2-year warranty. For warranty claims, technical support, or any questions regarding your product, please contact COSORI customer service. You can find contact information on the official COSORI website or through your purchase platform.

Please have your model number (CAF-TF102S) and proof of purchase ready when contacting support.