

- Manuals.plus /
- > ZJSWTH /
- > ZJSWTH Remote Control User Manual for ALED Series TVs (Model ZJSWTH456)

ZJSWTH ZJSWTH456

ZJSWTH Remote Control User Manual

Model: ZJSWTH456

1. PRODUCT OVERVIEW

This manual provides instructions for the ZJSWTH Remote Control, model ZJSWTH456. This remote is designed as a replacement or compatible remote for various ALED series Smart UHD LED LCD HDTV TV models. Please refer to the compatibility section to ensure your TV model is supported.





Image 1.1: Front view of the ZJSWTH Remote Control.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2.1: Remote control with open battery compartment.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

3.1 Basic Functions

- **POWER (Red Button):** Turns the TV on or off.
- **Number Buttons (0-9):** Selects TV channels directly.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes TV channels sequentially.
- **MUTE:** Mutes or unmutes the TV audio.

- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menu options.
- **ENTER:** Confirms a selection in the menu.
- **EXIT:** Exits the current menu or screen.

3.2 Advanced Functions

- **INFO:** Displays information about the current program or input.
- **AUDIO:** Selects audio tracks or modes.
- **INDEX:** Accesses index functions (if supported by TV).
- **LIST:** Displays a list of channels or media (if supported by TV).
- **SLEEP:** Sets a sleep timer for the TV.
- **EPG:** Opens the Electronic Program Guide.
- **STILL:** Pauses the current video frame.
- **RADIO:** Switches to radio mode (if supported by TV).
- **SUBTITLE:** Toggles subtitles on or off.
- **DMP:** Accesses Digital Media Player functions.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or interactive services, as indicated on the TV screen.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote control in a dry place, away from direct sunlight, high temperatures, and excessive humidity.
- **Battery Care:** Replace batteries when the remote's performance diminishes. Always dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's sensor.
- **Some functions do not work:**
 - Verify that your TV model is listed in the compatibility section. Some advanced functions may depend on the specific TV model's capabilities.

- Ensure the TV is powered on and not in a standby mode that restricts remote input.

6. SPECIFICATIONS

Feature	Detail
Model Number	ZJSWTH456
Manufacturer	ZJSWTH
Item Weight	1.76 ounces
Package Dimensions	0.39 x 0.39 x 0.39 inches
ASIN	B0FQB5VKVC
First Available	September 9, 2025

7. COMPATIBILITY

This remote control is compatible with the following ALED series Smart UHD LED LCD HDTV TV models:

- ALED2210/11M4
- ALED22C1800
- ALED28C2300
- ALED32/C1600
- ALED39/C1600
- ALED32FHD8EB

If your TV model is not listed or you are unsure about compatibility, please contact the manufacturer for assistance.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your ZJSWTH Remote Control, please refer to the documentation provided with your purchase or contact the manufacturer directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FQB5VKVC>

More documents and user manuals: **<https://manuals.plus/>**