

STRICH SEP-88F

STRICH SEP-88F Foldable 88-Key Digital Piano

Instruction Manual

Model: SEP-88F

1. INTRODUCTION

The STRICH SEP-88F is a full-size 88-key digital piano designed for portability and versatility. Featuring semi-weighted, touch-sensitive keys, it offers a realistic playing experience suitable for beginners, teens, and adults. Its ultra-slim, 180° foldable design allows for easy transport and storage, making it an ideal instrument for practice, performance, and creative music-making anywhere.

Full Size Semi-Weighted Key

Adjustable touch response to ensure it fits your preferred playing style



Figure 1: The STRICH SEP-88F digital piano fully extended.

2. WHAT'S IN THE BOX

Your STRICH SEP-88F package includes the following items:

- STRICH SEP-88F Foldable Digital Piano
- Sustain Pedal
- Headphones
- Music Rest
- 5 mm Padded Carrying Bag
- USB-C Charging Cable and Power Adapter

- Key Stickers for Beginners
- Dust Cover Cloth



Figure 2: Contents of the STRICH SEP-88F package.

3. SETUP

3.1 Unfolding the Piano

1. Place the folded piano on a flat, stable surface.
2. Gently unfold the two halves of the piano until it is fully extended.
3. Locate the locking mechanism on the underside of the piano at the hinge point.
4. Rotate the lock switch to the 'ON' position to secure the piano in its extended state. This prevents accidental folding during use.

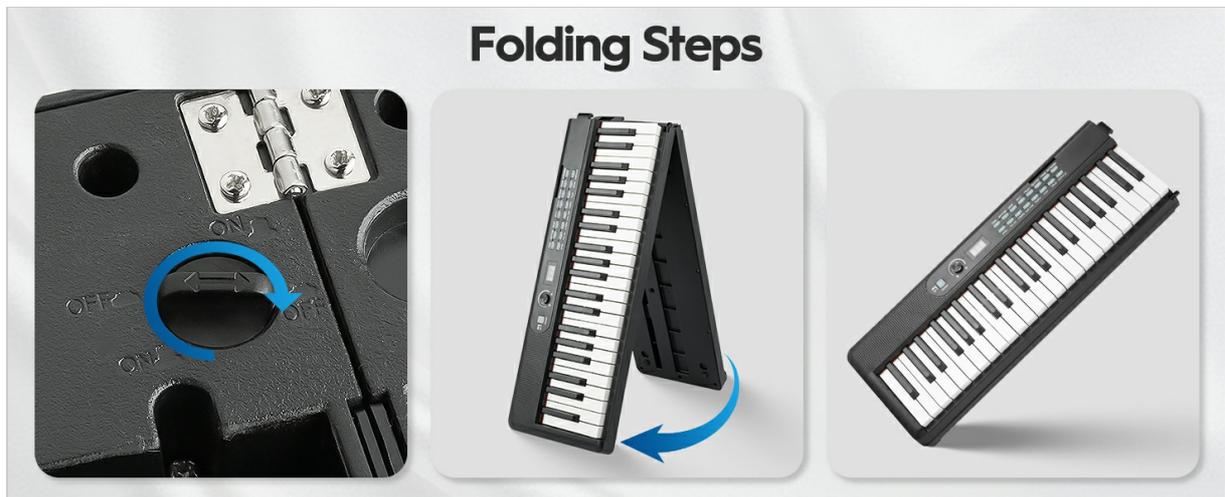


Figure 3: Steps for unfolding and locking the piano.

3.2 Attaching the Music Rest

Insert the music rest into the designated slots on the top panel of the piano. Ensure it is firmly seated to hold your sheet music or tablet securely.

3.3 Powering On

The SEP-88F features a long-lasting internal battery. To power on, press the 'POWER' button located on the control panel. The display will illuminate, indicating the piano is ready for use. If the battery is low, connect the USB-C charging cable to the DC 5V port and plug the adapter into a power outlet.



Figure 4: The SEP-88F is equipped with a long-lasting internal battery.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel provides access to all piano functions. Familiarize yourself with the buttons and the digital display.

10H of Long-Lasting Battery Life

Inspiration Without Batteries

Play in the park, sand beach, party, Start playing anytime and anywhere



Figure 5: Main control panel of the digital piano.

4.2 Selecting Tones and Rhythms

The piano offers 128 voices (tones) and 128 rhythms. Use the 'TONE' and 'RHYTHM' buttons to cycle through the available options. The digital display will show the selected number.

4.3 Demonstration Songs

Access 80 built-in demonstration songs by pressing the 'DEMO' button. Use the arrow buttons to navigate through the songs.

4.4 Touch Sensitivity

The SEP-88F features adjustable touch response. Press the 'TOUCH' button to cycle through different

sensitivity levels, allowing you to customize the key response to your playing style.



Figure 6: Adjustable touch response for semi-weighted keys.

4.5 Metronome

Activate the metronome function by pressing the 'METRONOME' button. Adjust the tempo using the 'TEMPO' controls.

4.6 Recording and Playback

Use the 'RECORD' button to start recording your performance. Press 'PLAY' to listen to your recorded track.


4.7 Connectivity

The piano offers various connectivity options:

- **Headphone Jack (PHONE):** Connect headphones for private practice.
- **Audio Output (OUT):** Connect to external speakers or an amplifier.
- **USB-C (DC 5V):** For charging the internal battery.
- **Microphone Input (MIC):** Connect a microphone.
- **MP3 Input (MP3):** Connect an external audio device to play along with music.
- **Sustain Pedal (SUS):** Connect the included sustain pedal for expressive playing.
- **MIDI Interface (MIDI):** Connect to computers or other MIDI devices for advanced music production or learning software.
- **USB (USB):** For additional connectivity options.
- **Wireless (Bluetooth):** Connect wirelessly to phones, tablets, or computers for learning apps and creative software.

Versatile Connectivity

Rich connect functions bring more playability to you

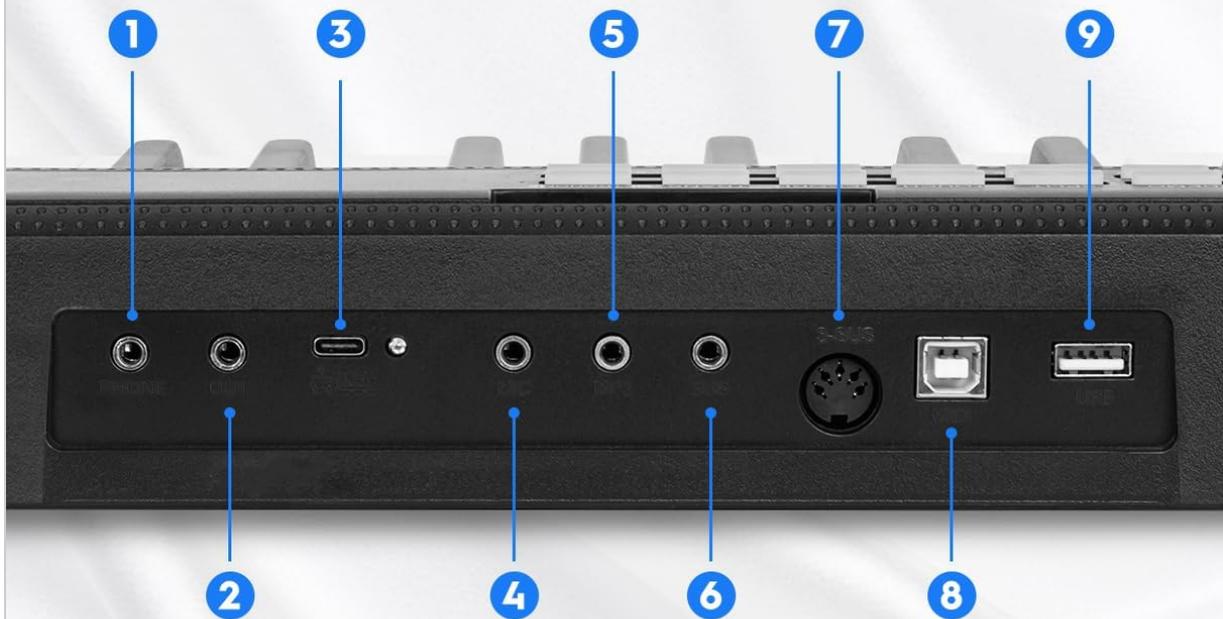

1 Headphone Jack

2 Audio Output

3 Power Socket

4 Microphone Jack

5 Audio Input

6 Sustain Pedal

7 Tri-Pedal

8 MIDI Interface

9 USB Port

Figure 7: Connectivity ports on the rear of the piano.



Figure 8: Wireless and USB-MIDI connectivity for learning and creativity.

5. MAINTENANCE

To ensure the longevity and optimal performance of your STRICH SEP-88F digital piano, follow these maintenance guidelines:

- **Cleaning:** Use the provided dust cover cloth to keep the keys and control panel free from dust and debris. For stubborn marks, wipe gently with a soft, slightly damp cloth. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not in use, fold the piano and store it in its padded carrying bag to protect it from impacts and environmental factors. Store in a dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the piano regularly, even if not in constant use. If storing for an extended period, ensure the battery is partially charged (around 50%) and recharge every few months.
- **Handling:** Always handle the piano carefully, especially when folding or unfolding. Avoid placing heavy objects on the keys or control panel.

6. TROUBLESHOOTING

If you encounter any issues with your STRICH SEP-88F, refer to the following common troubleshooting steps:

- **No Power:** Ensure the piano is charged. Connect the USB-C charging cable and power adapter to a working outlet. Check if the power button is pressed firmly.
- **No Sound:** Check the volume knob and ensure it is turned up. If using headphones, ensure they are properly plugged into the 'PHONE' jack. If connected to external speakers, verify their power and connection.
- **Keys Not Responding:** Ensure the piano is fully unfolded and the locking mechanism is engaged. If specific keys are unresponsive, gently clean around them.
- **Bluetooth Connectivity Issues:** Ensure Bluetooth is enabled on both the piano and your device. Try unpairing and re-pairing the devices. Move closer to the piano to ensure a strong signal.
- **Distorted Sound:** Lower the volume. Check for loose connections if using external audio devices.

If the problem persists after attempting these steps, please contact STRICH customer support for further assistance.

7. SPECIFICATIONS

Feature	Description
Model Name	SEP-88F
Number of Keys	88
Key Type	Semi-Weighted, Touch-Sensitive
Foldable Design	180° Foldable
Dimensions (Open)	50"W x 8.6"D x 2"H (127cm x 22cm x 5cm)
Dimensions (Folded)	25"W x 8.6"D x 4"H (63.5cm x 22cm x 10cm)
Item Weight	11.43 pounds (5.19 kg)
Tones	128
Rhythms	128
Demo Songs	80
Connectivity	USB, Wireless (Bluetooth), MIDI, Headphone Jack, Audio Out, Mic, MP3
Power Source	Corded Electric & Battery Powered (Rechargeable)
Material Type	Plastic/Plastic Composite
Color	Black

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included in your package or visit the official STRICH website. Keep your purchase receipt as proof of purchase for any warranty claims.