

DOOGEE TABG6MAX-V

DOOGEE Tab G6 Max Tablet User Manual

Model: TABG6MAX-V

[Setup](#)

[Operation](#)

[Features](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your DOOGEE Tab G6 Max tablet. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

The DOOGEE Tab G6 Max is a 13.4-inch Android 16 tablet featuring a UNISOC T7280 Octa-Core processor, 32GB RAM, 256GB ROM, and an 11000mAh battery, designed for both productivity and entertainment.

PACKAGE CONTENTS

Verify that all items are present in your package:

- DOOGEE Tab G6 Max Tablet
- Bluetooth Keyboard
- Bluetooth Mouse
- Stylus
- Tablet Protective Case
- Charger
- Type-C Charging Cable
- Screen Protector Film
- SIM Card Ejector Pin
- User Manual (this document)
- Service Card

Contenu du Colis

- | | |
|--|-----------------------------------|
| 1× Tablette DOOGEE Tab G6 Max | 1× Stylet (Édition VIP) |
| 1× Film Trempé (Édition VIP) | 1× Souris Bluetooth (Édition VIP) |
| 1×Housse de Protection en Cuir (Édition VIP) | Clavier Bluetooth (Édition VIP) |
| 1× Câble de Type C | 1×Chargeur |
| 1× Extracteur de Carte SIM | 1× Boîte D'emballage |
| 1× Manuel D'utilisation | 1× Carte de Service Client |



Image: All accessories included with the DOOGEE Tab G6 Max tablet, neatly arranged.

SETUP GUIDE

1. Initial Charging

Before first use, fully charge your tablet using the provided charger and Type-C cable. Connect the cable to the tablet's USB-C port and the charger to a power outlet. The charging indicator will show the charging status.



Image: Visual representation of the tablet's large 11000mAh battery and 18W fast charging capability.

2. Powering On/Off

- **To Power On:** Press and hold the Power button until the DOOGEE logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password, or Face ID).
- Review and accept terms and conditions.

4. Inserting SIM/TF Card

If you plan to use mobile data or expand storage:

1. Locate the SIM/TF card tray on the side of the tablet.
2. Insert the SIM card ejector pin into the small hole next to the tray to open it.
3. Carefully place your Nano-SIM card(s) and/or TF (microSD) card into the designated slots, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.



Image: Diagram illustrating the placement of SIM and TF cards in the tablet's tray.

5. Connecting Accessories (Keyboard, Mouse, Stylus)

The DOOGEE Tab G6 Max supports Bluetooth accessories for enhanced productivity.

1. **Enable Bluetooth:** Go to *Settings > Connected devices > Bluetooth* and turn Bluetooth on.
2. **Pairing:** Put your Bluetooth keyboard, mouse, or stylus into pairing mode (refer to the accessory's manual for specific instructions).
3. **Connect:** On your tablet, select the accessory from the list of available devices and follow any on-screen prompts to complete pairing.



Image: The DOOGEE Tab G6 Max tablet connected to its Bluetooth keyboard and stylus, ready for use.

OPERATING YOUR TABLET

Navigation Basics

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles (Wi-Fi, Bluetooth, brightness, etc.).
- **Multitasking:** Tap the square icon (recent apps) at the bottom of the screen to view and switch between recently used applications.

Your browser does not support the video tag.

Video: A demonstration of basic navigation and app usage on the DOOGEE Tab G6 Max tablet, including swiping through home screens

and opening applications.

Display and Audio

- The 13.4-inch FHD+ display offers a 90Hz refresh rate for smooth visuals.
- Dual speakers provide an immersive audio experience.
- Adjust brightness and volume using the quick settings panel or dedicated buttons.

Plus Besoin de Chercher des Prises Électriques Toute la Journée

Pour Rester Actif Toute la Journée

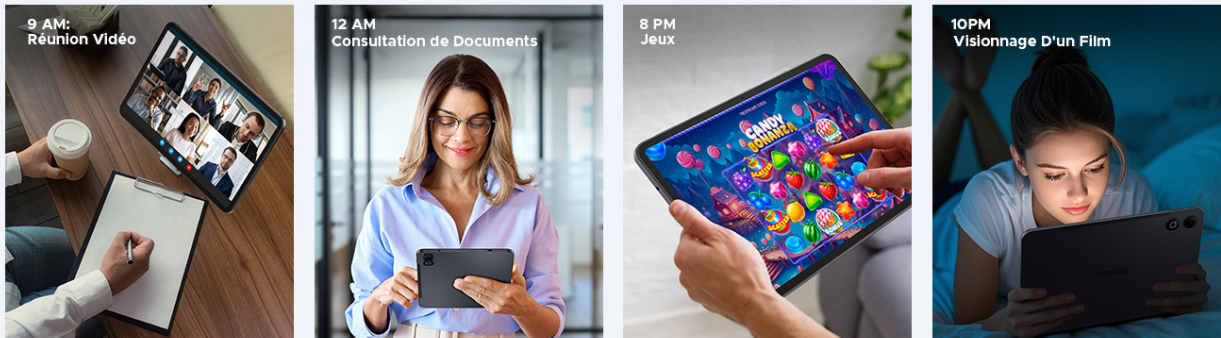


Image: The tablet's large, high-resolution screen showcasing its visual quality.

Camera Usage

The tablet is equipped with a 13MP rear camera and an 8MP front camera.

- Open the "Camera" app from the home screen or app drawer.
- Tap the shutter button to take photos.
- Switch between front and rear cameras using the camera icon.
- Access video recording mode within the camera app.

Expérience Bureautique Complète

Travailler Au-Delà des Bureaux

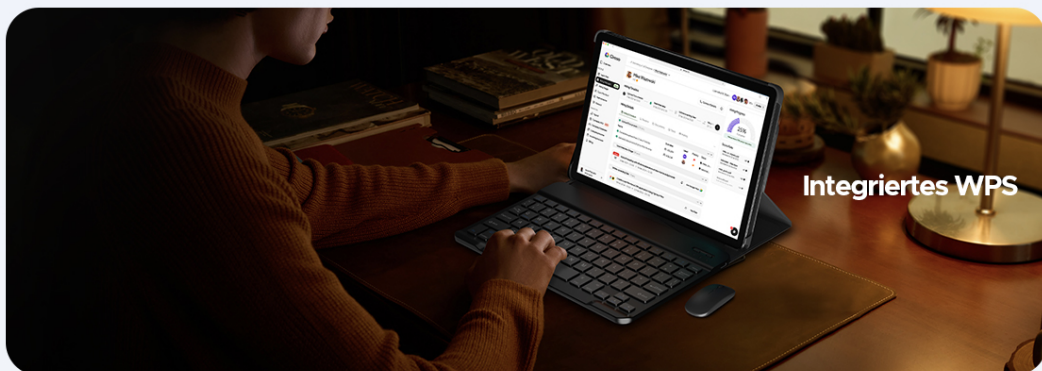


Image: Detailed view of the tablet's front and rear cameras.

KEY FEATURES

Performance and Storage

- **Processor:** UNISOC T7280 Octa-Core processor for smooth multitasking and gaming.
- **RAM:** 6GB physical RAM + 26GB extended virtual RAM (total 32GB) for efficient app handling.
- **Internal Storage:** 256GB ROM for ample space for apps, photos, and videos.
- **Expandable Storage:** Supports up to 2TB TF card (microSD) for additional storage.

18W

Charge Rapide

50 Heures

D'appels Vocaux

10 Heures

de Lecture Multimédia

Batterie 11000 mAh toute la Journée

Alimentez Votre Journée Entière



Image: Visual breakdown of the tablet's RAM and ROM specifications.

Battery Life

The 11000mAh battery provides extended usage time for work and entertainment.

- Up to 50 hours of voice calls.
- Up to 10 hours of multimedia playback.
- Supports 18W fast charging.

Image: Visual representation of the tablet's large 11000mAh battery and 18W fast charging capability.

Connectivity and Security

- **Dual Wi-Fi:** Supports 802.11a/b/g/n/ac for stable internet connection.
- **Bluetooth:** For connecting wireless accessories.
- **Face ID:** Secure facial recognition for unlocking the device.
- **OTG Support:** Connect USB peripherals like flash drives or external hard drives.
- **3.5mm Headphone Jack:** For wired audio connections.

Your browser does not support the video tag.

Video: A user demonstrating the tablet's responsiveness and navigation, including opening applications and scrolling through settings.

MAINTENANCE

Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- Avoid using harsh chemicals, abrasive materials, or aerosol sprays.

Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use only the original or certified compatible charger.

Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features.

1. Go to *Settings > System > System update*
2. Follow the on-screen instructions to check for and install available updates.

Your browser does not support the video tag.

Video: A user navigating through the tablet's settings to check for system updates, demonstrating the Android 16 version information.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Tablet won't turn on.	Ensure the battery is charged. Connect to the charger for at least 30 minutes, then try powering on.
Screen is unresponsive.	Perform a forced restart by holding the Power button for 10-15 seconds. If the issue persists, contact support.
Wi-Fi connection issues.	Restart the tablet and your Wi-Fi router. Forget the network in settings and reconnect. Ensure you are within range.
Apps are crashing or freezing.	Clear the app's cache (<i>Settings > Apps > [App Name] > Storage & cache > Clear cache</i>). If the problem continues, uninstall and reinstall the app.
Battery drains quickly.	Reduce screen brightness, close unused apps, disable unnecessary background processes, and check battery usage in settings to identify power-hungry apps.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	TABG6MAX-V

Feature	Detail
Operating System	Android 16
Processor	UNISOC T7280 Octa-Core, 1.8 GHz
Display Size	13.4 inches
Display Resolution	1920 x 1200 pixels (FHD+)
RAM	32 GB (6GB physical + 26GB virtual)
Internal Storage	256 GB
Expandable Storage	Up to 2 TB via TF card (microSD)
Battery Capacity	11000 mAh
Rear Camera	13 MP
Front Camera	8 MP
Connectivity	Wi-Fi (802.11a/b/g/n/ac), Bluetooth, FM, 4G LTE (cellular connectivity)
Ports	USB Type-C, 3.5mm Headphone Jack
Security	Face ID
Weight	539 Grams
Special Features	Detachable Keyboard Support, Stereo Speakers, USB OTG Support, Stylus Support

WARRANTY AND SUPPORT

Your DOOGEE Tab G6 Max tablet comes with a standard manufacturer's warranty. Please refer to the included Service Card for specific warranty terms and conditions, including duration and coverage details.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact DOOGEE customer support through their official website or the contact information provided on your Service Card. You can also visit the official DOOGEE store on Amazon for product information and support:[DOOGEE Amazon Store](#)

© 2025 DOOGEE. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question