

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Saker](#) /

> [Saker Smart Foldable Towel Warmer Instruction Manual \(Model: CP77489-X45303\)](#)

Saker CP77489-X45303

Saker Smart Foldable Towel Warmer Instruction Manual

Model: CP77489-X45303

1. INTRODUCTION

Thank you for purchasing the Saker Smart Foldable Towel Warmer. This appliance is designed to provide warm towels, blankets, and robes for enhanced comfort in your home or spa. Please read this manual thoroughly before operation to ensure safe and efficient use. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Do not use outdoors. This appliance is for indoor use only.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Use this appliance only for its intended use as described in this manual.
- Ensure the appliance is placed on a stable, flat surface during operation.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Saker Smart Foldable Towel Warmer Unit
- Power Cord
- Remote Control

- Instruction Manual (this document)

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the towel warmer for any damage.
2. **Placement:** Place the towel warmer on a dry, level, and stable surface away from water sources. Ensure there is adequate space around the unit for proper ventilation.
3. **Unfolding the Unit:** The Saker Smart Foldable Towel Warmer features a retractable design. To expand its capacity from 15L to 30L, gently pull the top section upwards until it locks into place. To fold it for compact storage, push the top section downwards.



Image: The towel warmer demonstrating its retractable design, showing both the compact 15L and expanded 30L capacities.

4. **Power Connection:** Plug the power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

The towel warmer can be operated using the control panel on the unit or the included remote control.

5.1 Power On/Off

- Press the **Power button** (🔌) on the control panel or remote to turn the unit on. The display will illuminate.
- Press the **Power button** again to turn the unit off.

5.2 Loading Towels

Open the lid and place up to 4 large bath towels, blankets, or robes inside the 30L capacity warmer. For optimal and even heating, avoid overfilling the unit.



Image: An illustration of the internal heating mechanism, demonstrating quick and even heat distribution within the warmer.

5.3 Temperature Settings

The unit offers four precise temperature options:

- 122°F (50°C)
- 131°F (55°C)
- 140°F (60°C)
- 149°F (65°C)

Press the **Temperature button** (🌡️) repeatedly to cycle through the available temperature settings. The selected temperature will be displayed.

5.4 Timer Settings

The towel warmer features two types of timer functions:

- **Heating Time:** Set the duration for which the unit will actively heat. Options include 30, 45, 60, and 90 minutes. Press the **Heating Time button** (🕒) to select your desired heating duration.
- **Appointment Timer (Delay Start):** Schedule the unit to begin heating 1 to 12 hours in advance. Press the **Appointment Timer button** (🕒) to set the delay in 1-hour increments. This allows you to have warm towels ready at a specific time.

OPTIONS TO MEET YOUR NEEDS
4 Heating Time & 4 Temperature Settings

Temperature Setting
4-speed temperature adjuster:
122°F, 131°F, 140°F, 149°F

Time Setting
Heating time:
30/45/60/90 minutes

Limited to 60 degrees effective range is within 3 meters

Also support remote control ▶

Image: Close-up of the towel warmer's control panel and remote, highlighting the power, temperature, and timer setting buttons.

1-12 HOUR TIMER FOR CONVENIENT SCHEDULING

Enjoy Warm Towels Anytime



APPOINTMENT TIME press once to increase 1h, can be booked 12h

Image: The towel warmer's display showing the 1-12 hour appointment timer function, allowing for delayed heating.

5.5 Remote Control

The included remote control allows for convenient operation from a distance. Its effective range is approximately 3 meters (10 feet). Ensure there are no obstructions between the remote and the unit for optimal performance.

6. MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your towel warmer.

- **Cleaning:** Always unplug the unit before cleaning. Use a soft, damp cloth to wipe down the exterior and interior surfaces. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Storage:** When not in use for extended periods, ensure the unit is clean and dry. You can fold the unit to its compact 15L size for space-saving storage. Store it in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; Power outlet malfunction; Unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. If the problem persists, contact customer support.
Towels are not heating evenly.	Overfilled unit; Towels not properly arranged.	Reduce the number of towels. Ensure towels are loosely placed inside to allow for proper heat circulation.
Remote control not working.	Batteries depleted; Obstruction between remote and unit; Remote out of range.	Replace remote control batteries. Ensure a clear line of sight to the unit. Operate the remote within 3 meters (10 feet) of the unit.
Unit makes unusual noise.	Internal component issue.	Unplug the unit immediately and contact customer support. Do not attempt to repair.

8. SPECIFICATIONS

- **Model Number:** CP77489-X45303
- **Capacity:** 30 Liters (expandable from 15 Liters)
- **Power:** 400W
- **Material:** Plastic (anti-rust, scratch-resistant)
- **Temperature Settings:** 122°F, 131°F, 140°F, 149°F (50°C, 55°C, 60°C, 65°C)
- **Heating Timer:** 30, 45, 60, 90 minutes
- **Appointment Timer:** 1-12 hours delay start
- **Item Weight:** Approximately 9.43 pounds (4.28 kg)
- **Package Dimensions:** 17.5 x 13 x 11.73 inches (44.45 x 33.02 x 29.79 cm)
- **Remote Control Range:** Up to 3 meters (10 feet)

9. WARRANTY AND SUPPORT

Specific warranty details are not provided in this manual. For information regarding warranty coverage, product support, or replacement parts, please contact Saker customer service through the retailer where the product was purchased or visit the official Saker website. Please have your model number (CP77489-X45303) and purchase date available when contacting support.