

[Manuals.plus](#) /

› [KBS](#) /

› [KBS 19-in-1 Programmable Bread Maker \(Model MBF-016-Silver\) Instruction Manual](#)

KBS MBF-016-Silver

KBS 19-in-1 Programmable Bread Maker

MODEL: MBF-016-SILVER

Introduction

Welcome to the world of effortless homemade baking with your new KBS 19-in-1 Programmable Bread Maker. This appliance is designed to simplify the bread-making process, allowing you to enjoy fresh, delicious bread with minimal effort. Please read this manual thoroughly before first use to ensure safe and optimal operation.



The KBS 19-in-1 Programmable Bread Maker, ready for use in a modern kitchen setting.

Product Features

- **19 Pre-programmed Settings:** Includes options for Gluten-free, Sourdough, Basic bread, French, Dough, Yogurt, Jam, Cake, and more.
- **Customizable Program:** Tailor the duration of each baking stage for personalized results.
- **Healthy Ceramic Pan:** High-quality, non-stick ceramic pan and paddle for even heat conduction and healthier baking.
- **360° Hot Air Circulation:** Ensures a crispy crust and fluffy interior.
- **Adjustable Loaf Sizes:** Bake 1lb, 1.5lb, or 2lb loaves.
- **3 Crust Color Options:** Choose between light, medium, or dark crusts.
- **15-Hour Delay Start:** Prepare ingredients in advance and enjoy fresh bread at your convenience.
- **60-Minute Keep Warm:** Maintains bread temperature after baking.
- **15-Minute Power Failure Protection:** Resumes program if power is restored within 15 minutes.
- **650W Variable Frequency Motor:** Efficient and durable motor for consistent performance.
- **Intelligent Digital Display:** High-definition display and large viewing window for monitoring the baking process.



Visual representation of the 19 diverse programs and customizable options available on the bread maker.

What's in the Box

Your KBS 19-in-1 Programmable Bread Maker package includes the following items:

- 1 x KBS Bread Maker Machine
- 1 x Non-stick Ceramic Pan
- 1 x Ceramic Paddle (Stirring Rod)
- 1 x User Manual
- 1 x Recipe Book (53 recipes + step-by-step guides)
- 1 x Quick Start Guide
- 1 x Extra-long Heat-resistant Glove
- 1 x Measuring Cup
- 1 x Measuring Spoon
- 1 x Hook (for removing paddle)

10 Accessories Included

- 1 Bread Maker Machine
- 2 Nonstick Ceramic Pan
- 3 Manual
- 4 Recipe
- 5 Quick Start Guide
- 6 Measuring Cup
- 7 Measuring Spoon
- 8 Heat Resistant Glove
- 9 Stirring Rod
- 10 Hook



A complete set of accessories provided with your bread maker for a seamless baking experience.

Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the ceramic bread pan, stirring paddle, measuring cup, and spoon with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the bread maker with a damp cloth.
3. **Position:** Place the bread maker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Install Pan:** Insert the stirring paddle onto the shaft at the bottom of the bread pan. Place the bread

pan into the baking chamber, pressing down firmly and twisting slightly until it locks into place.

5. **Power On:** Plug the power cord into a grounded electrical outlet. The machine will beep, and the display will light up, indicating it's ready for operation.

Operating Instructions

Control Panel Overview

The bread maker features an intuitive digital touch panel with an LCD screen. The main controls include:

- **MENU:** Press to cycle through the 19 pre-programmed settings.
- **LOAF:** Press to select the desired loaf size (1.0lb, 1.5lb, 2.0lb).
- **COLOR:** Press to choose your preferred crust color (Light, Medium, Dark).
- **+/- Buttons:** Adjust time for delay start or custom programs.
- **START/STOP/PAUSE:** Initiates, pauses, or cancels a program. Press and hold for 3 seconds to cancel a program.



The user-friendly control panel and display for easy program selection.

Adding Ingredients

Always add ingredients in the order specified in your recipe. Typically, liquids go first, followed by dry ingredients, with yeast placed last on top of the dry ingredients, away from liquids and salt.

Using the Fruit/Nut Dispenser

The intelligent fruit/nut dispenser automatically adds ingredients like nuts, seeds, or dried fruit at the optimal mixing stage. Open the dispenser lid, add your desired ingredients, and close it. The machine will release them automatically.

Selecting a Program

1. Add ingredients to the bread pan according to your recipe.
2. Close the lid.
3. Press the **MENU** button repeatedly until the desired program number is displayed. Refer to the included recipe book for program details.
4. Press the **LOAF** button to select your desired loaf size (1.0lb, 1.5lb, or 2.0lb).
5. Press the **COLOR** button to choose your preferred crust color (Light, Medium, or Dark).
6. If using the Delay Start function, press the **+/-** buttons to set the desired delay time.

7. Press the **START/STOP/PAUSE** button to begin the program.



The 360° convection heating ensures uniform baking and a perfect crust.

Delay Start Function

The 15-hour delay start allows you to program the bread maker to finish baking at a later time. After selecting your program, loaf size, and crust color, use the +/- buttons to set the total time until baking completion (including the baking cycle itself). Press **START/STOP/PAUSE** to activate the delay timer.

RELIABLE LEGACY

- History** 2008 Since 2008 pioneering innovation
- Market Leader** #1 #1 in US, 70% market share
- Award-Winning Design** Honored multiple design awards
- Certified Quality** ETL listed, safety and healthy
- Eco-Friendly** Energy Star partner

Set the delay timer to wake up to the aroma of freshly baked bread.

Keep Warm Function

After the baking cycle is complete, the bread maker automatically enters a 60-minute Keep Warm phase, maintaining the bread at an optimal temperature of 135°F. This ensures your bread stays warm and fresh until you're ready to serve.

Power Failure Protection

In the event of a power outage, the bread maker has a built-in memory function. If power is restored within 15 minutes, the program will automatically resume from where it left off.

Video Guide: Simple & Easy to Use

Your browser does not support the video tag.

Watch this official video from KBS Direct demonstrating the simple and easy operation of the bread maker, including program selection and ingredient loading.

Maintenance and Cleaning

Proper maintenance ensures the longevity and performance of your bread maker.

- **Bread Pan & Paddle:** The non-stick ceramic pan and paddle are dishwasher safe, but hand washing is recommended to preserve the non-stick coating. Use a soft sponge and mild detergent.
- **Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not immerse the appliance in water.
- **Interior:** Clean the interior of the baking chamber with a damp cloth. Ensure no food debris accumulates around the heating element.
- **Fruit/Nut Dispenser:** The dispenser is removable for easy cleaning. Wash with warm, soapy water and dry thoroughly.
- **Storage:** Ensure the bread maker is clean and dry before storing. Store in a cool, dry place.



The healthy ceramic pan is designed for easy cleaning and safe baking.

Troubleshooting

If you encounter issues with your bread maker, refer to the following common solutions:

- **Bread Not Rising:** Ensure yeast is fresh and active. Check water temperature (should be lukewarm, not hot or cold). Verify correct ingredient measurements and order.
- **Dough Too Sticky/Dry:** Adjust liquid or flour slightly. Humidity and flour type can affect consistency.
- **Machine Not Starting:** Ensure the power cord is securely plugged in. Check that the bread pan is correctly installed and locked.

- **Program Cancellation:** If you accidentally start a program, press and hold the **START/STOP/PAUSE** button for approximately 3 seconds until you hear a beep to reset the machine.
- **Uneven Crust:** Ensure the bread maker is placed on a level surface. The 360° hot air circulation should prevent this, but environmental factors can sometimes play a role.

Specifications

Feature	Detail
Model Number	MBF-016-Silver
Voltage	120 Volts
Wattage	650 Watts
Capacity	2 Pounds (1lb, 1.5lb, 2lb options)
Number of Programs	19
Product Dimensions	8"D x 13.4"W x 11"H
Material	100% Silver Stainless Steel
Pan Material	Non-stick Ceramic
Product Care Instructions	Dishwasher Safe or Hand Wash (pan and paddle)

Warranty and Support

KBS stands behind the quality of its products. Your bread maker includes:

- **4-Year After-Sales Service:** Comprehensive support for any issues you may encounter.
- **Lifetime Technical Support:** Access to expert assistance for the lifespan of your product.
- **Responsive Support:** Our experienced engineers and well-trained support team aim to respond to inquiries within 12 hours.

For assistance, please refer to the contact information provided in your Quick Start Guide or visit the official KBS website.