

Garwarm TT-JD2003-6B

Garwarm 26.4-inch Black Flush Mount Ceiling Fan with Lights (Model TT-JD2003-6B) Instruction Manual

Model: TT-JD2003-6B | Brand: Garwarm

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Garwarm 26.4-inch Black Flush Mount Ceiling Fan with Lights, Model TT-JD2003-6B. Please read this manual thoroughly before installation and use, and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

- Always disconnect power at the circuit breaker before installation or servicing.
- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Ensure the mounting structure can support the weight of the fan fixture.
- Do not bend fan blades during installation or cleaning.
- Keep hands clear of the fan blades when the fan is operating.
- Use only E26 base bulbs, maximum 60W (bulbs not included).
- Glass components are fragile. Handle with care to prevent breakage and injury.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Ceiling Fan Unit (with integrated motor and light sockets)
- Fan Blades (3 included)
- Light Kit (integrated)
- Remote Control
- Mounting Bracket
- Hardware Pack (screws, wire caps, wrench)
- Glass Lampshades (6 included)

4. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Garwarm
Model Number	TT-JD2003-6B
Color	Black Glass
Material	Glass, Iron, Polycarbonate
Style	Farmhouse/Rustic/Industrial
Light Fixture Form	Ceiling Fan Light
Product Dimensions	26.37"L x 26.37"W x 10.23"H (67cm x 67cm x 26cm)
Power Source	DC
Installation Type	Flush Mount
Control Method	Remote Control
Light Source Type	E26 (Bulbs not included, Max 60W)
Number of Light Sources	6
Wattage	30 watts (fan motor)
Number of Blades	3
Air Flow Capacity	8.2 Cubic Meters Per Minute
Special Features	Timer (1/2/4/8H), Reversible Motor, 6 Wind Speeds
Item Weight	12.1 pounds

5. SETUP AND INSTALLATION

Follow these steps for proper installation. For a visual guide, refer to the installation video provided below.

- Unpack and Inspect:** Carefully open the carton and inspect all components against the package contents list.
- Assemble Motor and Base:** Fix the motor head to the base. Ensure the gear washer is placed correctly and tighten firmly using the provided wrench.
- Attach Fan Blades:** Use the special screws to fix the three fan blades to the motor. Ensure the blades are flat and securely tightened. English letters on the blades indicate the direction of the blade surface.
- Connect Internal Wiring:** Correctly connect the motor wires and light source wires to the controller ports.
- Mounting Bracket Installation:** Fix the mounting bracket to the ceiling with screws. Ensure it is securely fastened to a suitable support structure.
- Electrical Connection:** **IMPORTANT: Ensure power supply is cut off at the circuit breaker.**Strictly and accurately connect the live wire (L) and neutral wire (N) of the lamp to the live wire (L) and neutral wire (N) of the power supply. Tighten with wire caps and check for secure connections.
- Attach Fan Unit to Mounting Bracket:** Carefully lift the assembled fan unit and attach it to the ceiling mounting bracket, securing it with screws.

8. **Install Blade Decorative Cover:** Turn the blade decorative cover clockwise and tighten it.
9. **Install Glass Lampshades:** Use the specially provided wrench to unscrew the outer teeth of the lamp head. Carefully place the glass lampshade over the bulb socket. **Caution: Glass is fragile. Do not stand directly below the glass during installation.**
10. **Install Light Bulbs:** Screw in the E26 light sources (bulbs not included) into the sockets.
11. **Remote Control Holder:** Install the remote control holder to a convenient wall location using screws.

Installation Video Guide

Your browser does not support the video tag.

This video demonstrates the step-by-step installation process for the Garwarm ceiling fan with lights, including unpacking, assembly of motor and blades, wiring connections, and final mounting. (Source: Garwarm Home Decor Store)

Product Dimensions



Compatible with E26 Bulbs

(Max 60W, Bulb not included)



Image showing the product dimensions: 26.37 inches (67cm) diameter and 10.23 inches (26cm) height. Also indicates compatibility with E26 bulbs (Max 60W, not

included).

6. OPERATING INSTRUCTIONS

Your Garwarm ceiling fan with lights is controlled by the included remote. Ensure the remote has working batteries.

Remote Control Functions



The remote control allows you to manage all fan and light functions. Buttons include: Turn on/off, Light on/off, 6 Speed settings, Natural wind mode, Timer settings (1/2/4/8 hours), Forward/Reverse rotation, and Stop/Code alignment.

- **Power On/Off:** Press the power button to turn the fan and lights on or off.
- **Light Control:** Press the light button to turn the lights on or off independently of the fan.
- **Fan Speed:** Select from 6 wind speed levels (1-6) to adjust airflow.
- **Natural Wind Mode:** Activates a fluctuating fan speed to simulate natural breezes.
- **Timer Function:** Set the fan to automatically turn off after 1, 2, 4, or 8 hours.

- **Reversible Motor:** Use the forward/reverse button to change the direction of the fan blades. This allows for downward airflow in summer for cooling and upward airflow in winter to circulate warm air.

Fan Speed Settings



6-Speed Wind Adjustable



1-2 Speed
Sleep Wind



3-4 Speed
Natural Wind



5-6 Speed
Strong Wind

The fan offers 6 speed settings: 1-2 for a gentle 'Sleep Wind', 3-4 for a 'Natural Wind', and 5-6 for a 'Strong Wind' to suit various comfort levels.

Reversible Motor Function



Reversible DC Motor



Summer

Let the air flow circulate downwards and provide a cool breeze



Winter

Circulate the air flow upwards to increase the room temperature

The reversible DC motor allows you to change the fan's direction for seasonal comfort. Downward airflow provides a cool breeze in summer, while upward airflow helps circulate warm air in winter.

Quiet Operation and Timer



Low Noise
Silent transmission instruction

1H 2H 4H 8H

Timing Function

10dB 35dB 50dB 70dB

Feel quiet **Our ceiling fan** Normal talk Busy streets

The fan operates at a low noise level of 35dB, ensuring a quiet environment. The integrated timer allows for automatic shut-off after 1, 2, 4, or 8 hours.

7. MAINTENANCE

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow bulbs to cool completely before handling.
- **Tightness Check:** Periodically check all screws and connections for tightness.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Fan does not operate	No power supply; Loose wiring; Remote control battery low.	Check circuit breaker; Verify all wire connections are secure; Replace remote control batteries.
Lights do not turn on	Bulbs are faulty or not installed correctly; Loose wiring; No power supply.	Check and replace bulbs; Verify light kit wiring; Check circuit breaker.
Fan makes excessive noise	Loose screws on fan blades or mounting bracket; Fan not balanced.	Tighten all screws; Ensure fan blades are securely attached and balanced.
Remote control not working	Batteries are dead or incorrectly inserted; Remote not paired with fan.	Replace batteries, ensuring correct polarity; Refer to remote pairing instructions (usually involves pressing a 'code alignment' button).

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Garwarm customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

Manufacturer: Garwarm

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question