

## Kid Trax KT1641YW

# Kid Trax 12V Zero Turn Lawn Mower Tractor Toy Instruction Manual

Model: KT1641YW

## 1. INTRODUCTION

---

Thank you for choosing the Kid Trax 12V Zero Turn Lawn Mower Tractor Toy. This manual provides essential information for the safe assembly, operation, and maintenance of your new ride-on toy. Please read all instructions carefully before use and retain this manual for future reference.

## 2. SAFETY INFORMATION

---

### **WARNING: Adult Supervision Required.**

- This ride-on toy is intended for children aged 3 to 7 years old.
- Maximum weight capacity is 77 lbs (35 kg). Do not exceed this limit.
- Always ensure the child wears the seat belt provided for secure riding.
- Operate the toy only on flat, dry surfaces such as grass, driveways, or sidewalks. Avoid steep inclines, steps, swimming pools, or other bodies of water.
- Always wear shoes when operating the toy.
- Never allow more than one rider at a time.
- Keep hands, feet, hair, and clothing away from moving parts.

## 3. PACKAGE CONTENTS

---

Ensure all components are present before beginning assembly:

- Kid Trax 12V Zero Turn Lawn Mower Tractor Toy (main unit)
- 12V Rechargeable Battery
- Battery Charger

- Assembly Hardware
- Instruction Manual



*Image: The Kid Trax 12V Zero Turn Lawn Mower Tractor Toy in yellow, showcasing its overall design.*

## 4. SETUP

---

### 4.1 Assembly

Assembly is required for this product. Please follow the detailed step-by-step instructions provided in the separate assembly guide included in your package. Ensure all parts are securely fastened before proceeding.

### 4.2 Battery Charging

Before first use, fully charge the 12V rechargeable battery for the recommended duration (refer to the separate battery charging instructions). The charger connects to a designated port on the toy. Always ensure the toy is turned off during charging.



Image: A child happily riding the Kid Trax mower, highlighting its 3 MPH max speed and the inclusion of a 12V rechargeable battery and charger.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Controls

- **Dual Motor Handle Controls:** Use the two handles to steer and control movement. Pushing both forward moves the mower forward. Pulling both back moves it in reverse. Pushing one forward and pulling the other back allows for 360° spins, mimicking a real zero-turn mower.
- **Accelerator Pedal:** Press the foot pedal to engage the motors and move the toy. Release the pedal to brake.
- **Speed:** The toy operates at a safe maximum speed of 3 MPH (4.8 km/h) in both forward and reverse.

### 5.2 Features

- **Translucent Mowing Deck:** The clear deck creates the illusion of freshly cut grass, enhancing the realistic play experience.
- **Power Trax Rubber Traction Tires:** Designed for smooth and steady rides across various outdoor

surfaces, including grass, driveways, and sidewalks.

- **Seat Belt:** For rider safety and security.
- **Cup Holder:** Conveniently located for drinks or small snacks during play.



*Image: A detailed view of the mower's control panel, emphasizing the dual handle drive system, rubber traction tires, and the integrated seat belt and cup holder.*



*Image: A close-up of the translucent mowing deck, showing the simulated spinning blade action for a realistic effect.*

## 6. MAINTENANCE

---

- Regularly inspect the toy for any loose parts, damaged wiring, or worn components. Tighten or replace as necessary.
- Keep the toy clean by wiping it with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Store the toy in a dry, protected area when not in use.
- **Battery Care:** Always fully charge the battery after each use and before storing for extended periods to prolong battery life. Do not overcharge.

## 7. TROUBLESHOOTING

---

- **Toy does not move:** Ensure the battery is fully charged and properly connected. Check all electrical connections for looseness. Verify the power switch is in the 'ON' position.
- **Reduced speed or short run time:** The battery may need recharging or could be nearing the end of its lifespan. Ensure the toy is not overloaded beyond the maximum weight capacity.
- **Unusual noises:** Stop using the toy immediately and inspect for any obstructions in the wheels or motor.

area. Contact customer support if the issue persists.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand Name	Kid Trax
Model Number	KT1641YW
UPC	025543021220
Age Range	3-7 years old
Max Weight Capacity	77 lbs
Max Speed	3 MPH
Battery	12V Rechargeable
Material Type	Plastic
Item Dimensions (L x W x H)	34.25"L x 32.68"W x 27.17"H
Item Weight	39.7 Pounds
Assembly Required	Yes



Image: The Kid Trax mower with its key dimensions labeled for reference.

## 9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided in your product packaging or visit the official Kid Trax website. Keep your purchase receipt as proof of purchase.