



[Manuals.plus](#) /

> [T-WOLF](#) /

> T-Wolf T60 Wired 60% Mechanical Keyboard Instruction Manual

## T-WOLF T60

# T-Wolf T60 Wired 60% Mechanical Keyboard

## INSTRUCTION MANUAL

### Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your T-Wolf T60 Wired 60% Mechanical Keyboard. Please read this manual carefully before using the product to ensure proper function and longevity.



Image: T-Wolf T60 Wired 60% Mechanical Keyboard. This image displays the compact design of the keyboard, highlighting its 63-key layout and wired connectivity.

## Setup

- Unboxing:** Carefully remove the keyboard and all included accessories from the packaging. Verify that all components are present: T-Wolf T60 keyboard and USB-C to USB cable.
- Connecting the Keyboard:**
  - Locate the USB-C port on the keyboard.
  - Insert the USB-C end of the provided cable into the keyboard's USB-C port.
  - Insert the USB-A end of the cable into an available USB 2.0 port on your computer (PC, desktop, or laptop).
- Driver Installation:** The T-Wolf T60 keyboard is plug-and-play. Your operating system should automatically detect and install the necessary drivers. No manual driver installation is typically required.
- Initial Test:** Open a text editor or word processor and type to confirm the keyboard is functioning correctly.

## Operation

The T-Wolf T60 is a 60% mechanical keyboard with 63 keys, designed for efficient typing and gaming. It features RGB

backlighting and multi-key anti-ghosting.

- **Basic Key Functions:** All standard alphanumeric and symbol keys function as expected. Due to the compact 60% layout, some functions (like F-keys, arrow keys, and navigation keys) are accessed via a Function (Fn) key combination. Refer to the keyboard's keycap legends for specific Fn key combinations.
- **RGB Backlighting:** The keyboard features customizable RGB backlighting.
  - To cycle through different lighting modes, use the designated Fn key combination (e.g., Fn + \ or Fn + P).
  - To adjust brightness, use the designated Fn key combination (e.g., Fn + Up/Down arrow keys, if available via Fn layer).
  - To change lighting speed, use the designated Fn key combination (e.g., Fn + Left/Right arrow keys, if available via Fn layer).

*Specific key combinations may vary; consult the keycap legends or manufacturer's website for precise controls.*

- **Multi-Key Anti-Ghosting:** This feature ensures that multiple simultaneous key presses are registered accurately, which is beneficial for fast-paced gaming and complex commands.

## Maintenance

---

Proper maintenance helps extend the lifespan of your keyboard.

- **Cleaning:**
  - Disconnect the keyboard from your computer before cleaning.
  - Use a can of compressed air to remove dust and debris from between the keycaps.
  - Wipe the keycaps and keyboard surface with a soft, slightly damp, lint-free cloth. Avoid excessive moisture.
  - Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the keyboard's finish and keycap legends.
- **Storage:** When not in use for extended periods, store the keyboard in a clean, dry environment away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or twisting the USB-C cable excessively to prevent internal damage.

## Troubleshooting

---

If you encounter issues with your T-Wolf T60 keyboard, refer to the following common solutions:

- **Keyboard Not Responding:**
  - Ensure the USB-C cable is securely connected to both the keyboard and the computer.
  - Try connecting the keyboard to a different USB port on your computer.
  - Test the keyboard on another computer to determine if the issue is with the keyboard or the original computer's setup.
  - Restart your computer.
- **RGB Backlighting Not Working or Incorrect:**
  - Ensure the keyboard is properly connected and receiving power.
  - Try cycling through the RGB modes using the Fn key combinations mentioned in the Operation section.
  - Check if the brightness is set to maximum.
- **Keys Not Registering or Double-Typing:**

- Clean the keyboard thoroughly, especially around the affected keys, using compressed air.
- Ensure no debris is lodged under the keycaps.
- If the issue persists, it may indicate a hardware fault.

## Specifications

Feature	Detail
Brand	T-WOLF
Model	T60
Connectivity Technology	USB-C (Wired)
Compatible Devices	PC, desktop, laptop
Keyboard Description	Gaming, Mechanical
Number of Keys	63
Special Features	RGB Backlighting, Multi-Key Anti-Ghosting
Material	Plastic
Keyboard Layout	QWERTY

## Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for warranty claims.

Manufacturer: T-Wolf