

[manuals.plus](#) /

- › [Beautiful by Drew Barrymore](#) /
- › [Beautiful by Drew Barrymore 6 Qt Air Fryer Instruction Manual](#)

Beautiful by Drew Barrymore 19137

Beautiful by Drew Barrymore 6 Qt Air Fryer Instruction Manual

Model: 19137

1. INTRODUCTION

Thank you for purchasing the Beautiful by Drew Barrymore 6 Qt Air Fryer. This appliance is designed to provide a versatile and efficient way to prepare a variety of meals, offering functions such as air frying, roasting, reheating, and dehydrating. Please read this manual thoroughly before initial use to ensure safe operation and optimal performance.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the basket and crisping tray are properly inserted before operation.
- This appliance is for household use only.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your 6 Qt Air Fryer.



Figure 3.1: Front View of the Air Fryer. This image displays the main unit of the Beautiful 6 Qt Air Fryer, highlighting its sleek design and the touch-activated control panel.

Touch-Activated Display



Figure 3.2: Touch-Activated Display. A close-up of the control panel, showing the time and temperature settings, and function buttons for Air Fry, Roast, Reheat, and Dehydrate. The display illuminates only when in use.



Figure 3.3: Removable Basket and Crisping Tray. This image shows the interior components of the air fryer, including the non-stick basket and the removable crisping tray, designed for easy cleaning.

4. SETUP

- 1. Unpacking:** Carefully remove all packaging materials and any promotional labels from the air fryer.
- 2. Cleaning:** Before first use, wash the air fryer basket and crisping tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
- 3. Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances, ensuring adequate air circulation around the unit.
- 4. Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The Beautiful 6 Qt Air Fryer features a touch-activated display for easy operation.

5.1. General Operation

- 1. Power On:** Plug in the air fryer. The display will briefly illuminate, then show a standby indicator.
- 2. Select Function:** Touch the desired cooking function (Air Fry, Roast, Reheat, Dehydrate) on the display.
- 3. Adjust Settings:** Use the '+' and '-' buttons for Time and Temp to set your desired cooking duration and temperature. The temperature range is 90°F to 400°F.
- 4. Start Cooking:** Press the 'Start/Pause' button to begin the cooking cycle.
- 5. Pause/Resume:** During cooking, press 'Start/Pause' to pause the cycle. Press again to resume.
- 6. Power Off:** Press the power button to turn off the appliance. It will also automatically shut off after the cooking cycle is complete.

5.2. Preheating

For best results, preheating is recommended for most recipes. To preheat:

- Select your desired cooking function and temperature.
- Set the timer for 3-5 minutes.
- Press 'Start/Pause'. The air fryer will preheat.
- Once preheated, carefully pull out the basket and add your food.

5.3. Air Frying

Air frying uses hot air circulation to cook food, resulting in a crispy exterior with significantly less oil.

1. Place food on the crisping tray inside the basket. Do not overfill.
2. Insert the basket firmly into the air fryer.
3. Select 'Air Fry' function. Adjust temperature (e.g., 350°F-400°F) and time as per recipe.
4. Press 'Start/Pause'.
5. For even cooking, shake the basket halfway through the cooking time (if applicable). The air fryer will pause when the basket is removed and resume when reinserted.



Figure 5.1: Air Frying in Progress. This image shows the air fryer basket pulled out, revealing perfectly cooked french fries, demonstrating the appliance's air frying capability.

5.4. Roasting

Use the Roast function for meats, vegetables, and other items that benefit from oven-style cooking.

- Prepare food and place it in the basket.
- Select 'Roast' function. Adjust temperature and time.
- Press 'Start/Pause'.

5.5. Reheating

The Reheat function is ideal for warming up leftovers while maintaining texture.

- Place food in the basket.
- Select 'Reheat' function. Adjust temperature and time as needed.
- Press 'Start/Pause'.

5.6. Dehydrating

The Dehydrate function allows you to make dried fruits, vegetables, or jerky.

- Arrange thinly sliced food on the crisping tray.
- Select 'Dehydrate' function. Set a low temperature (e.g., 90°F-150°F) and a longer time (several hours).
- Press 'Start/Pause'.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Basket and Crisping Tray:** The removable basket and crisping tray are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. Rinse and dry thoroughly.
3. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scourers.
4. **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Do not immerse the main unit in water.



Figure 6.1: Dishwasher Safe Components. This image illustrates the ease of cleaning, showing the air fryer basket and crisping tray being placed into a dishwasher for convenient washing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact support.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
Food is not crispy.	Too much moisture; not enough oil (if applicable); temperature too low.	Pat food dry before cooking. Lightly spray or toss with oil. Increase temperature or cooking time.
White smoke coming from appliance.	Grease residue from previous use; fatty food cooking.	Clean the basket and crisping tray thoroughly after each use. For fatty foods, drain excess fat during cooking.
Display not responding.	Temporary electronic glitch; power issue.	Unplug the unit for a few minutes, then plug it back in. Ensure hands are clean and dry when touching the display.

8. SPECIFICATIONS

Model Name: 6 Qt Air Fryer with TurboCrisp Technology

Model Number: 19137

Capacity: 6 Quarts

Power: 1750 Watts

Voltage: 120 Volts

Temperature Range: 90°F - 400°F

Control Method: Touch-Activated Display

Material: Stainless Steel

Product Dimensions: 15.11"D x 12.08"W x 13.03"H

Item Weight: 13 Pounds

Special Features: Automatic Shut-Off, Non-Stick, Removable Basket, TurboCrisp Technology, Dishwasher Safe Components



Figure 8.1: Product Dimensions. This image provides a visual representation of the air fryer's dimensions: 15.11 inches deep, 12.08 inches wide, and 13.03 inches high.


9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Beautiful by Drew Barrymore website. Keep your proof of purchase for warranty claims.

Note: The manufacturer's warranty typically covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or commercial use.

© 2025 Beautiful by Drew Barrymore. All rights reserved.

Related Documents - 19137

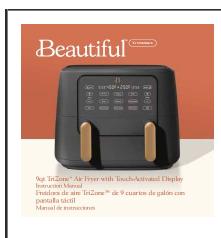

[Beautiful 9qt TriZone Air Fryer Instruction Manual](#)

Comprehensive instruction manual for the Beautiful 9qt TriZone Air Fryer with Touch-Activated Display. Includes setup, operation, safety guidelines, cooking charts, and maintenance tips for versatile kitchen use.

	<p>Beautiful 3qt Digital Air Fryer Instruction Manual & Guide</p> <p>Explore the Beautiful 3qt Digital Air Fryer with TurboCrisp™ Technology. This instruction manual provides essential safety guidelines, operating instructions, cooking charts, and maintenance tips for your kitchenware.</p>
	<p>Beautiful Slim Espresso Maker 20 Bar Pressure - Instruction Manual</p> <p>User manual for the Beautiful Slim Espresso Maker. Learn how to operate, clean, and maintain your 20-bar pressure espresso machine for perfect home-brewed coffee drinks. Includes safety guidelines and recipes.</p>
	<p>Beautiful PowerExact Blender System Instruction Manual Precision Blending</p> <p>Instruction manual for the Beautiful PowerExact Blender System, featuring Patent-Pending PrecisionSense™ Blade technology. Covers safety, operation, maintenance, and troubleshooting for this easy-to-use kitchen appliance.</p>
	<p>Beautiful 6qt Digital Air Fryer with Touch-Activated Display - Instruction Manual</p> <p>Instruction manual for the Beautiful 6qt Digital Air Fryer (models 19018, 19028, 19033, 19038). Covers safety precautions, operation, cooking functions (Air Fry, Roast, Reheat, Dehydrate), cleaning, and warranty information.</p>
	<p>Beautiful 10-in-1 6qt Electric Multi-Cooker Instruction Manual</p> <p>Comprehensive instruction manual for the Beautiful 10-in-1 6qt Electric Multi-Cooker. Learn about safety, operation, maintenance, and warranty for this versatile kitchen appliance from Drew Barrymore's collection.</p>