

[Manuals.plus](#) /

› [Kiseely](#) /

› Kiseely Portable Foldable Clothes Dryer, Model GR360 User Manual

Kiseely GR360

Kiseely Portable Foldable Clothes Dryer, Model GR360 User Manual

Model: GR360 | Brand: Kiseely

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Kiseely Portable Foldable Clothes Dryer, Model GR360. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Kiseely GR360 is designed for convenient and efficient clothes drying in various settings, including homes, apartments, RVs, and dormitories. It features a high-output heating system, a timer function, and a foldable design for easy storage and portability.

SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not immerse the appliance in water or other liquids.
- Always unplug the dryer from the electrical outlet when not in use or before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Use the appliance only for its intended purpose as described in this manual.
- Ensure the dryer is placed on a stable, level surface during operation.
- Do not block air vents during operation to prevent overheating.
- Do not overload the dryer. Adhere to the maximum capacity of 18 kg.
- Do not dry items that have been soiled with cooking oil, gasoline, dry-cleaning solvents, or other flammable or explosive substances.

PACKAGE CONTENTS

Carefully unpack your Kiseely Portable Foldable Clothes Dryer and ensure all items are present. If any parts are missing or damaged, contact customer support.

- Main Heating Unit
- Foldable Support Framework (Rods and Connectors)
- Outer Fabric Cover
- Hanging Rods (for clothes)
- User Manual

SETUP AND ASSEMBLY

Follow these steps to assemble your portable clothes dryer. The process is designed for quick setup and disassembly.



Image: Assembly and Storage Steps. This image illustrates the three main steps for setting up and folding the dryer: 1. Remove the outer cover, 2. Split the support framework, and 3. Put the frame and outer cover into the groove of the base for storage. Dimensions of 150cm H x 75cm W x 45cm D are also shown.

1. **Unpack Components:** Remove all parts from the packaging.
2. **Assemble Framework:** Connect the support rods to form the internal frame. Ensure all poles are tightly connected to fit securely into the base.
3. **Attach Outer Cover:** Drape the fabric cover over the assembled framework, ensuring it fits snugly and zips up correctly.
4. **Place Heating Unit:** Position the main heating unit securely at the bottom of the dryer enclosure.
5. **Install Hanging Rods:** Insert the hanging rods into the designated slots within the framework.

For disassembly and storage, reverse these steps. The unit is designed to fold compactly into its base for easy transport and space-saving storage.

OPERATING INSTRUCTIONS

Operating your Kiseely Portable Foldable Clothes Dryer is straightforward. Follow these guidelines for optimal drying results.



Image: Drying Capacity and Times. This image displays clothes hanging inside the dryer and provides estimated drying times: Silk (20 min), Shirt (40 min), Towel (50 min), Denim (80 min), Thick Clothes (120 min).

1. **Load Clothes:** Hang clothes evenly on the internal rods. Do not overload the dryer; the maximum capacity is 18 kilograms. Ensure clothes are not dripping wet to prevent excess water accumulation.
2. **Close Cover:** Zip up the outer fabric cover completely to create an enclosed drying environment.
3. **Plug In:** Connect the power cord to a suitable electrical outlet.
4. **Set Timer:** Use the control panel on the heating unit to set the desired drying time. The dryer features a timer function that allows you to select drying durations. The unit will automatically stop when the set time is complete.
5. **Start Drying:** Press the power button to begin the drying cycle. The 1500W high-output heating system will generate hot air to dry your garments efficiently.
6. **Drying Times:**
 - Silk: Approximately 20 minutes
 - Shirts: Approximately 40 minutes
 - Towels: Approximately 50 minutes
 - Denim: Approximately 80 minutes
 - Thick Clothes: Approximately 120 minutes

Note: Drying times may vary based on fabric type, thickness, and initial moisture content.

7. **After Drying:** Once the cycle is complete, unplug the unit and carefully remove your dry clothes.

MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your dryer.

- **Cleaning the Outer Cover:** The fabric cover can be wiped clean with a damp cloth. For deeper cleaning, it may be removed and hand-washed with mild detergent, then air-dried.
- **Cleaning the Heating Unit:** Ensure the unit is unplugged and cool before cleaning. Wipe the exterior with a dry or slightly damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Draining Water:** The dryer features a stable bracket with bottom drainage to prevent residual water

accumulation. Periodically check and empty any collected water from the base if necessary.

- **Storage:** When not in use, disassemble the dryer and store it in its compact form in a dry, cool place.

TROUBLESHOOTING

If you encounter issues with your Kiseely Portable Foldable Clothes Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not turn on.	No power supply. Power button not pressed.	Check if the power cord is securely plugged into a working outlet. Press the power button firmly.
Clothes are not drying effectively.	Overloaded dryer. Timer set too short. Air vents blocked. Clothes too wet.	Reduce the amount of clothes. Increase drying time. Ensure air vents on the heating unit are clear. Wring out clothes thoroughly before hanging.
Excessive noise during operation.	Unit not on a stable surface. Internal components loose.	Place the dryer on a flat, stable surface. Check that all framework connections are tight.
Water accumulation in the base.	Normal condensation.	Empty the drainage area periodically. Ensure clothes are not excessively wet when loaded.

SPECIFICATIONS

Brand	Kiseely
Model Number	GR360
Item Weight	12.77 pounds (approx. 5.79 kg)
Dimensions (Assembled)	150cm H x 75cm W x 45cm D (approx. 59" H x 29.5" W x 17.7" D)
Capacity	18 Kilograms
Power Output	1500W
Material Type	Stainless Steel (frame), Fabric (cover)
Drying Temperature	Constant 70°C / 158°F
Form Factor	Freestanding, Foldable
Access Location	Top Load

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase

or contact the retailer. Keep your proof of purchase for any warranty claims.

If you require assistance with assembly, operation, or troubleshooting beyond the scope of this manual, please reach out to Kiseely customer service through their official channels.