

[Manuals.plus](#) /

› [Coleman](#) /

› Coleman Pop-Up Instant Tent 4-Person Model 2155792 Instruction Manual

Coleman 2155792

Coleman Pop-Up Instant Tent (Model 2155792) Instruction Manual

Your guide to setting up, using, and maintaining your Coleman Pop-Up Instant Tent.

INTRODUCTION

Thank you for choosing the Coleman Pop-Up Instant Tent. This manual provides essential information for the safe and efficient use of your tent. Please read it thoroughly before initial setup and retain it for future reference.

SETUP INSTRUCTIONS

The Coleman Pop-Up Instant Tent is designed for quick and easy assembly, typically setting up in approximately 10 seconds due to its pre-assembled pole system.

Step-by-Step Setup

1. **Unpack the Tent:** Remove the tent from its carry bag. The tent is designed to spring open automatically.
2. **Unfold and Position:** Allow the tent to fully expand. Position the tent in your desired camping location.
3. **Secure the Tent:** Use the included stakes to secure the tent corners to the ground. This prevents the tent from shifting in wind.
4. **Attach Rainfly:** The adjustable rainfly helps protect against wind and rain. Ensure it is properly positioned over the tent and secured to the tent body or ground stakes as designed.

Sets Up in 10 Seconds

with pre-assembled poles



Image: The Coleman Pop-Up Instant Tent demonstrating its quick setup feature with pre-assembled poles.

Adjustable Rainfly

Helps protect against wind & rain and adds ventilation



Image: The adjustable rainfly provides protection against wind and rain while allowing ventilation.

OPERATING YOUR TENT

This section covers the general use and features of your Coleman Pop-Up Instant Tent.

Ventilation and Weather Protection

- **Adjustable Rainfly:** The rainfly can be adjusted to optimize airflow while still providing protection from rain. Ensure it is securely fastened during inclement weather.
- **Taped Floor Seams:** The tent features taped floor seams designed to keep the interior dry from ground moisture.

Interior Features

- **Gear Pockets:** Utilize the internal gear pockets for organized storage of small items, keeping the tent floor clear.
- **Occupancy:** This 4-person tent provides comfortable space for up to four individuals.



Dimensions

9 ft. 2 in. x 6 ft. 6 in. with 3 ft. 4 in. center height

Image: Interior of the tent highlighting the gear pockets for storage and overall dimensions.



Image: The tent's exterior, illustrating the taped floor seams designed to prevent water intrusion.

MAINTENANCE AND CARE

Proper care and maintenance will extend the life of your tent.

- **Cleaning:** Clean the tent with a soft sponge, mild soap, and lukewarm water. Do not use harsh detergents, washing machines, or dryers.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and fabric degradation.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Zipper Care:** Keep zippers clean and free of dirt. Periodically apply a silicone-based lubricant to ensure smooth operation.
- **Pole Inspection:** Regularly inspect the fiberglass poles for any signs of damage or splintering.

PACKING UP YOUR TENT

Folding the pop-up tent correctly is crucial for storage and transport. The tent is designed for flat folding.

Your browser does not support the video tag.

Video: Official Coleman guide on how to pack up your pop-up tent. This video demonstrates the proper technique for folding the tent back into its compact form for storage.

Your browser does not support the video tag.

Video: Another official Coleman video demonstrating the process of packing up your pop-up tent, ensuring it folds flat for easy storage and transport.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Solution
Tent not popping up fully	Ensure the tent is completely unfolded and not obstructed. Gently guide the poles into their full extension.
Water leaking through fabric	Check if the rainfly is properly installed and taut. Inspect for any tears or punctures in the fabric. Apply seam sealer if necessary.
Zipper sticking or difficult to close	Clean the zipper teeth of any dirt or debris. Apply a silicone-based zipper lubricant. Avoid forcing the zipper.
Condensation inside the tent	Ensure adequate ventilation by adjusting the rainfly and opening vents or doors when weather permits.

SPECIFICATIONS

Feature	Detail
Brand	Coleman
Model Name	Camp Burst Pop-Up Camping Tent
Model Number	2155792
Occupancy	4 Person
Product Dimensions (L x W x H)	110"L x 78"W x 40"H
Item Weight	7.6 Pounds
Seasons	3 Season
Fabric Type	185T 68D Fire and water resistant polyester fly
Pole Material Type	Fiberglass
Water Resistance Technology	1500 Mm
Number Of Doors	1

Feature	Detail
Number Of Pockets	2
Included Components	Tent, Carry Bag
UPC	076501169973



Image: Visual representation of the tent's dimensions for reference.

WARRANTY INFORMATION

This Coleman Pop-Up Instant Tent comes with a **1 Year Limited Warranty**. For specific terms and conditions, please refer to the warranty card included with your purchase or visit the official Coleman website.

CUSTOMER SUPPORT

For further assistance, product inquiries, or to report any issues, please contact Coleman customer support. Contact details can typically be found on the official Coleman website or on your product packaging. You can also visit the [Coleman Store on Amazon](#) for more product information and resources.

