

LEMEGA Edge X1

LEMEGA Edge X1 2.0 Soundbar Instruction Manual

Model: Edge X1

1. INTRODUCTION

Thank you for purchasing the LEMEGA Edge X1 2.0 Soundbar. This manual provides essential information for setting up, operating, and maintaining your soundbar. Please read it thoroughly before use to ensure proper functionality and to maximize your audio experience.

The LEMEGA Edge X1 is designed to enhance your television, movie, gaming, and music audio with clear, balanced stereo sound. Its compact design and versatile connectivity options make it suitable for various home environments.

2. SAFETY INFORMATION

- Do not expose the soundbar to rain, moisture, or extreme temperatures.
- Ensure proper ventilation around the unit to prevent overheating.
- Use only the provided power adapter.
- Do not open the casing; refer all servicing to qualified personnel.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, please contact your retailer.



Figure 3.1: Included accessories with the LEMEGA Edge X1 Soundbar.

- LEMEGA Edge X1 Soundbar
- Remote Control
- HDMI Cable
- AUX Cable
- Power Adapter
- Wall Mount Kits (brackets and screws)
- User Manual

4. PRODUCT OVERVIEW

The LEMEGA Edge X1 features a sleek design with intuitive controls and multiple connectivity ports.



Figure 4.1: Front view of the LEMEGA Edge X1 Soundbar in a typical setup.

4.1 Front Panel

- **LED Indicator:** Displays current input mode and status.
- **Volume Up/Down Buttons:** Adjusts the sound level.
- **Power Button:** Turns the soundbar on or off.

4.2 Rear Panel (Connections)



Figure 4.2: Rear panel connections of the soundbar.

- **HDMI ARC Port:** For connecting to a TV with HDMI ARC support.
- **Optical Input:** For digital audio connection from a TV or other device.
- **AUX Input:** For analog audio connection using a 3.5mm jack.
- **RCA Input:** For analog audio connection using RCA cables.
- **USB Port:** For playing audio files from a USB drive.
- **DC IN:** Power input for the adapter.

4.3 Remote Control



Figure 4.3: The included remote control for the soundbar.

The remote control allows full operation of the soundbar from a distance. It includes buttons for power, volume, input selection, and sound modes (TV, Music, Movie).

5. SETUP

5.1 Placement

The soundbar can be placed on a flat surface in front of your TV or mounted on a wall.

- **Tabletop Placement:** Position the soundbar centrally below your TV, ensuring it does not block the TV's remote sensor.
- **Wall Mounting:** Use the provided wall mount kits. Ensure the wall can support the weight of the soundbar and follow the instructions for secure installation.



Figure 5.1: Example of wall-mounted soundbar installation.

5.2 Connections

Connect the soundbar to your TV or other audio sources using one of the following methods:

- **HDMI ARC (Recommended):** Connect one end of the HDMI cable to the HDMI ARC port on the soundbar and the other end to the HDMI ARC port on your TV. This allows TV remote control of the soundbar volume.
- **Optical:** Connect an optical cable (not included) from the soundbar's Optical input to your TV's optical output.
- **AUX:** Connect the provided 3.5mm AUX cable from the soundbar's AUX input to your device's headphone or AUX output.

- **RCA:** Connect RCA cables (not included) from the soundbar's RCA input to your device's RCA audio output.
- **USB:** Insert a USB drive containing audio files into the USB port.
- **Power:** Connect the power adapter to the DC IN port on the soundbar and then plug it into a wall outlet.

6. OPERATING

6.1 Power On/Off

Press the Power button on the soundbar or remote control to turn the unit on or off.

6.2 Input Selection

Press the 'Input' button on the remote or the 'Mode' button on the soundbar to cycle through available input sources: HDMI ARC, Optical, AUX, RCA, USB, and Bluetooth.

6.3 Volume Control

Use the 'Volume Up' and 'Volume Down' buttons on the soundbar or remote control to adjust the audio level.

6.4 Sound Modes

The remote control offers dedicated buttons for different sound modes:

- **TV Mode:** Optimized for clear dialogue in television programs.
- **Music Mode:** Enhanced for music playback.
- **Movie Mode:** Provides a more immersive experience for films.

6.5 Bluetooth Pairing

To connect a Bluetooth device:

1. Switch the soundbar to Bluetooth input mode. The LED indicator will flash.
2. Enable Bluetooth on your smartphone, tablet, or computer.
3. Search for 'LEMEGA Edge X1' in your device's Bluetooth list and select it to pair.
4. Once paired, the LED indicator will stop flashing and remain solid.



Figure 6.1: Bluetooth streaming setup with a mobile device.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place.
- **Ventilation:** Ensure the soundbar's vents are not blocked to maintain proper airflow.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cable not connected; power outlet not active.	Check power cable connection; try a different outlet.
No sound	Incorrect input selected; volume too low; cables not connected properly.	Select correct input; increase volume; check all cable connections.
Bluetooth pairing fails	Soundbar not in pairing mode; device too far; interference.	Ensure soundbar is in BT mode (flashing LED); move device closer; restart both devices.
Remote control not working	Batteries depleted; obstruction between remote and soundbar.	Replace batteries; remove any obstructions; ensure remote is pointed at the soundbar.

9. SPECIFICATIONS

Model Number	Edge X1
Brand	LEMEGA
Output Power	40 Watts
Connectivity Technology	HDMI ARC, Optical, AUX, USB, Bluetooth
Audio Output Mode	Stereo (2.0 Channel)
Speaker Type	Woofer and Tweeter
Control Method	Remote Control
Dimensions (L x W x H)	15.8 x 14.5 x 21 cm
Weight	1.36 kg
Signal-to-Noise Ratio	72 dB

10. WARRANTY AND SUPPORT

LEMEGA products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact LEMEGA customer service through their official website or the contact information provided in your warranty documentation.

Online Support: Visit the [LEMEGA Brand Store](#) for FAQs and additional resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question