

innioasis G3

innioasis G3 MP3 Player User Manual

Model: G3

1. SETUP

1.1 Unboxing

Verify that all components are present in the package:

- innioasis G3 MP3 Player x1
- 128GB SD card x1 (pre-installed or separate)
- USB-C cable x1
- Wired headphones x1
- User manual x1

1.2 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the device's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port.

Charge Fast. Last Long



Image: The bottom of the innioasis G3 MP3 Player, highlighting the USB-C charging port and the 3.5mm audio jack.

A full charge typically takes approximately 2 hours. The 1500mAh battery provides up to 25 hours of music playback with wired earphones or 5 hours of video playback.

1.3 Power On/Off

- To power on: Press and hold the power button until the screen illuminates.
- To power off: Press and hold the power button, then select 'Power Off' from the options.

1.4 Initial Setup and Storage

Upon first power-on, follow the on-screen prompts to complete the initial setup, including language selection and Wi-Fi connection. The device comes with 32GB internal storage and a pre-installed 128GB SD card, totaling 160GB. The expansion slot supports up to 1TB via a microSD card.

Ample Space - Keep all your songs

Comes with 160GB storage, expandable to 1TB.
Carry your entire media library everywhere.



Image: Visual representation of the innioasis G3 MP3 Player's storage capabilities, including internal ROM, included SD card, and expandable storage up to 1TB.

1.5 Wi-Fi Connection

The device supports Dual-Band Wi-Fi (2.4GHz & 5GHz). To connect to Wi-Fi:

1. Go to 'Settings'.
2. Select 'Network & Internet'.
3. Turn on Wi-Fi and select your desired network.
4. Enter the password if prompted.

2. OPERATING INSTRUCTIONS

2.1 Basic Navigation

The innioasis G3 features a 4-inch HD touchscreen for navigation. Swipe, tap, and pinch gestures are used to interact with the interface, similar to a smartphone.

2.2 Music Playback

The device supports both local music files and streaming applications.

Local Music Player

The powerful local music player app supports various audio formats including MP3, WAV, FLAC, AAC, APE, OGG, M4A, WMA, and MP2. You can scan your library, create playlists, search for songs, and use the built-in equalizer.

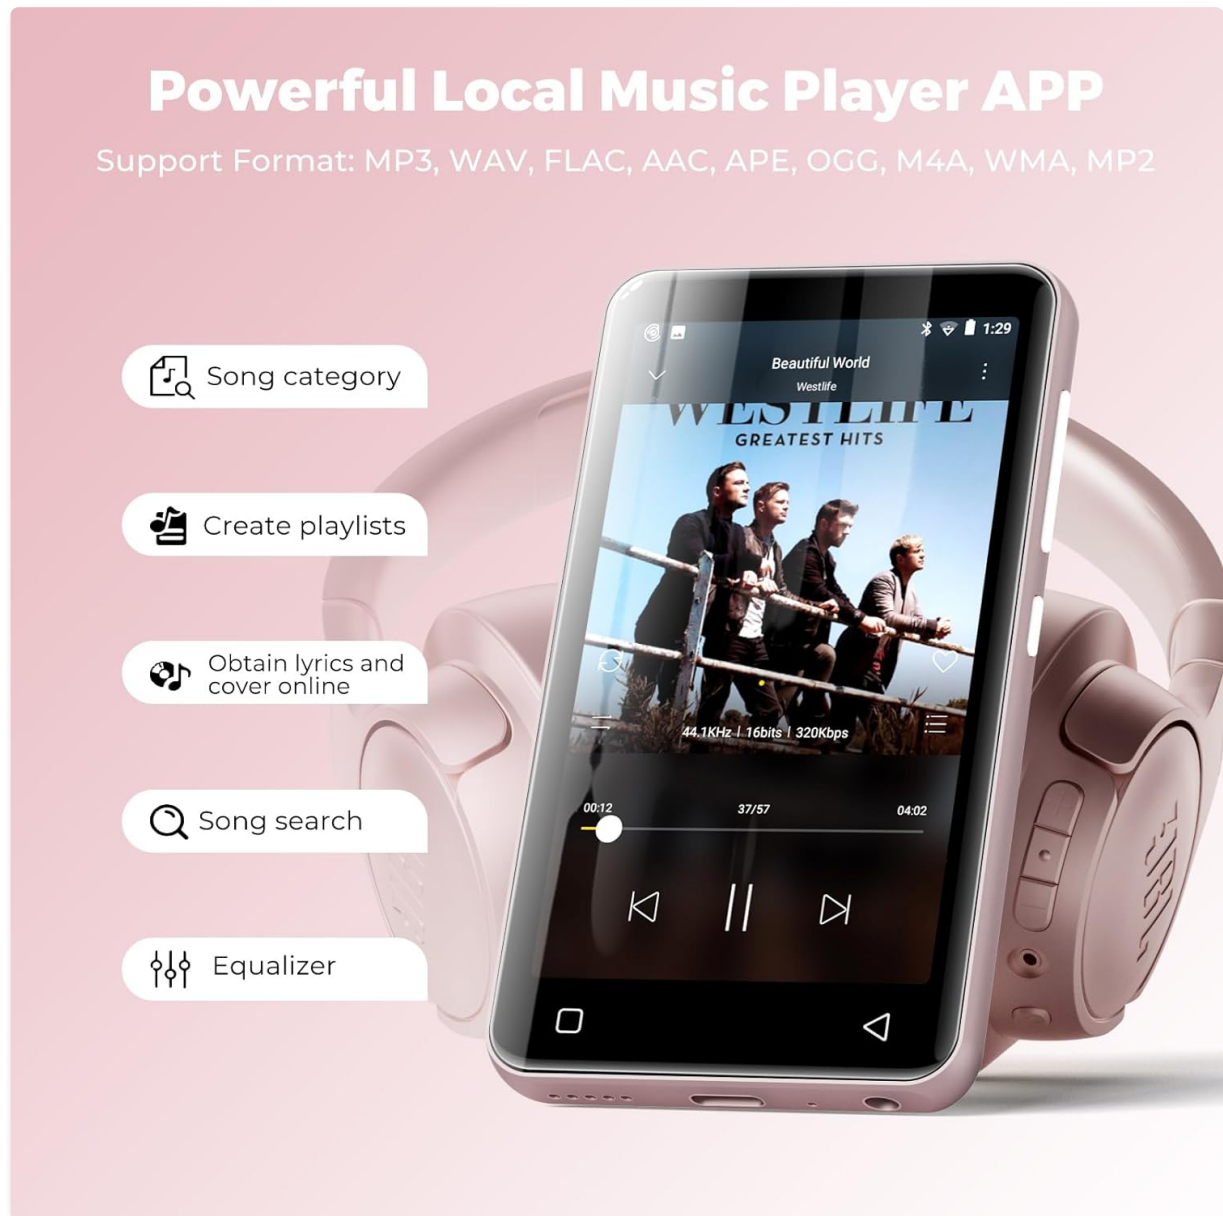 


Image: The innioasis G3 MP3 Player's local music player interface, showing song information, playback controls, and options for song categories, playlists, lyrics, search, and equalizer.

Streaming Applications

Pre-installed apps include Spotify, Pandora, Amazon Music, Spotify Kids, Tidal, and Deezer. Ensure a stable Wi-Fi connection for optimal streaming performance.

Your Music, Your Way.

From local song files to streaming apps



Image: The innioasis G3 MP3 Player's screen showing icons for popular music streaming services like Spotify, Amazon Music, and Pandora.

2.3 Audiobook Playback

The device comes with pre-loaded audiobook applications such as Audible, Libby, and Audiobooks. These apps allow you to listen to your favorite audio stories.

Get Lost in a Story

Listen to your favorite stories anytime, anywhere.

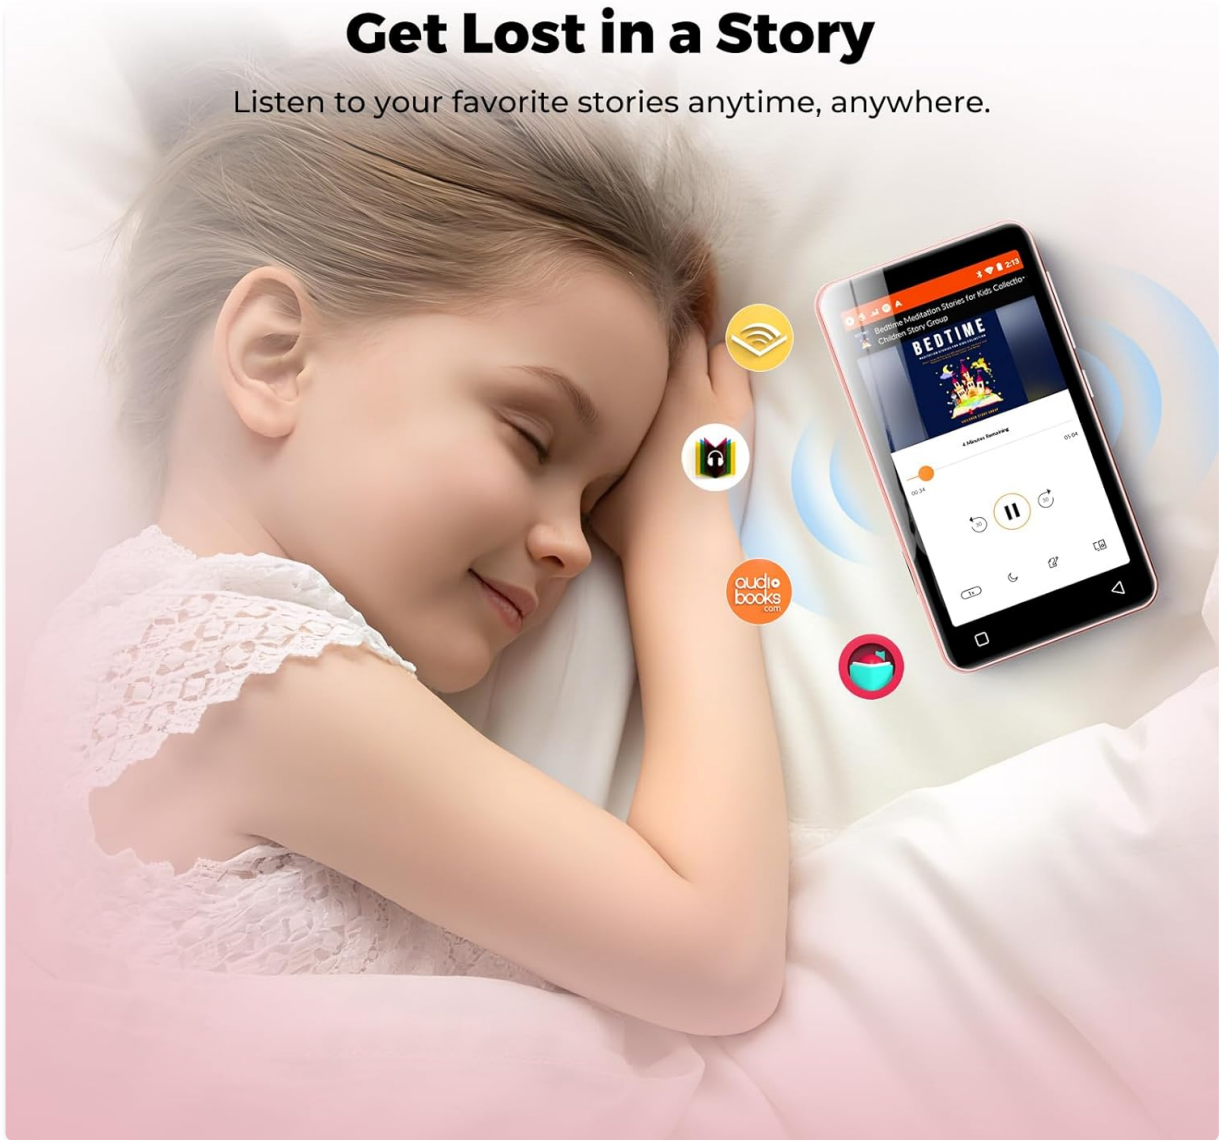 


Image: A child sleeping peacefully with the innioasis G3 MP3 Player nearby, illustrating the use of audiobook applications.

2.4 Bluetooth Connectivity

The MP3 player features Bluetooth 4.2 with two-way sending, allowing connection to wireless headphones, speakers, or car audio systems.

1. Go to 'Settings'.
2. Select 'Connected devices' then 'Bluetooth'.
3. Turn on Bluetooth and scan for available devices.
4. Select your desired device to pair.

Wider and Stable Bluetooth Connect

Two-way connection tech for wider, stable connections to your Bluetooth devices.



Image: The innoasis G3 MP3 Player demonstrating its Bluetooth connectivity with icons representing headphones, speakers, and car audio systems.

2.5 Video Playback

The device supports 1080p HD video playback. Compatible formats include AVI, MKV, MP4, MPEG, MOV, VOB, WMV, WEBM, DIVX, F4V, FLV, Xvid, and 3GP.

1080P HD Video Player

Compatible formats:AVI, MKV, MP4, MPEG, MOV, VOB,WMV, WEBM,DIVX,F4V,FLV,XviD,3GP,etc.




Image: The innioasis G3 MP3 Player showcasing its 1080P HD video playback capability with a dynamic scene on its screen.

2.6 Other Applications

The MP3 player includes a collection of useful applications such as FM radio, E-book reader, Voice Recorder, File Manager, Clock, Gallery, Browser, Calculator, and Calendar.

2.7 Parental Controls

 The device features parental controls to manage app installations and usage. You can set a password to require approval before any new apps are downloaded. Apps can also be uninstalled as needed.

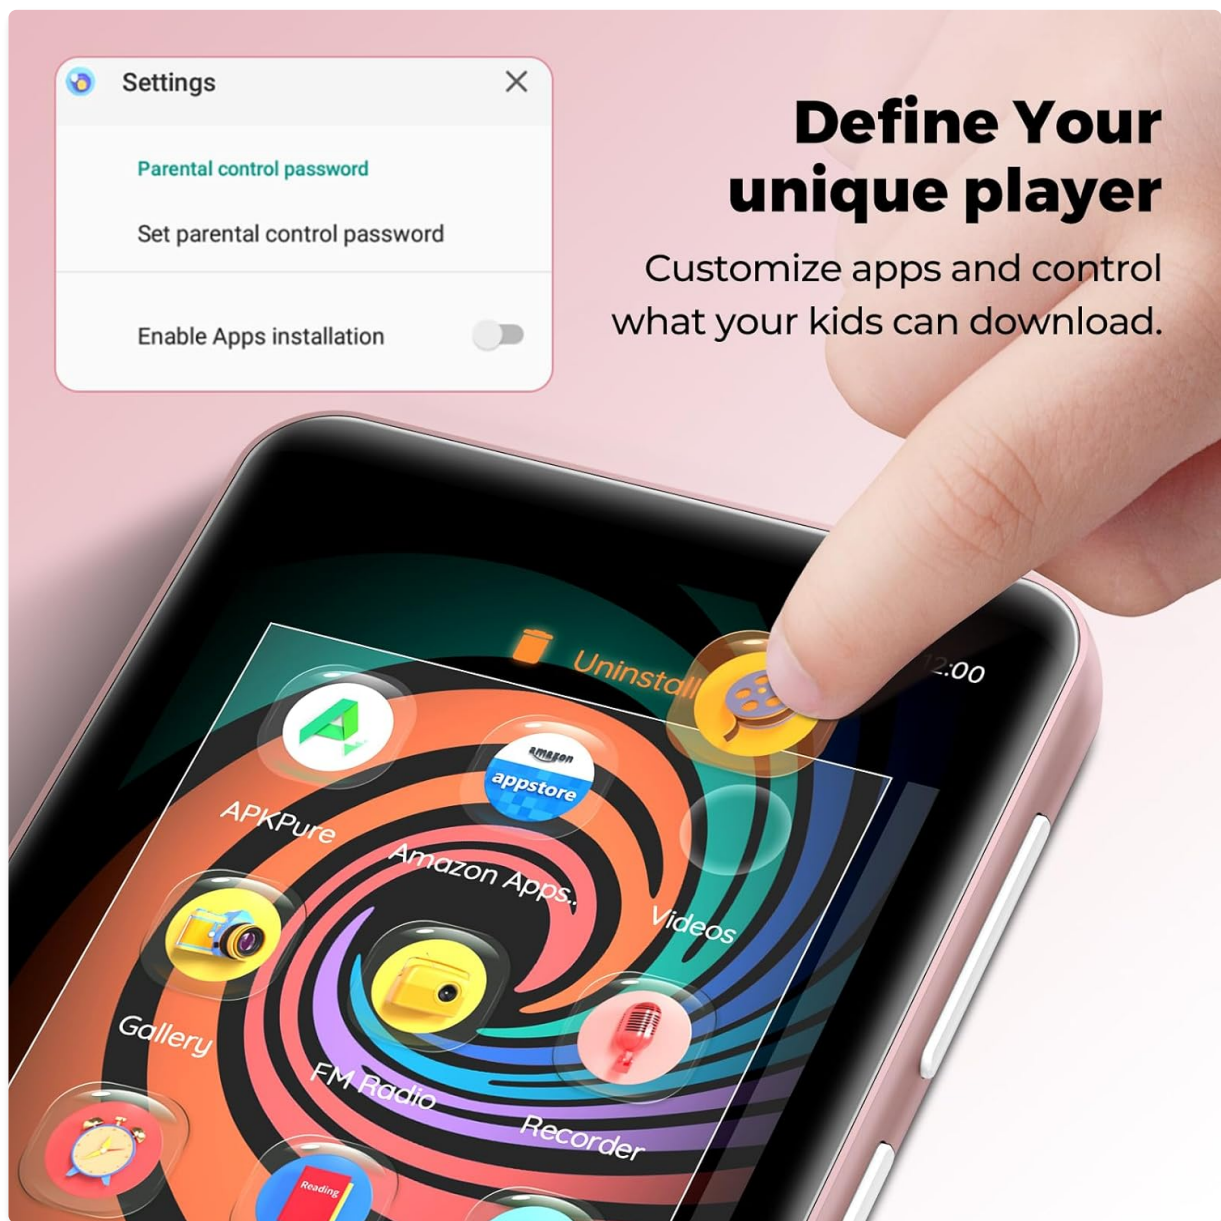

Define Your unique player

Customize apps and control what your kids can download.

Image: The innioasis G3 MP3 Player's screen displaying the parental control settings, including options for setting a password and enabling app installation.

3. MAINTENANCE

3.1 Cleaning

To clean the device, use a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays directly on the device. Do not expose the device to excessive moisture.

3.2 Software Updates

You can install new apps and update existing ones to access the latest features. Ensure the device is connected to Wi-Fi for updates.

3.3 Storage Management

Regularly manage your storage by uninstalling unused apps or transferring files to a computer. The device supports microSD cards up to 1TB for expanded storage. Ensure the microSD card is formatted correctly by the device if prompted.

4. TROUBLESHOOTING

4.1 Screen Blank or Frozen

If the screen becomes blank or the device freezes, try performing a forced restart. Press and hold the power button for approximately 10-15 seconds until the device powers off, then power it on again.

4.2 Bluetooth Connectivity Issues

If you experience intermittent Bluetooth connection or audio cutting out, try restarting the MP3 player. Ensure the device you are trying to connect to is in pairing mode and within range.

4.3 Battery Drains Quickly

Battery life can be significantly affected by screen usage. Reduce screen brightness, close background applications, and limit continuous video playback to extend battery life. Ensure the device is fully charged before extended use.

4.4 App Compatibility

This player does not support applications that require Google Play services, such as YouTube and YouTube Music. Attempting to install such apps may result in installation failure or improper functionality.

5. SPECIFICATIONS

Brand	innioasis
Model Name	G3
Special Features	Equalizer, FM Radio, Hi-Res Audio, Video Playback, Voice Recorder
Connectivity Technology	Bluetooth, USB, Wi-Fi
Memory Storage Capacity	160 GB (32GB internal + 128GB SD card)
Screen Size	4 Inches
Compatible Devices	Headphones, Earphones, Laptops, Personal Computers
Supported Media Type	Micro SD, Micro SDHC, Micro SDXC, SD Card, SDHC (up to 1TB expansion)
Display Technology	LCD
Supported Audio Standards	AAC, MP3, WAV, FLAC, APE, OGG, M4A, WMA, MP2
Battery Average Life	25 Hours (music playback), 5 Hours (video playback)
Item Weight	166 Grams
Item Dimensions (D x W x H)	0.39"D x 2.36"W x 4.33"H

6. WARRANTY AND SUPPORT

6.1 Warranty Information

The innioasis G3 MP3 Player is backed by a 1-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please contact our customer service team. We offer 12-hour customer service to ensure your satisfaction. Refer to the product packaging or the official innioasis website for specific contact details.