

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [innioasis](#) /

› [innioasis G1 80GB MP3 Player User Manual](#)

innioasis G1

innioasis G1 80GB MP3 Player User Manual

Model: G1

[Safety Information](#)

[Package Contents](#)

[Device Overview](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SAFETY INFORMATION

Please read all safety instructions carefully before using the innioasis G1 MP3 Player. Keep this manual for future reference.

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. This will void the warranty.
- Use only the provided USB-C cable for charging.
- Keep the device away from water and other liquids.
- Prolonged listening at high volume levels may cause hearing damage.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x innioasis G1 MP3 Player
- 1 x 64GB SD card (pre-installed or separate)
- 1 x USB-C charging cable
- 1 x Wired headphones

- 1 x User manual

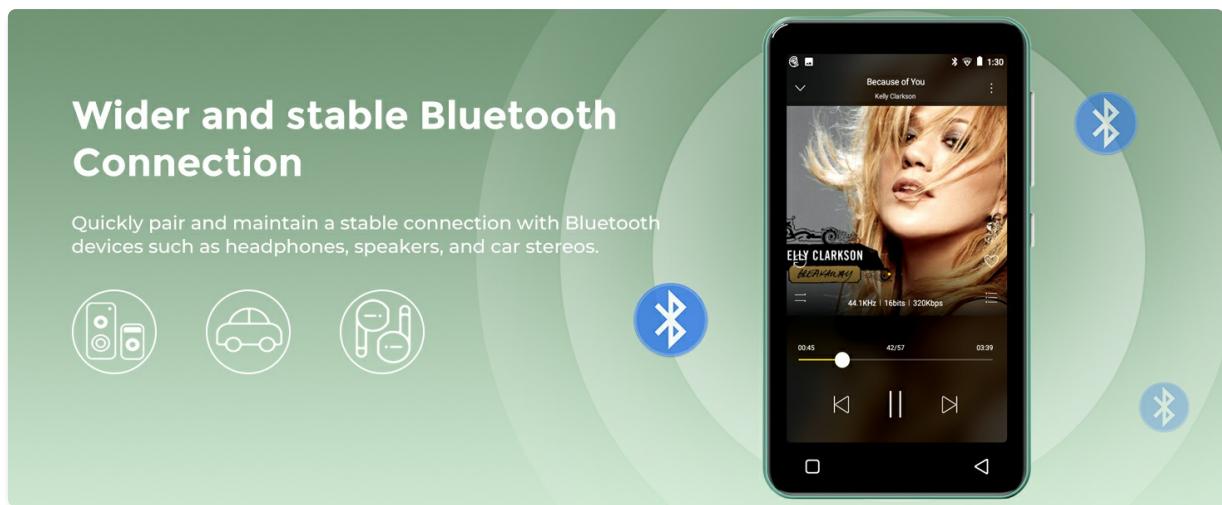


Image: The innioasis G1 MP3 Player, USB-C cable, wired headphones, 64GB SD card, and user manual included in the package.

3. DEVICE OVERVIEW

The innioasis G1 MP3 Player features a compact design with a 4-inch full-touch screen. It includes physical buttons for power and volume control, and ports for charging and headphones.

Preinstalled Popular Apps



Image: Front view of the innioasis G1 MP3 Player displaying various preinstalled applications on its touch screen.

Key Features:

- 4-inch Full Touch Screen
- Android OS with 1.9GHz Octa-core CPU and 2GB RAM
- 80GB Storage (16GB ROM + 64GB TF card), expandable up to 1TB
- Bluetooth 4.2 Connectivity
- Wi-Fi (2.4GHz and 5GHz)
- Pre-installed streaming apps (Spotify, Spotify Kids, Amazon Music, Pandora, Tidal, Deezer, Audible)
- Parental Controls
- FM Radio, Voice Recorder, Video Player, Ebook Reader, Calculator, Clock, Gallery, Browser, Calendar

4. SETUP

4.1 Initial Charging

Before first use, fully charge the device using the provided USB-C cable and a compatible power adapter (not included). The battery indicator on the screen will show charging status.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power Off" from the options on the screen.

4.3 Language and Time Settings

Upon first startup, you may be prompted to select your preferred language and set the date and time. Follow the on-screen instructions.

4.4 Wi-Fi Connection

To access streaming services and online features, connect your device to a Wi-Fi network:

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.



Image: The innioasis G1 MP3 Player displaying its home screen with app icons, illustrating its strong network connection capabilities.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The device features a full touch screen for navigation. Swipe left/right to browse app pages, tap an icon to open an app, and use the navigation buttons at the bottom of the screen (Back, Home, Recent Apps) to move between screens and applications.



Image: A hand demonstrating touch screen interaction on the innioasis G1 MP3 Player, highlighting its ease of use.

5.2 Music Playback

The innioasis G1 supports various audio formats including MP3, FLAC, WAV, AAC, APE, OGG, M4A, WMA, and MP2.

- Local Music Player:** Open the "Music" app to play files stored on the device or SD card. You can create playlists, search for songs, and use the graphic equalizer to adjust sound.
- Streaming Apps:** Access pre-installed apps like Spotify, Spotify Kids, Amazon Music, Pandora, Tidal, and Deezer. Ensure you are connected to Wi-Fi for streaming.

Powerful Local Music Player APP

Support Format: MP3, WAV, FLAC, AAC, APE, OGG, M4A, WMA, MP2

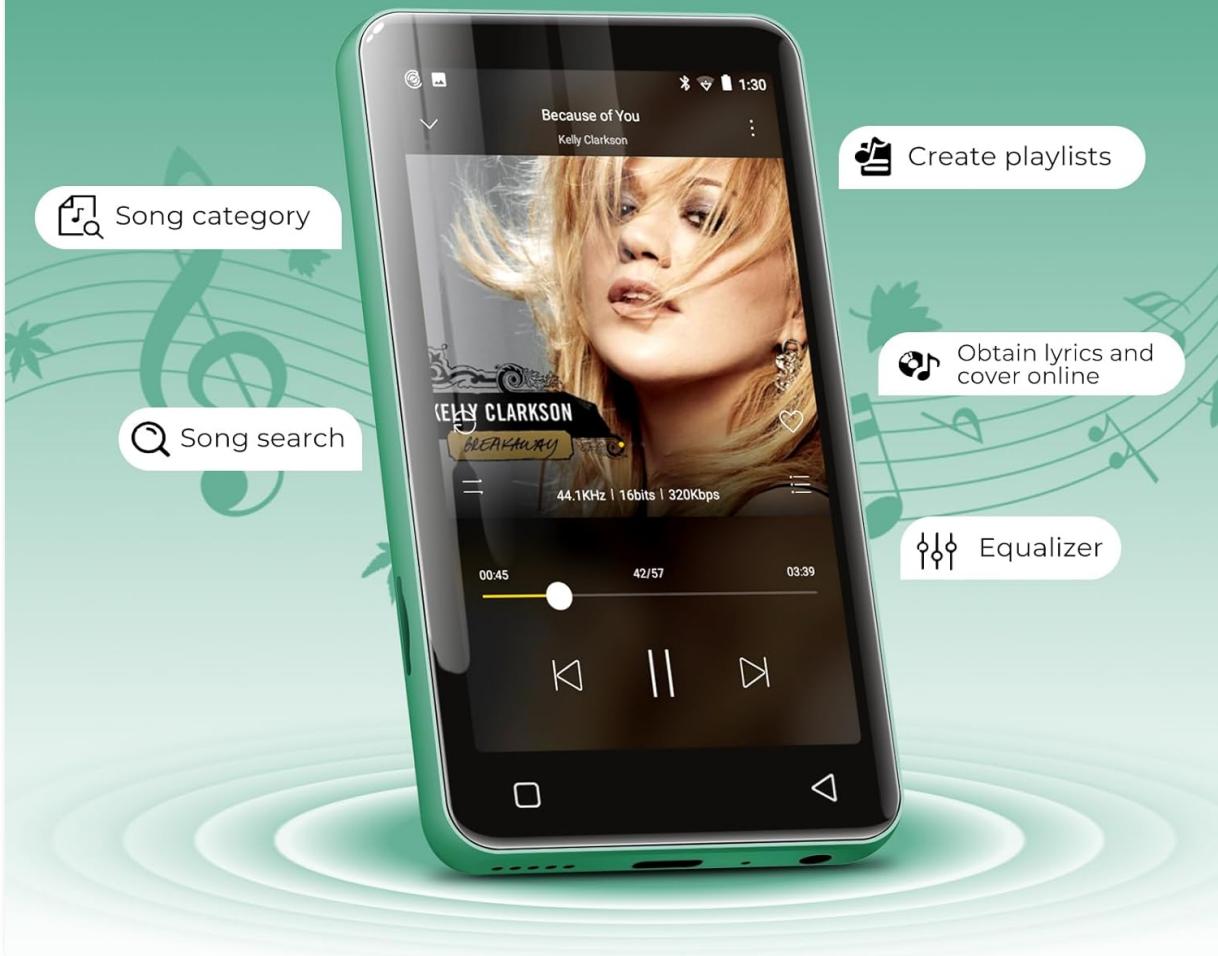


Image: The innioasis G1 MP3 Player displaying its local music player interface, showing song categories, search function, playlist creation, and equalizer options.

5.3 Bluetooth Connectivity

Connect your MP3 player to Bluetooth headphones, speakers, or car stereos.

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Make sure your Bluetooth accessory is in pairing mode.
4. Select your accessory from the list of available devices to pair.

Pair Widely, Stay Connected

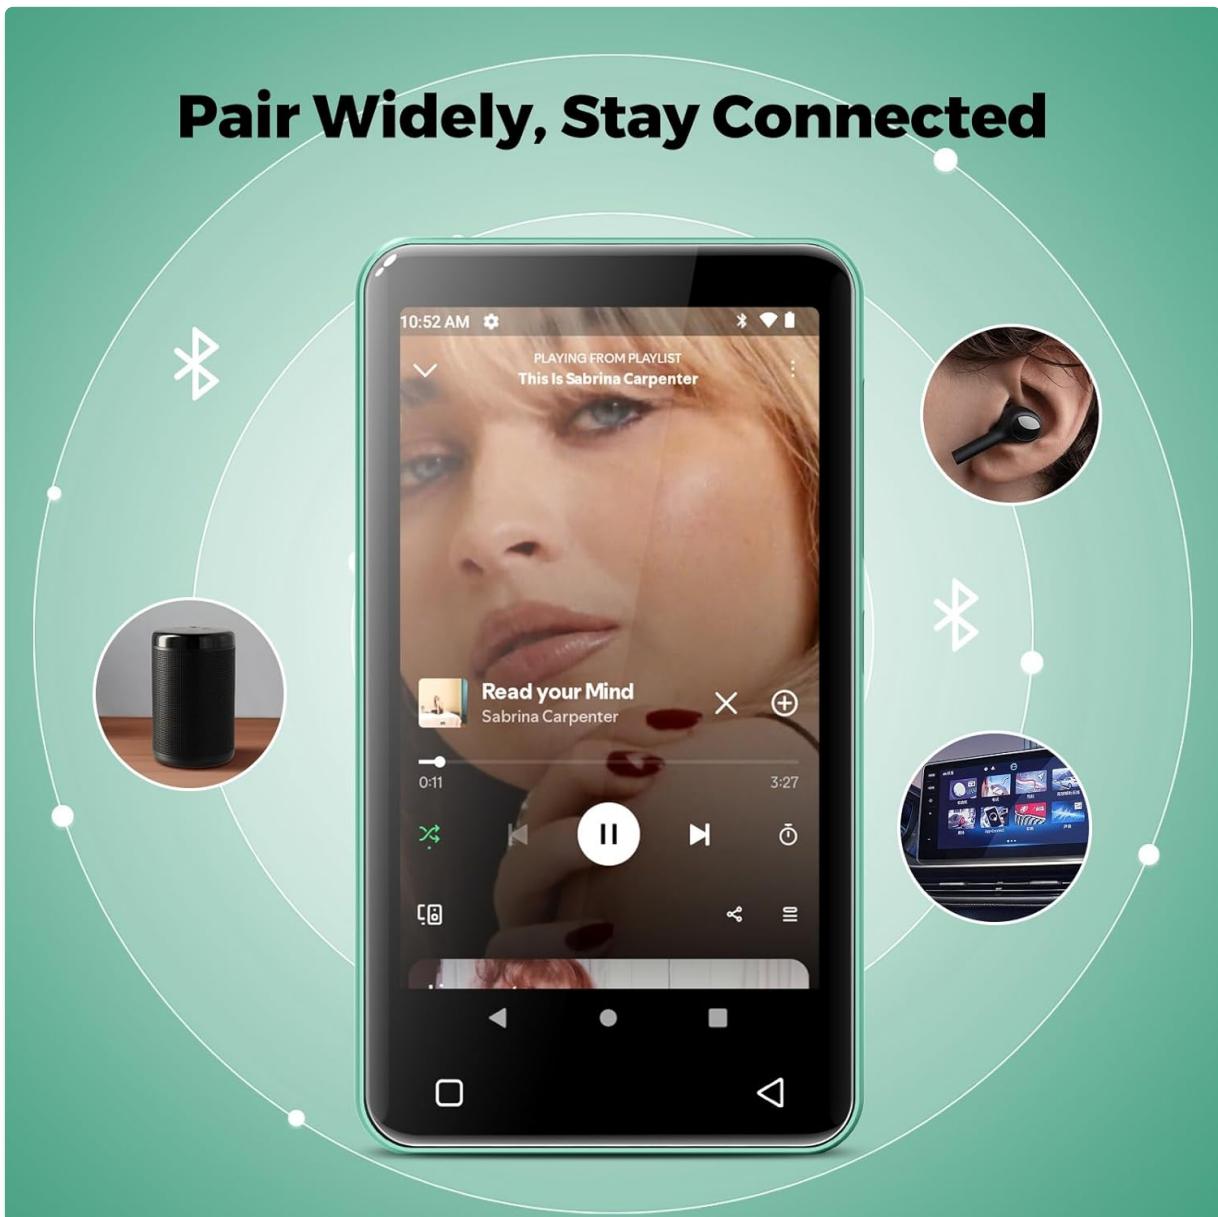


Image: The innioasis G1 MP3 Player showing its Bluetooth connection capabilities, pairing with headphones, a portable speaker, and a car stereo system.

5.4 Parental Controls

The device includes parental control features to manage app access and settings.

1. Go to **Settings > Parental Control**.
2. Set a parental control password.
3. You can enable/disable app installation, limit internet usage, and restrict device usage time.
4. Preloaded apps can be removed, and settings can be locked with the passcode.

Parental Control

Balance play, not just screens.

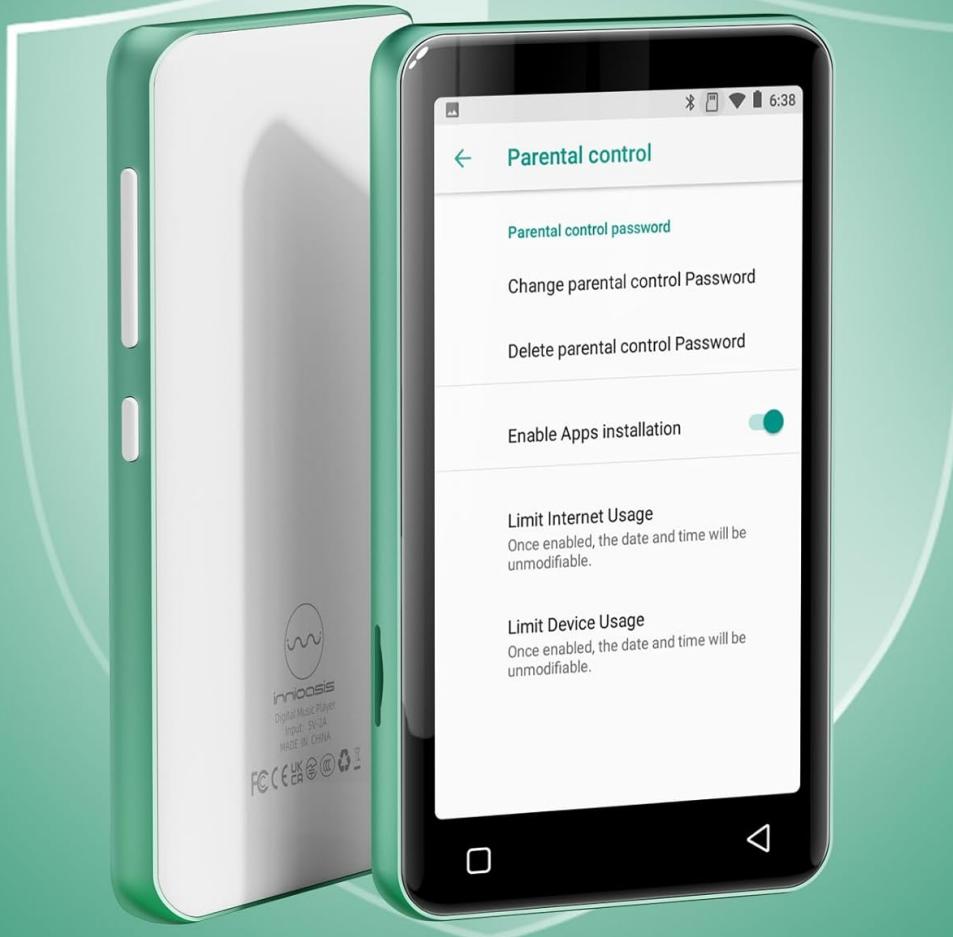


Image: The innioasis G1 MP3 Player displaying its parental control settings, including options for password management, app installation, internet usage limits, and device usage limits.

5.5 File Transfer

To transfer music, videos, and other files from a computer:

1. Connect the MP3 player to your computer using the USB-C cable.
2. On the MP3 player, swipe down from the top of the screen to open the notification panel.
3. Tap the USB notification (e.g., "USB charging this device") and select "File transfer" or "MTP".
4. Your computer should now recognize the device as a removable storage drive. You can drag and drop files to the internal storage or the SD card.

5.6 Other Applications

The innioasis G1 comes with several other useful applications:

- **FM Radio:** Tune into local radio stations. Some models may support recording.
- **Video Player:** Supports 1080P HD video playback and various formats including AVI, MKV, MP4, MPEG, MOV, VOB, WMV, WEBM, DIVX, F4V, FLV, XviD, 3GP.
- **Voice Recorder:** Record audio using the built-in microphone.
- **Ebook Reader:** Access pre-loaded Audible for audiobooks and other e-book formats.

- **Calculator, Clock, Gallery, Browser, Calendar:** Standard utility apps for daily use.

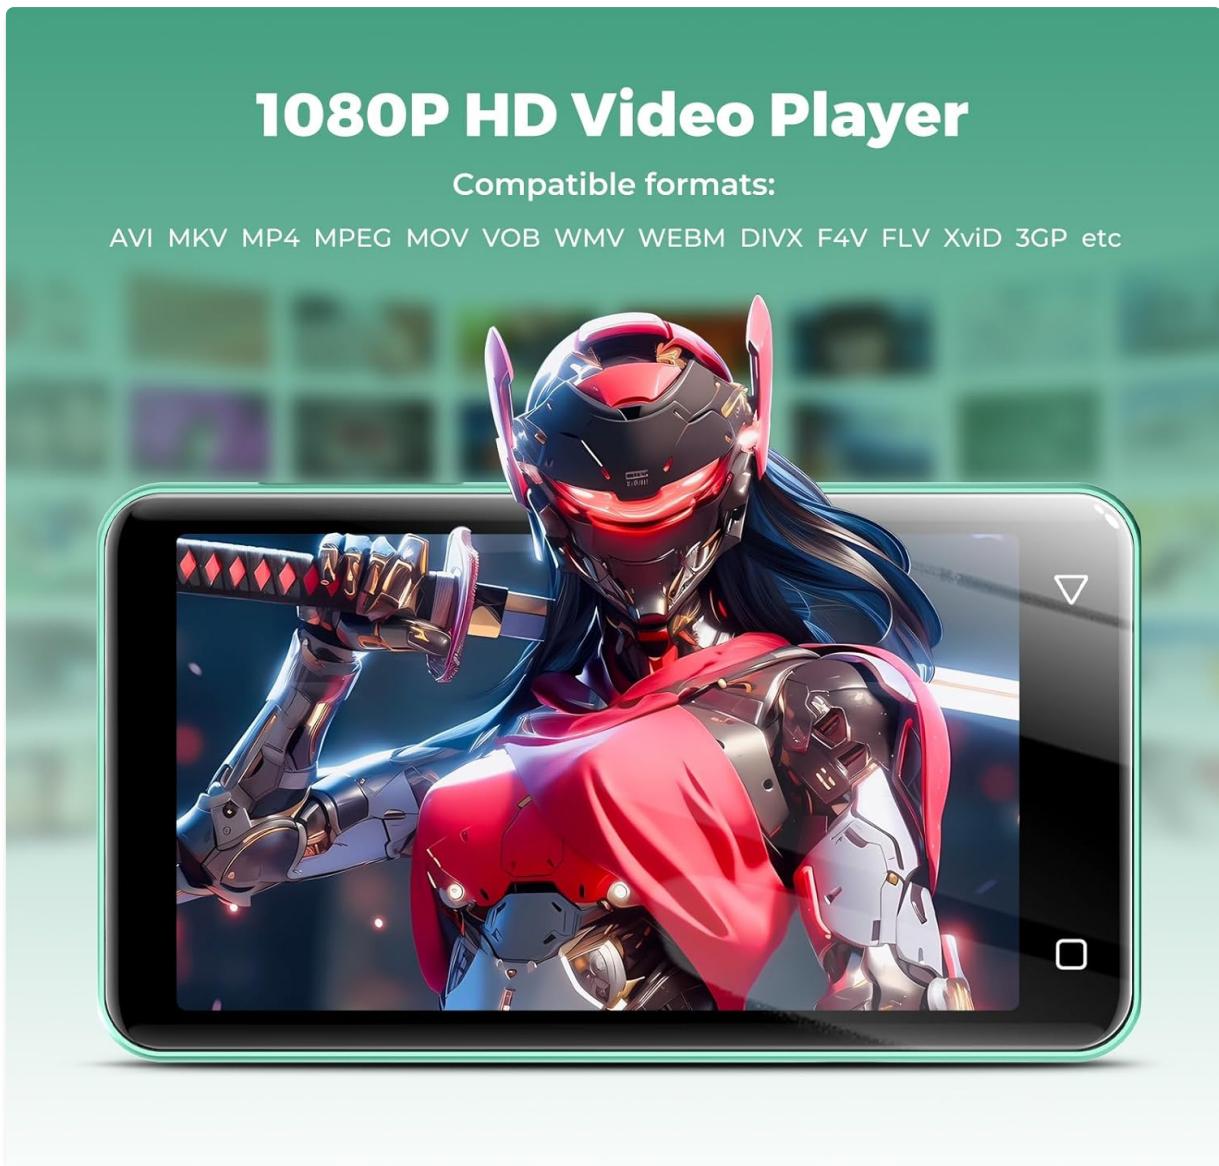


Image: The innioasis G1 MP3 Player displaying a high-definition video on its screen, illustrating its 1080P HD video playback capability.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly. If storing for a long period, charge it to about 50% every few months.
- **Software Updates:** Periodically check for software updates in the device settings to ensure optimal performance and security.

7. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a charger for at least 30 minutes. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.

Problem	Possible Solution
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in settings. Verify the Wi-Fi password. Restart your router and the MP3 player. Ensure you are within range of the Wi-Fi signal.
Bluetooth device not pairing.	Ensure Bluetooth is enabled on both devices and the accessory is in pairing mode. Move the devices closer together. Try restarting both devices.
Apps are slow or unresponsive.	Close unused background apps. Clear app cache in Settings > Apps. Restart the device. Ensure sufficient storage space is available.
Cannot transfer files to/from computer.	Ensure the USB-C cable is properly connected and functioning. On the MP3 player, select "File transfer" mode from the USB notification. Try a different USB port or computer.
Poor sound quality.	Check headphone connection. Test with different headphones. Adjust equalizer settings in the music player. Ensure audio files are not corrupted.

8. SPECIFICATIONS

- **Model Name:** G1
- **Product Dimensions:** 0.39 x 2.56 x 4.13 inches
- **Item Weight:** 5.9 ounces
- **Manufacturer:** INNIOASIS
- **Memory Storage Capacity:** 80 GB (16GB ROM + 64GB TF card)
- **Expandable Storage:** Up to 1TB (SDXC/SDHC compatible)
- **Screen Size:** 4 Inches
- **Connectivity Technology:** Bluetooth 4.2, Wi-Fi (2.4GHz & 5GHz)
- **Special Features:** Equalizer, FM Radio, Hi-Res Audio, Video Playback, Voice Recorder, Parental Controls
- **Compatible Devices:** Headphones, Earphones
- **Media Type:** Micro SD, Micro SDHC, Micro SDXC, SD Card, SDHC
- **Battery:** 1500mAh (up to 25 hours music, 5 hours video playback)

Long-lasting Entertainment

Low-power solutions ensure continuous enjoyment of music and movies.

Video  5 Hours

Music  25 Hours



Image: The innioasis G1 MP3 Player screen displaying battery life indicators for video (5 hours) and music (25 hours) playback.

9. WARRANTY AND SUPPORT

The innioasis G1 MP3 Player comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact innioasis customer support.

If you encounter any issues or have questions about your device, please contact innioasis customer support through their official website or the contact information provided in the product packaging.