

BSNAW XL-613H

BSNAW Cordless Stick Vacuum Cleaner Model XL-613H Instruction Manual

Model: XL-613H

INTRODUCTION

Thank you for choosing the BSNAW Cordless Stick Vacuum Cleaner Model XL-613H. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use an appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose an appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

PACKAGE CONTENTS

Your BSNAW Cordless Stick Vacuum Cleaner comes with the following components:

- Main Motor Unit
- Motorized Brush Head
- Retractable Metal Tube (Extension Wand)
- 2-in-1 Dusting Brush
- Crevice Nozzle
- Wall Mount Plate
- Adapter (Charger)
- HEPA Filter (pre-installed + spare)
- Hair Cleaning Tool
- User Manual
- Screws and Wall Plugs for Wall Mount



Image: All components included in the BSNAW Cordless Stick Vacuum Cleaner package, laid out for easy identification.

PRODUCT OVERVIEW

The BSNAW Cordless Stick Vacuum Cleaner is designed for versatile cleaning across various surfaces. Its lightweight design and powerful suction make it an efficient tool for maintaining a clean home.



Image: The BSNAW Cordless Stick Vacuum Cleaner shown in its full stick configuration, handheld configuration, and with the main brush head detached.

Key Features:

- **Powerful Suction:** Upgraded high-power motor provides up to 30000Pa suction for deep cleaning.
- **Long Battery Life:** High-performance 6*2600mAh battery offers up to 45 minutes of runtime (in minimum suction mode).
- **8-in-1 Versatility:** Easily converts between stick and handheld modes with multiple attachments for various cleaning tasks.
- **Advanced Filtration System:** Fully sealed cyclone filtration with HEPA, stainless steel, and sponge filters captures 99.99% of fine dust.

- **Easy Maneuverability:** Swivels 180° sideways and 90° up and down, with LED lights to illuminate dark areas.
- **One-Touch Dust Disposal:** Large 1.2L dust cup with a hygienic one-touch empty design.

ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Tube:** Insert the retractable metal tube into the main motor unit until it clicks securely into place.
2. **Attach the Motorized Brush Head:** Connect the motorized brush head to the other end of the extension tube. Ensure it clicks firmly.
3. **Install the Battery:** Slide the rechargeable battery into the designated slot on the main motor unit until it locks.
4. **For Handheld Use:** Detach the extension tube and motorized brush head. Directly attach desired accessories (2-in-1 brush or crevice nozzle) to the main motor unit.



Image: The vacuum cleaner demonstrating its 8-in-1 versatility, showing different configurations for floors, sofas, high places, and corners using various attachments.

CHARGING THE BATTERY

It is advised to fully charge the battery before the initial and subsequent uses.

1. Connect the adapter to a power outlet.
2. Plug the adapter's charging cable into the charging port on the battery pack (either attached to the main unit or removed).
3. The battery indicator lights will show the charging status. A full charge typically takes 4 hours.
4. Once fully charged, disconnect the adapter.



Image: A detailed view of the detachable battery, highlighting its 45-minute runtime (Max), 4-hour charging time, and 6*2200mAh battery capacity.

OPERATING INSTRUCTIONS

Your vacuum cleaner offers different suction modes and versatile attachments for various cleaning needs.

Power On/Off and Suction Modes:

1. Press the power button on the main unit to turn the vacuum on.
2. The vacuum will start in Standard Mode (20000Pa suction).

3. Press the mode button (often indicated by +/- or fan icons) to switch to Max Mode (30000Pa suction) for stronger cleaning.
4. Press the power button again to turn the vacuum off.



Image: The vacuum cleaner head on a wooden floor, illustrating its powerful suction capabilities on hardwood, carpet, marble, and tile surfaces with two suction modes (Max 30000pa, Standard 20000pa).

Using Attachments:

- **Motorized Brush Head:** Ideal for hard floors and carpets. The bright LED lights illuminate dark areas, ensuring no dust is missed. The flexible head swivels 180° sideways and 90° up and down for easy maneuverability around furniture.
- **2-in-1 Dusting Brush:** Use the brush bristles for delicate surfaces like keyboards, curtains, or car interiors. Retract the bristles for wider suction on upholstery or car seats.
- **Crevice Nozzle:** Perfect for narrow gaps, corners, and hard-to-reach areas like between sofa cushions or along baseboards.



LED Lights and Multi angle adjustment

Image: The vacuum cleaner head with LED lights, positioned under a sofa, illustrating its 90° up/down and 180° left/right swivel capabilities for thorough cleaning in tight spaces.

Official Product Video: Product Overview and Operating Instructions

Video: A comprehensive overview of the BSNBW Cordless Stick Vacuum Cleaner, demonstrating its assembly, various attachments, and basic operating procedures.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup:

The 1.2L dust cup features a one-touch dump design for easy and hygienic waste disposal.

1. Hold the main unit over a trash bin.
2. Press the dust cup release button (usually located near the bottom of the dust cup).
3. The bottom flap will open, allowing debris to fall out. Close the flap securely after emptying.

1.2L Dust Cup

One Touch Dust Disposal

Not dirty hands



Image: The vacuum cleaner's dust cup being emptied into a trash bin with a single touch, showing the ease of hygienic waste disposal and washable/detachable filters.

Cleaning Filters:

The vacuum features a multi-stage filtration system including HEPA, stainless steel, and sponge filters. Clean regularly to maintain suction power.

1. Twist and remove the dust cup from the main motor unit.
2. Remove the HEPA filter, metal mesh filter, and sponge filter from the dust cup.
3. Tap filters gently to remove loose dust and debris.
4. Rinse the HEPA and metal mesh filters under running water. Do not immerse the main motor unit in water.
5. Allow all filters to air dry completely for at least 24 hours before reassembling. Ensure they are completely dry to prevent damage and maintain performance.

HOW TO CLEAN THE FILTER?



HOW TO CHECK OR CLEAN THE ROLLER BRUSH?



Image: Step-by-step visual guide on how to clean the vacuum's filter components and how to check and clean the roller brush, including warnings not to immerse the main unit or motorized brush in water.

Cleaning the Roller Brush:

The V-shaped anti-tangle roller brush is designed to minimize hair tangles, but occasional cleaning may be necessary.

1. Ensure the vacuum is turned off and disconnected from power.
2. Press the release button on the side of the motorized brush head to open the side cover.
3. Carefully remove the roller brush.
4. Use the provided hair cleaning tool to cut and remove any tangled hair or fibers from the brush.
5. Reinsert the clean roller brush and close the side cover until it clicks.

TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Low suction power	Dust cup is full, filters are clogged, or brush head is blocked.	Empty dust cup. Clean or replace filters. Check brush head for obstructions.
Brush head stops rotating	Hair or debris tangled in the roller brush.	Turn off vacuum and remove any obstructions from the roller brush.
Battery not charging	Charger not properly connected or faulty.	Ensure charger is securely plugged into both the outlet and the battery. Check for damage to the charger.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	BSNAW
Model Name	XL-613H
Special Features	Lightweight, Powerful Suction, Low-Noise, Extension Hose, High-efficiency Filtration, Flexible Head, Telescopic Tube, Large Capacity Dust Cup, Ideal for Hard Floors and Carpets, HEPA Filtration
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	1.2 Liters (Dust Cup)
Charging Time	4 Hours
Battery Life	Up to 45 minutes (Min Suction Mode)
Battery Description	Lithium-Ion (1 battery included)
Product Dimensions	30"L x 10"W x 15"H
Item Weight	6.74 pounds
Recommended Uses	Bed, Car, Pet Hair, Home, Sofa, Hard Floor, Carpet
Indoor/Outdoor Usage	Indoor, Outdoor

WARRANTY AND SUPPORT

We prioritize service with a lifetime customer service guarantee and exchange service. Enjoy a long-term warranty to maximize your satisfaction. For any issues with the vacuum cleaner, we are here to assist you. Please refer to your purchase documentation for specific warranty terms and contact information.