

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SKMEI](#) /
- › [SKMEI Men's Square Digital Watch Model 1858 User Manual](#)

SKMEI 1858

SKMEI Men's Square Digital Watch Model 1858 User Manual

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your SKMEI Model 1858 Digital Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

Package Contents

- SKMEI Model 1858 Digital Watch x 1
- SKMEI Original Box x 1
- User Manual x 1

PRODUCT OVERVIEW

The SKMEI Model 1858 is a multi-functional digital watch designed for daily wear and sports activities. It features a durable ABS case, resin glass, and a comfortable PU strap. Key functions include time display, stopwatch, countdown timer, multiple alarms, calendar, dual time, and EL backlight.



2 TIME



STOPWATCH



DATE / WEEK



EL LIGHT



COUNT DOWN



ALARM



WR 50M



12/24 HOUR

Figure 1: Key Features. This image highlights the main functionalities of the SKMEI 1858 watch, including dual time, stopwatch, date display, EL light, countdown timer, alarm, 50M water resistance, and 12/24 hour format.

Watch Components



Figure 2: Watch Components. This image provides a visual breakdown of the watch's main parts, such as the watch case, dial, band, mirror, clasp, and back cover.

Button Functions

FEATURE SET



Figure 3: Watch Button Layout. This diagram illustrates the location and primary function of each button on the SKMEI 1858 digital watch.

- **LIGHT Button:** Activates the EL backlight for visibility in low-light conditions.
- **MODE Button:** Cycles through different watch modes (Time, Stopwatch, Alarm, Countdown, Dual Time).
- **START/STOP Button:** Used to start and stop functions in Stopwatch and Countdown modes, and to adjust settings.
- **RESET Button:** Used to reset functions in Stopwatch and Countdown modes, and to adjust settings.

SETUP

Initial Time and Date Setting

1. In Timekeeping Mode, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START/STOP** button to adjust the flashing value. Hold the button to change values quickly.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

12/24 Hour Format

In Timekeeping Mode, press the **START/STOP** button to toggle between 12-hour (P for PM) and 24-hour formats.

OPERATING INSTRUCTIONS

Timekeeping Mode

This is the default mode, displaying the current time, day of the week, and date.

EL Backlight

Press the **LIGHT** button to illuminate the display for approximately 3 seconds. Frequent use of the backlight will reduce battery life.



Figure 4: EL Backlight Function. The image demonstrates the watch display in normal mode and with the EL backlight activated for improved visibility in dark conditions.

Stopwatch Mode

1. From Timekeeping Mode, press the **MODE** button once to enter Stopwatch Mode. The display will show "00:00:00".
2. Press the **START/STOP** button to start the stopwatch.

3. Press the **START/STOP** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to "00:00:00".
5. To record split times, press **START/STOP** to start, then **RESET** to display the split time. The stopwatch continues to run in the background. Press **RESET** again to return to the running stopwatch. Press **START/STOP** to stop, then **RESET** to clear.

Alarm Mode

The watch features 5 independent alarms and an hourly chime.

1. From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode. The alarm time will be displayed.
2. Press the **RESET** button to select the alarm number (AL1, AL2, etc.) or the hourly chime (CHM).
3. To set an alarm:
 - With the desired alarm selected, press the **START/STOP** button. The hour digits will flash.
 - Use the **RESET** button to adjust the hour.
 - Press the **START/STOP** button to move to the minute digits.
 - Use the **RESET** button to adjust the minutes.
 - Press the **START/STOP** button to confirm and exit setting.
4. To turn an alarm ON/OFF: In Alarm Mode, with the desired alarm selected, press the **START/STOP** button to toggle it on or off. An alarm icon will appear when active.
5. To turn the hourly chime ON/OFF: In Alarm Mode, select "CHM" and press the **START/STOP** button to toggle it on or off.

Countdown Timer Mode

1. From Timekeeping Mode, press the **MODE** button three times to enter Countdown Timer Mode. The display will show the set countdown time.
2. To set the countdown time:
 - Press the **START/STOP** button. The hour digits will flash.
 - Use the **RESET** button to adjust the hour.
 - Press the **START/STOP** button to move to the minute digits.
 - Use the **RESET** button to adjust the minutes.
 - Press the **START/STOP** button to confirm and exit setting.
3. To start/pause the countdown: Press the **RESET** button.
4. To reset the countdown: While paused, press the **START/STOP** button.

Dual Time Mode

This feature allows you to keep track of a second time zone.

1. From Timekeeping Mode, press the **MODE** button four times to enter Dual Time Mode.
2. To set the dual time:
 - Press the **START/STOP** button. The hour digits will flash.
 - Use the **RESET** button to adjust the hour.
 - Press the **START/STOP** button to move to the minute digits.
 - Use the **RESET** button to adjust the minutes.
 - Press the **START/STOP** button to confirm and exit setting.

Water Resistance (50M / 5ATM)

Your SKMEI 1858 watch is rated for 50 meters (5ATM) water resistance. This means it is suitable for daily use, hand washing, showering, and swimming. **However, please DO NOT press any buttons while the watch is submerged in water.** Avoid prolonged underwater activities such as diving, as this can compromise the water resistance.



Figure 5: Water Resistance Guide. This image illustrates the 50M water resistance of the watch, suitable for activities like hand washing, rain, sweating, and swimming, but warns against pressing buttons underwater.

Cleaning

Wipe the watch case and band regularly with a soft, dry cloth to remove dirt and moisture. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using chemical cleaners, which can damage the watch materials.

Battery Replacement

The watch uses a standard watch battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use for extended periods, store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not specified for this model). If the issue persists, a battery replacement or professional inspection may be needed.
- **Water inside the watch:** If mist or droplets appear inside the watch face, contact customer support immediately. This indicates a breach in water resistance. Avoid further water exposure.
- **Time is inaccurate:** Reset the time and date as per the "Initial Time and Date Setting" section. If inaccuracy persists, the watch module may require service.

SPECIFICATIONS

Feature	Detail
Brand	SKMEI
Model Number	1858
Movement	Digital Quartz
Case Material	ABS
Dial Window Material	Resin Glass
Band Material	PU (Polyurethane)
Water Resistance	50M (5ATM)
Functions	Time, Date, Day, Stopwatch, Countdown, 5 Alarms, Hourly Chime, Dual Time, EL Backlight, 12/24 Hour Format
Dial Case Width	3.9 cm (1.54 inch)
Dial Case Thickness	1.3 cm (0.51 inch)
Band Width	1.8 cm (0.71 inch)
Band Length	24 cm (9.45 inch)
Watch Weight	32 g (1.13 oz)



PRODUCT PARAMETER



Basic Information

BRAND: SKMEI

MODEL: 1858

WEIGHT: 42g

MOV' T: DIGITAL

CRYSTAL: GLASS

CASE : ABS

BAND : PU

BUCKLE: STAINLESS STEEL

W / P : 50M

FUNCTION: 2Time, Chrono, Alarm, Date, Week, LED Light, 12/24 hour clock, Countdown.



Case width: 37mm



Case thickness: 12mm



Band Width: 20mm



Watch length: 250m

Figure 6: Product Dimensions. This diagram provides detailed measurements for the watch case width, case thickness, band width, and total watch length.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.