

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [innioasis](#) /

› [innioasis G3 160GB MP3 Player with Bluetooth and WiFi User Manual](#)

innioasis G3

innioasis G3 160GB MP3 Player User Manual

Model: G3

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your innioasis G3 160GB MP3 Player. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

2. WHAT'S IN THE Box

- Mp3 player x 1
- 128GB SD card x1
- USB-C cable x 1
- Wired headphones x 1
- User manual x 1

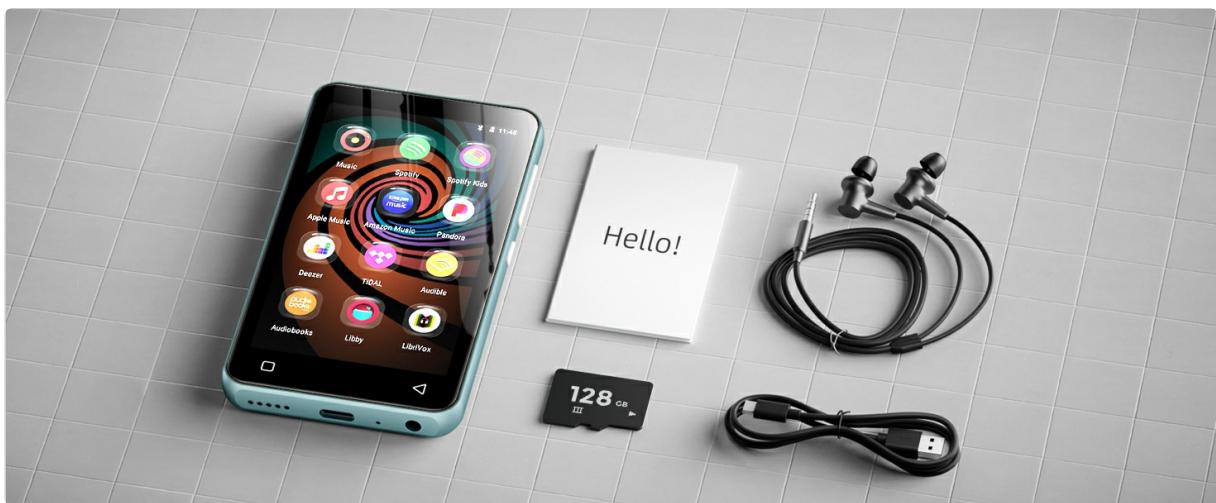


Figure 2.1: Included components with the innioasis G3 MP3 Player.

3. SETUP

3.1. Charging the Device

Connect the provided USB-C cable to the device's USB-C port and the other end to a compatible USB power adapter or computer. The device features a 1500mAh battery, providing up to 25 hours of continuous music playback with wired earphones or 5 hours of video on a single charge. A full charge typically takes about 2 hours.



Figure 3.1: USB-C charging port and 3.5mm audio output.

3.2. Inserting the SD Card

The device comes with a pre-installed 128GB SD card. The expansion slot supports up to 1TB for additional storage. To insert or replace an SD card, locate the card slot on the side of the device and gently push the card until it clicks into place.

Ample Space - Keep all your songs

Comes with 160GB storage, expandable to 1TB.
Carry your entire media library everywhere.



Figure 3.2: Storage capacity overview and SD card slot.

3.3. Connecting to Wi-Fi

The innioasis G3 supports Dual-Band Wi-Fi (2.4GHz & 5GHz). To connect:

1. Go to **Settings**.
2. Select **Network & Internet**.
3. Toggle Wi-Fi **On**.
4. Select your desired Wi-Fi network and enter the password if prompted.

3.4. Connecting to Bluetooth Devices

The device features Bluetooth 4.2 with two-way sending for connecting to wireless headphones, speakers, or car audio systems. To connect:

1. Go to **Settings**.
2. Select **Connected Devices**.
3. Toggle Bluetooth **On**.
4. Select **Pair new device** and choose your device from the list.

Wider and Stable Bluetooth Connect

Two-way connection tech for wider, stable connections to your Bluetooth devices.



Figure 3.3: Bluetooth connectivity for audio output.

4. OPERATING INSTRUCTIONS

4.1. Basic Navigation

The device features a 4-inch HD touchscreen for easy navigation. Swipe left or right to access different app screens. Use the on-screen navigation buttons (Home, Back, Recent Apps) at the bottom of the display.



Figure 4.1: Device interface with app icons.

4.2. Music Playback

The MP3 player supports a wide range of audio formats (MP3, WAV, FLAC, AAC, APE, OGG, M4A, WMA, MP2, etc.) and comes pre-installed with popular music apps like Spotify, Amazon Music, Apple Music, Pandora, Tidal, and Deezer.

- **Local Music:** Use the pre-installed 'Music' app to scan and import your entire library, create custom playlists, and search for songs.
- **Streaming Apps:** Open any pre-installed streaming app, log in with your account, and enjoy online music via Wi-Fi.

Powerful Local Music Player APP

Support Format: MP3, WAV, FLAC, AAC, APE, OGG, M4A, WMA, MP2



Figure 4.2: Local music player interface and features.

4.3. Audiobook Playback

The device comes pre-loaded with audiobook apps such as Audible, Libby, and Audiobooks. Launch the desired app, log in, and access your audiobook library.

Get Lost in a Story

Listen to your favorite stories anytime, anywhere.



Figure 4.3: Audiobook listening experience.

4.4. Video Playback

The 4-inch HD touchscreen supports 720p or 1080p video playback. Compatible formats include AVI, MKV, MP4, MPEG, MOV, VOB, WMV, WEBM, DIVX, F4V, FLV, Xvid, 3GP, etc. Transfer video files to the device's internal storage or SD card and access them via the 'Videos' app.

1080P HD Video Player

Compatible formats: AVI, MKV, MP4, MPEG, MOV, VOB, WMV, WEBM, DIVX, F4V, FLV, XviD, 3GP, etc.



Figure 4.4: Video playback on the device.

4.5. App Management and Parental Controls

You can install new apps and update existing ones. The parental control feature requires your approval before any app can be downloaded. Apps that require Google Play services (e.g., YouTube, YouTube Music) are not supported. You can also easily uninstall apps to free up space.

1. **To Manage Apps:** Go to **Settings > Apps & notifications**.
2. **Parental Controls:** Access **Settings > Parental control** to set a password and manage app installation permissions.

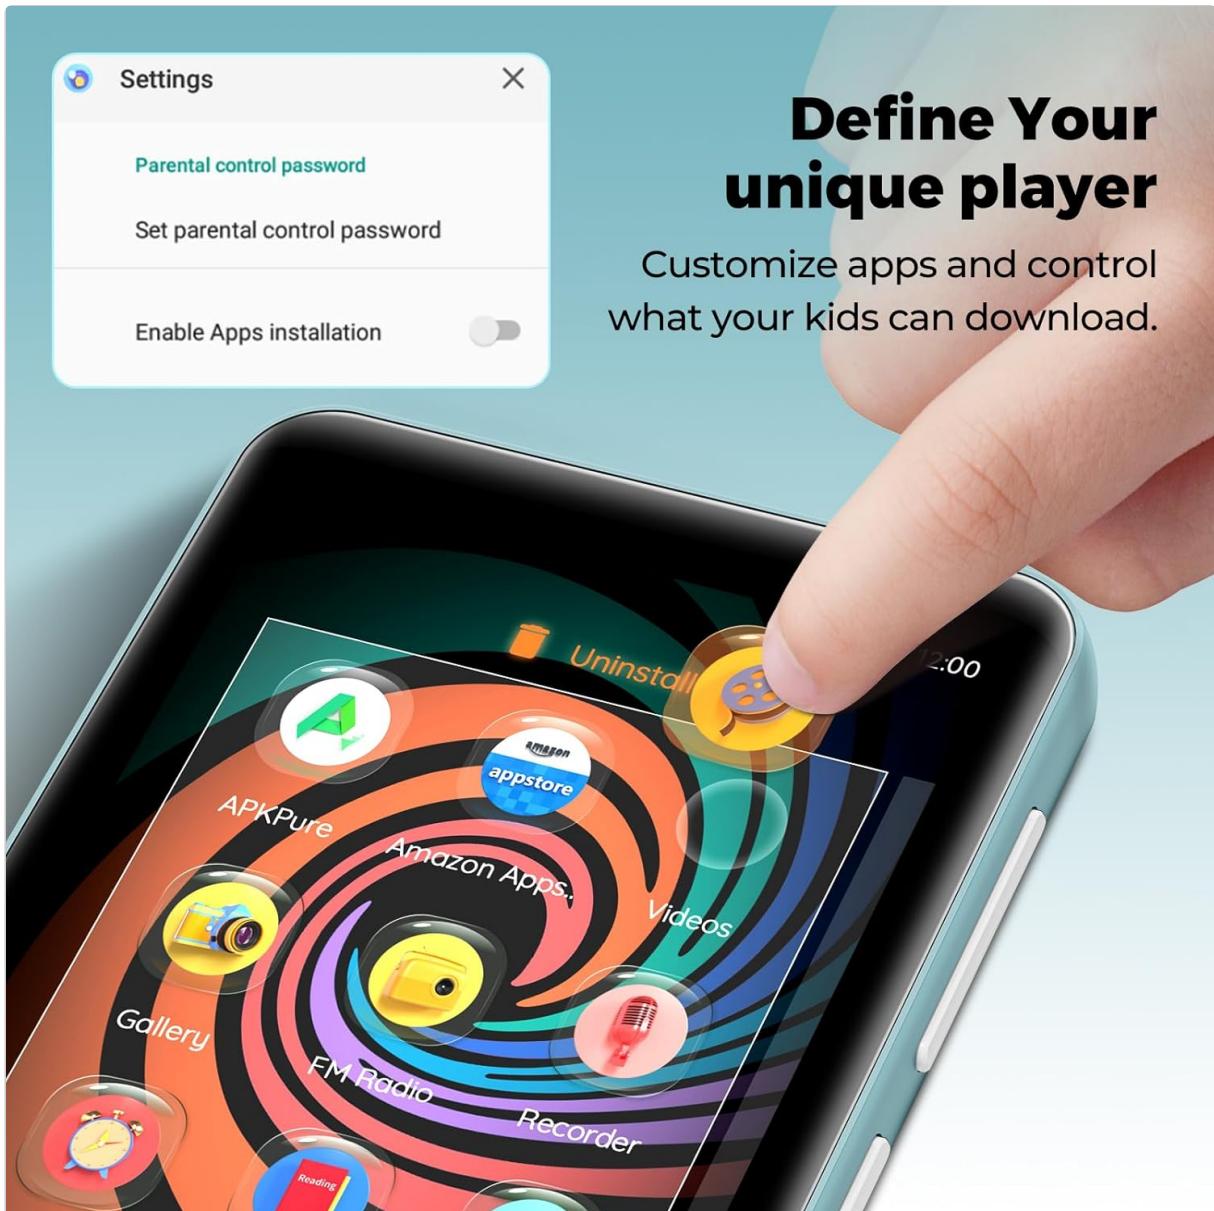


Figure 4.5: Parental control settings interface.

4.6. Other Applets

The device includes a collection of handy apps such as FM radio, e-book reader, voice recorder, file manager, clock, calendar, and calculator.

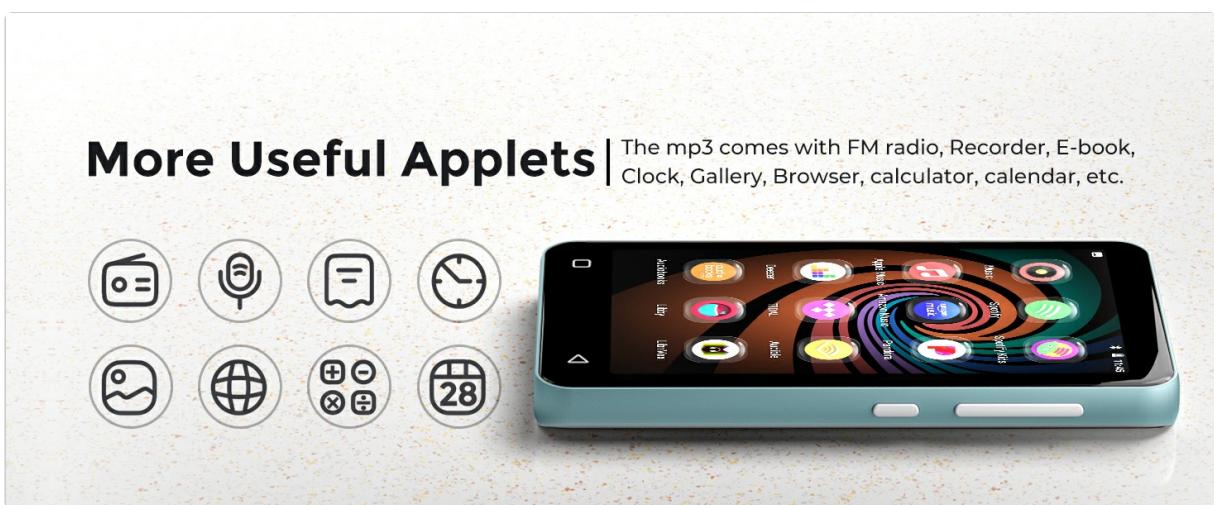


Figure 4.6: Overview of additional utility apps.

5. SPECIFICATIONS

Feature	Detail
Product Dimensions	0.39 x 2.36 x 4.33 inches
Item Weight	0.018 ounces
Item Model Number	G3
Batteries	1 Lithium Ion batteries required (included)
Brand	innioasis
Model Name	G3
Special Features	Equalizer, FM Radio, Hi-Res Audio, Video Playback, Voice Recorder
Connectivity Technology	Bluetooth, USB, Wi-Fi
Memory Storage Capacity	160 GB (32GB internal + 128GB SD card)
Screen Size	4 Inches
Media Type	Micro SD, Micro SDHC, Micro SDXC, SD Card, SDHC
Display Technology	LCD

6. MAINTENANCE

6.1. General Care

- Keep the device dry and away from extreme temperatures.
- Clean the screen with a soft, lint-free cloth. Avoid abrasive materials.
- Avoid dropping the device or subjecting it to strong impacts.

6.2. Battery Care

- Charge the device regularly, but avoid leaving it fully charged or fully discharged for extended periods.
- Use only the provided USB-C cable for charging.

7. TROUBLESHOOTING

7.1. Device Not Turning On

- Ensure the device is sufficiently charged. Connect it to a power source for at least 15 minutes before attempting to turn it on again.
- Press and hold the power button for 10-15 seconds to perform a forced restart.

7.2. Unable to Connect to Wi-Fi/Bluetooth

- Verify that Wi-Fi/Bluetooth is enabled in the device settings.
- Ensure the network password is correct for Wi-Fi.
- For Bluetooth, ensure the target device is in pairing mode and within range.
- Restart both the MP3 player and the Wi-Fi router/Bluetooth device.

7.3. Apps Not Functioning Correctly

- Ensure the device has a stable internet connection if the app requires it.

- Clear the app's cache: Go to **Settings > Apps & notifications**, select the app, then **Storage & cache**, and tap **Clear cache**.
- Note that apps requiring Google Play services are not supported on this device.

8. WARRANTY AND SUPPORT

All innioasis Bluetooth music players are backed by a 1-year warranty. For any inquiries or support needs, please contact our customer service team, available for 12 hours to ensure your complete satisfaction.

Related Documents - G3

<p>Hello!</p>	<p><u>INNIOASIS G1 Digital Music Player User Guide</u> Comprehensive user guide for the INNIOASIS G1 Digital Music Player, covering setup, features, app usage (Music, Video, Gallery, Ebook, Recorder, FM Radio, Clock, File Transfer), settings, troubleshooting, specifications, and warranty.</p>
	<p><u>Innioasis S1 MP3 Player User Manual</u> User manual for the Innioasis S1 MP3 Player, covering features like music playback, video, e-books, FM radio, file management, and device settings. Includes specifications and warranty information.</p>
<p>Hello!</p>	<p><u>INNIOASIS G1 Digital Music Player User Manual</u> Comprehensive user manual for the INNIOASIS G1 Digital Music Player (Model: 2A6DB-G1). Learn about device buttons, ports, file transfer methods from Windows, macOS, Android, and iOS, and explore the features of the Music app, including song management and playback options.</p>
	<p><u>Innioasis G1 Digital Music Player - Product Overview and Compliance</u> Discover the Innioasis G1, a versatile Digital Music Player. This document provides an overview of its features, specifications, and compliance certifications, including FCC and Canadian standards, ensuring quality and safety.</p>
<p>Hello!</p> <p>Y1_V5.1</p>	<p><u>INNIOASIS Y1 MP3 Music Player User Manual and Guide</u> Comprehensive user manual for the INNIOASIS Y1 MP3 Music Player, covering features like music playback, audiobooks, photos, FM radio, Bluetooth, settings, and troubleshooting. Learn how to transfer music, manage playlists, and use all device functions.</p>

Hello!

[INNIOASIS Y1 MP3 Music Player User Manual](#)

This user manual provides comprehensive instructions for operating the INNIOASIS Y1 MP3 Music Player, covering features like music playback, audiobooks, FM radio, photo viewing, Bluetooth connectivity, and settings.

Y1_V5.30