

XINLEI ML5C

XINLEI Easel Rolling TV Stand ML5C Instruction Manual

Model: ML5C | Brand: XINLEI

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your XINLEI Easel Rolling TV Stand ML5C. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.

2. SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or faulty.
- Do not exceed the maximum weight capacity of 121 lbs (55 kg).
- Ensure your TV's VESA mounting pattern is within the supported range of 100x100mm to 600x400mm.
- Always use the locking casters when the TV stand is in its desired position to prevent accidental movement.
- Distribute weight evenly on the wooden shelf.
- Keep children and pets away from the TV stand during assembly and when moving it.
- Avoid placing the TV stand on uneven surfaces.

3. PACKAGE CONTENTS

Verify that all parts are included in your package:

- Main support frame components (metal poles)
- TV mounting brackets
- Wooden storage shelf
- Lockable rolling casters (wheels)
- Assembly hardware (screws, washers, nuts)
- Tools for assembly (e.g., Allen wrench)
- Instruction manual



Image: All components of the XINLEI Easel Rolling TV Stand laid out after unboxing.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your TV stand. It is recommended to have two people for certain steps, especially when mounting the TV.

1. **Attach Casters:** Securely attach the lockable rolling casters to the base of the stand using the provided hardware. Ensure they are tightened to prevent wobbling.
2. **Assemble Base Frame:** Connect the main metal poles to form the easel-style base. Refer to the diagrams for correct orientation.
3. **Install Wooden Shelf:** Attach the wooden storage shelf to the designated points on the frame. Ensure it is level and securely fastened.
4. **Attach TV Mounting Brackets:** Secure the TV mounting brackets to the back of your television. Choose the appropriate screws and spacers for your TV's VESA pattern. Ensure the brackets are centered and level.
5. **Mount TV to Stand:** With assistance, carefully lift your television and hook the attached mounting brackets onto the main vertical support of the TV stand. Secure the TV using the safety screws or locking mechanisms on the brackets.
6. **Adjust Height:** The stand offers 6 height adjustment options. Loosen the adjustment screws, raise or lower the TV to your desired viewing height (between 43.7" to 59.06" from floor to top of bracket), and re-tighten the screws firmly.

Your browser does not support the video tag.

Video: Detailed installation guide for the XINLEI Easel Rolling TV Stand ML5C, demonstrating step-by-step assembly.

2 Installation Options



Image: Illustration showing two different height configurations for the TV stand, one with an optional center tube for increased height.

3 Height Adjustable

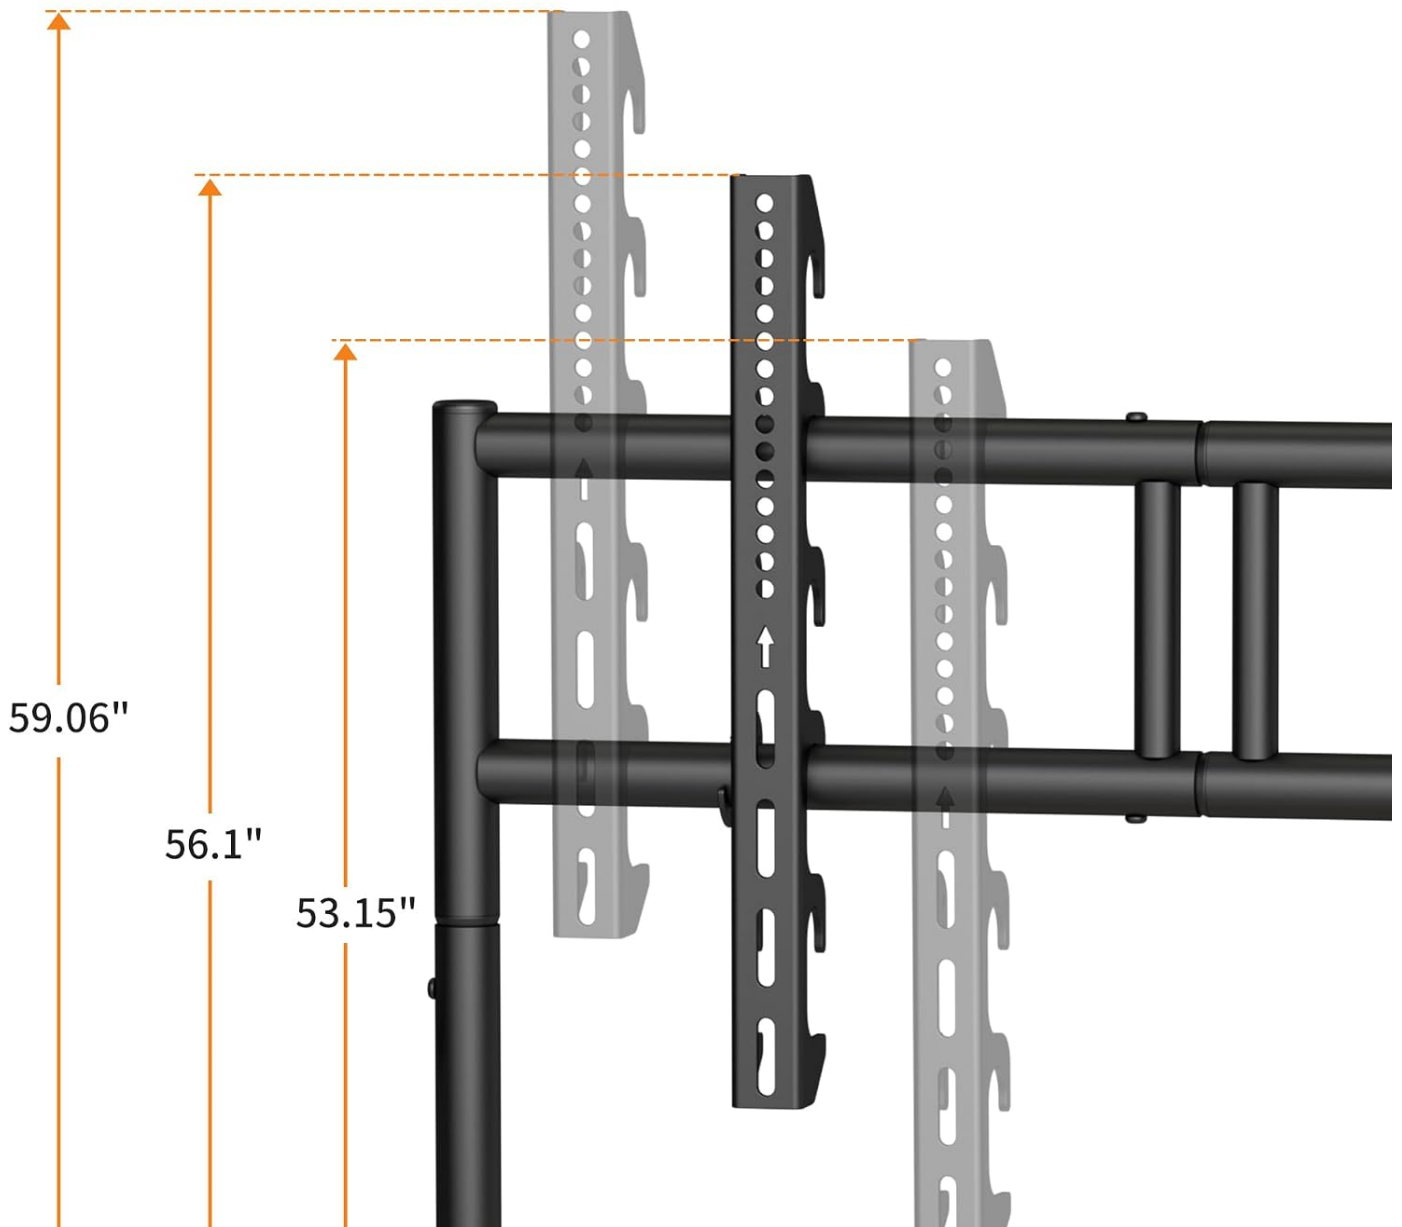


Image: Detail of the TV stand's vertical support, highlighting the three adjustable height settings for the TV mounting brackets.

5. OPERATING INSTRUCTIONS

Moving the TV Stand

- To move the stand, unlock all four casters by flipping their respective levers.
- Gently push or pull the stand to its new location. Avoid sudden jerks or excessive force.
- Once in position, lock all four casters to ensure stability and prevent unintended movement.

Move to Anywhere



Image: The TV stand with a television mounted, shown being effortlessly rolled across a room, emphasizing its mobility.

Using the Storage Shelf

The integrated wooden shelf provides convenient storage for media players, gaming consoles, remote controls, or decorative items. Ensure items placed on the shelf do not exceed its weight capacity and are stable.



Image: A close-up of the wooden storage tray, displaying a gaming console, remote controls, and a laptop, demonstrating its utility.

6. MAINTENANCE

- **Cleaning:** Wipe down the metal frame and wooden shelf with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Caster Care:** Keep the casters free of debris (hair, dust, etc.) to ensure smooth rolling.
- **Storage:** If storing the stand for an extended period, ensure it is clean and dry. Store in a cool, dry place.

7. TROUBLESHOOTING

- **Stand is Wobbly:** Check all assembly screws and ensure they are tightened. Verify the casters are locked when stationary. Ensure the TV is properly seated on the mounting brackets.
- **Difficulty Rolling:** Check casters for debris and clean if necessary. Ensure casters are unlocked.

- **TV Not Level:** Adjust the TV mounting brackets to ensure the TV is level. Some TVs may require minor adjustments to the bracket placement.
- **Ports Blocked by Brackets:** If the mounting brackets interfere with TV ports, ensure you have selected the correct VESA mounting holes. Some TVs may require specific bracket configurations or spacers (not included) to clear ports.

8. SPECIFICATIONS

Feature	Detail
Brand	XINLEI
Model	ML5C
Mounting Type	Floor Mount
Movement Type	Rolling
Material	Metal, Wood (shelf)
Color	Black Easel
Compatible TV Sizes	32 - 80 inches
Maximum Weight Capacity	121 lbs (55 kg)
VESA Compatibility	100x100mm - 600x400mm
Height Adjustment Range	43.7 - 59.06 inches (floor to top of bracket)



TV Size

32"-80"



121lbs

Weight Capacity

55kg
121lbs



VESA

VESA

Max
600x400mm



Image: A visual representation of the TV stand's specifications, including supported TV sizes, weight capacity, VESA mounting patterns, and overall dimensions.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official XINLEI website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question