



[Manuals.plus](#) /

› [R.W.FLAME](#) /

› R.W.FLAME 1500W Ceramic Space Heater (Model 36016HSH1) Instruction Manual

R.W.FLAME 36016HSH1

R.W.FLAME 1500W Ceramic Space Heater (Model 36016HSH1) Instruction Manual

Brand: R.W.FLAME | Model: 36016HSH1

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your R.W.FLAME 1500W Ceramic Space Heater. Please read all instructions carefully before use and retain this manual for future reference.



Image: Front view of the R.W.FLAME 1500W Ceramic Space Heater.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- This appliance is ETL certified, ensuring it meets recognized safety standards.
- Constructed with flame-retardant materials for enhanced safety.
- **Overheat Protection:** The heater is equipped with an automatic shut-off feature that activates if the internal temperature becomes too high.
- **Tip-Over Protection:** For your safety, the heater will automatically turn off if it is accidentally tipped over. Ensure the heater is placed on a stable, flat surface.
- Do not cover the heater or block air inlets/outlets.
- Keep flammable materials at least 3 feet (0.9 meters) away from the heater.
- Do not use in wet or moist locations like bathrooms without proper ventilation.



Image: Visual representation of the heater's safety features including tip-over and overheat protection, ETL certification, and flame-retardant materials.

PRODUCT FEATURES

- **PTC Ceramic Heating:** Utilizes advanced PTC ceramic heating technology for rapid and efficient warmth.
- **Fast Heating:** Delivers heat within 2 seconds of activation.
- **Wide Coverage:** Features a 75° curved air outlet to quickly and evenly distribute heat across areas of 108-130 sq.ft.
- **Multiple Modes:** Offers low heat (950W), high heat (1500W), and a fan-only mode for year-round use.
- **Adjustable Thermostat:** Allows precise temperature control to maintain your desired comfort level.
- **Compact Design:** Measures approximately 6.22 x 6.22 x 8.78 inches and weighs about 3.53 pounds, making it highly portable.
- **Built-in Handle:** Integrated handle for easy and safe transportation.
- **Quiet Operation:** Operates at a low noise level, typically below 35dB, ensuring a peaceful environment.
- **Energy Efficient:** PTC ceramic technology is designed to be more energy-efficient than traditional heating methods.



Image: The heater in an office setting, illustrating its rapid heating, wide air outlet, and heating area capabilities.

Powerful Warmth, Powerful Warmth, Low Noise



Image: The heater operating quietly in a bedroom, emphasizing its low noise level for undisturbed sleep.

SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for storage if needed.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 meters) of clear space around the heater to allow for proper airflow and prevent fire hazards. Do not place on soft surfaces like beds or rugs where openings may be blocked.
3. **Power Connection:** Plug the 6 ft power cord directly into a 115V AC electrical outlet. Do not use extension cords or power strips.

OPERATING INSTRUCTIONS

The R.W.FLAME space heater features two simple knob controls on the top for easy operation.

Easy to Use



Image: Close-up of the heater's top panel, indicating the manual knob controls and the power indicator light.

1. Power On/Off and Mode Selection:

- Locate the right knob (Mode Selector).
- Turn the knob to 'OFF' to ensure the unit is off before plugging in.
- Turn the knob to the fan icon for cool air circulation (fan-only mode).
- Turn the knob to 'LO' for low heat (950W).
- Turn the knob to 'HI' for high heat (1500W).

2. Adjusting Thermostat:

- Locate the left knob (Thermostat Control).
- Rotate the knob from 'MIN' to 'MAX' to set your desired temperature. The heater will cycle on and off to maintain this temperature.
- For initial use, set the thermostat to 'MAX' and allow the room to warm up. Once comfortable, slowly turn the knob towards 'MIN' until the heater turns off. Leave the knob in this position; the heater will automatically maintain this temperature.

3. **Indicator Light:** A red indicator light on the front of the heater illuminates when the unit is powered on and operating.



Image: The heater demonstrating its multiple heat settings and fan-only mode for versatile use.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or allow water to drip into the interior of the heater.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
- **Air Intake/Outlet:** Periodically check the air intake and outlet for dust or debris. Use a vacuum cleaner with a brush attachment to gently clean these areas.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in, power switch off, tip-over switch activated, or overheat protection activated.	Ensure power cord is securely plugged into a 115V outlet. Check mode selector knob is not on 'OFF'. Ensure heater is upright on a flat surface. If overheated, unplug and allow to cool for 30 minutes before restarting.
No heat, only fan operates.	Mode selector set to fan-only mode.	Turn the mode selector knob to 'LO' or 'HI' for heating.
Heater turns off unexpectedly.	Overheat protection or tip-over protection activated.	Check for obstructions around the heater. Ensure it is on a stable, level surface. Unplug and allow to cool if overheat protection was triggered.
Reduced heat output.	Blocked air intake/outlet or thermostat set too low.	Clean air intake/outlet. Adjust the thermostat to a higher setting.

SPECIFICATIONS

Feature	Detail
Brand	R.W.FLAME
Model Number	36016HSH1
Special Feature	Adjustable Temperature, Fast Heating
Color	Black
Form Factor	Cabinet
Indoor/Outdoor Usage	Indoor
Product Dimensions (D x W x H)	6.5" x 6.5" x 10.43"
Recommended Uses	Desk/Table Top
Mounting Type	Tabletop Mount
Room Type	Bathroom, Bedroom
Heating Coverage	108-130 Sq.ft
Burner Type	Ceramic
Fuel Type	Electric
Number of Speeds	2 (Low/High Heat) + Fan-only
Voltage	115 Volts
Item Weight	3.47 pounds

OFFICIAL PRODUCT VIDEOS

Portable Electric Heater: Fast Heating for Home & Office Use

Your browser does not support the video tag.

Video: An overview of the R.W.FLAME Portable Electric Heater, demonstrating its fast heating capabilities suitable for home and office environments. This video highlights the product's efficiency and ease of use.

R.W.Flame 1500W Space Heater

Your browser does not support the video tag.

Video: A demonstration of the R.W.FLAME 1500W Space Heater, showcasing its features and operation. This video provides a closer look at the product's design and functionality.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact information provided in your product packaging or visit the official R.W.FLAME website.

Manufacturer: R.W.FLAME